Manualslib.com - Simplified Manuals

JVC AV-14A3 SERVICE MANUAL

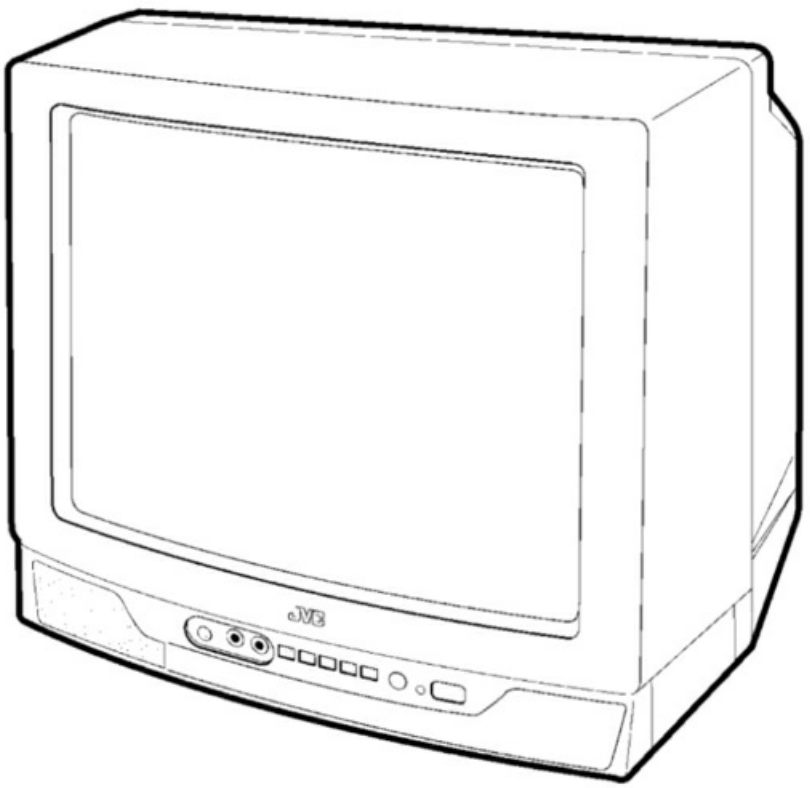

AV-14A3
AV-1415EE
AV-14AMG3

JVC

SERVICE MANUAL

COLOUR TELEVISION

BASIC CHASSIS
CG

AV-14A3 / AV-14A3/AU
AV-14A3/HK / AV-1415EE
AV-14AMG3 / AV-14AMG3/-A

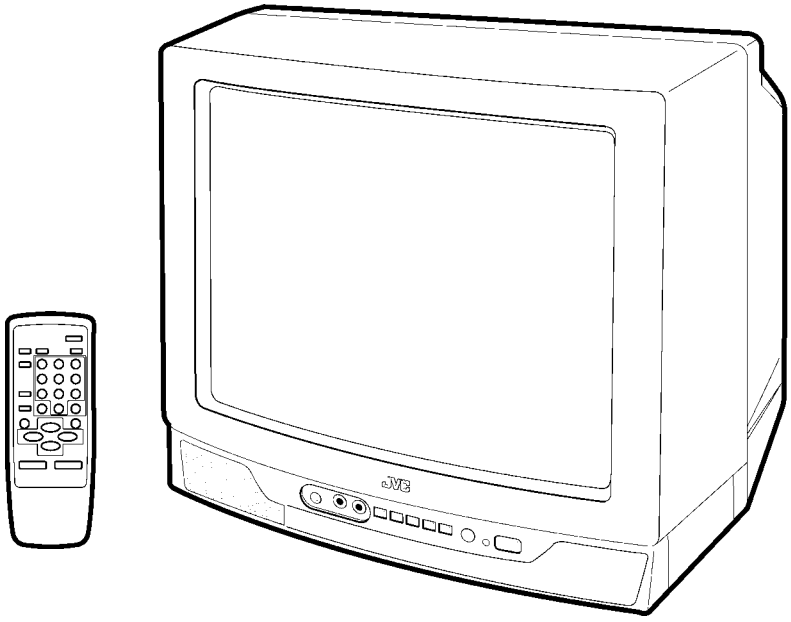

CONTENTS

■ SPECIFICATIONS ····· 2
■ SAFETY PRECAUTIONS ····· 3
■ FEATURES ····· 4
■ FUNCTIONS ····· 5
■ MAIN DIFFERENCE LIST ····· 7
■ SPECIFIC SERVICE INSTRUCTIONS ····· 8
■ SERVICE ADJUSTMENTS ····· 15
■ PARTS LIST ····· 33
★ OPERATING INSTRUCTIONS
★ STANDARD CIRCUIT DIAGRAM ····· 2-1

COPYRIGHT © 2002 VICTOR COMPANY OF JAPAN, LTD.

No. 52029
Jul. 2002

AV-14A3
AV-1415EE
AV-14AMG3

SPECIFIC SERVICE INSTRUCTIONS

DISASSEMBLY PROCEDURE

REMOVING THE REAR COVER

1. Unplug the power plug.
2. As shown in figure, remove the **5** screws marked Ⓐ and a screw marked Ⓑ .
3. Withdraw the rear cover toward you.

[CAUTION]

- When reinstalling the rear cover, carefully push it inward after inserting the MAIN PWB into the rear cover groove.

REMOVING THE MAIN PW BOARD

- After removing the rear cover.

1. Slightly raise the both sides of the MAIN PW BOARD by hand and remove the PWB stopper marked Ⓒ from the front cabinet.
2. Withdraw the MAIN PW BOARD backward.
   (If necessary, take off the wire clamp, connectors etc.)

REMOVING THE SPEAKER

- After removing the rear cover.

1. By holding up the SPEAKER HOLDER marked Ⓓ slightly and unlocking the claw, the SPEAKER HOLDER can be removed. Then you can remove the SPEAKER.

CHECKING THE MAIN PW BOARD

1. To check the back side of the PW Board.
   1) Pull out the MAIN PW Board. (Refer to REMOVING THE MAIN PW Board)
   2) Erect the PW Board vertically so that you can easily check the back side of the PW Board.

[CAUTION]

- When erecting the PW Board, be careful so that there will be no contacting with other PW Board.
- Before turning on power, make sure that the CRT earth wire and other connector are properly connected.

WIRE CLAMPING AND CABLE TYING

1. Be sure to clamp the wire.
2. Never remove the cable tie used for tying the wires together.
   Should it be inadvertently removed, be sure to tie the wires with a new cable tie.

AV-14A3
AV-1415EE
AV-14AMG3

REPLACEMENT OF MEMORY ICs

1. MEMORY ICs

This model uses memory ICs. This memory IC data are for proper operation of the video and deflection circuits.
When replacing memory ICs, be sure to use ICs written with the initial values of data.

2. PROCEDURE FOR REPLACING MEMORY ICs

(1) Power off

Switch the power off and disconnect the power plug from the wall outlet.

(2) Replace ICs

Be sure to use memory ICs written with the initial data values.

(3) Power on

Connect the power plug into the wall outlet and switch the power on.

(4) Check and set SYSTEM CONSTANT SET

• It must not adjust without adjustment signals.

1) Press the **DISPLAY** key and the **PICTURE MODE** key of the REMOTE CONTROL UNIT simultaneously.
2) The SERVICE MENU screen of Fig. 1 will be displayed.
3) While the SERVICE MENU is displayed, again press the **DISPLAY** key and **PICTURE MODE** key simultaneously, and the SYSTEM CONSTANT SET screen of Fig. 2 will be displayed.
4) Check the setting values of the SYSTEM CONSTANT SET of Table 1. If the value is different, select the setting item with the **MENU** ▼/▲key, and set the correct value with the **MENU** - / + key.
5) Press the **DISPLAY** key twice, and return to the normal screen.

(5) Receive channel of setting

Refer to the **OPERATING INSTRUCTIONS** and set the receive channels (channels preset) as described

(6) User Setting

Check the user setting value of Table 2, and if setting value is different, set the correct value.

For setting, refer to the **OPERATING INSTRUCTIONS**.

(7) Setting of SERVICE MENU

Verify the setting items of the SERVICE MENU, and reset where necessary.

For setting, refer to the **SERVICE ADJUSTMENTS**.

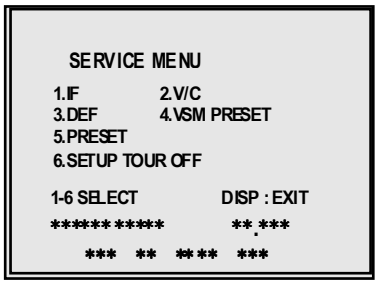

Fig.1

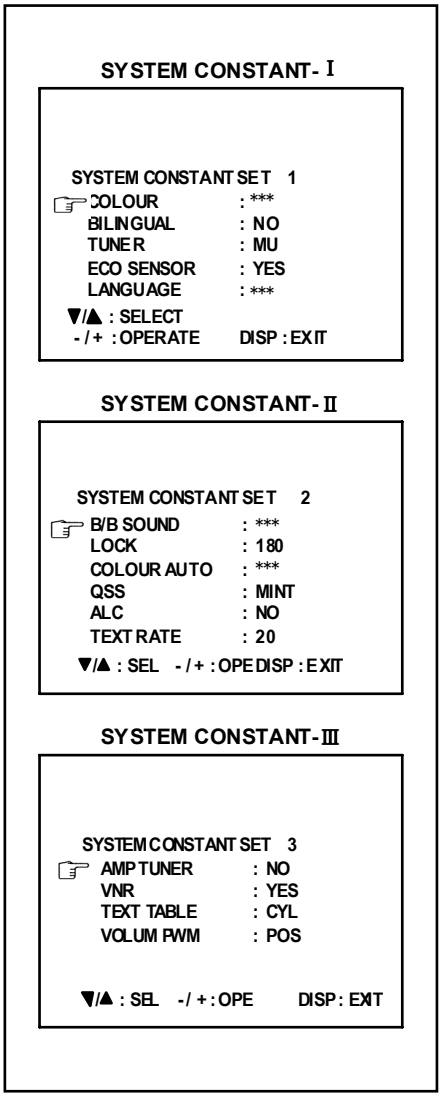
SYSTEM CONSTANT- Ⅰ
SYSTEM CONSTANT SET 1
COLOUR : ***
BILINGUAL : NO
TUNER : MU
ECO SENSOR : YES
LANGUAGE : ***
▼/▲ : SELECT
- / + : OPERATE DISP : EXIT
SYSTEM CONSTANT- Ⅱ
SYSTEM CONSTANT SET 2
B/B SOUND : ***
LOCK : 180
COLOUR AUTO : ***
QSS : MINT
ALC : NO
TEXT RATE : 20
▼/▲ : SEL - / + : OPE DISP : EXIT
SYSTEM CONSTANT- Ⅲ
SYSTEM CONSTANT SET 3
AMP TUNER : NO
VNR : YES
TEXT TABLE : CYL
VOLUM PWM : POS
▼/▲ : SEL - / + : OPE DISP : EXIT

Fig.2

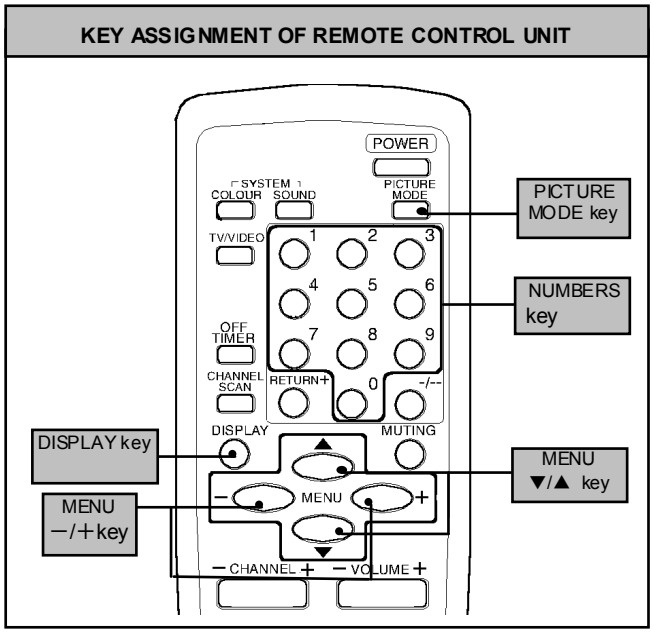

SETTING OF SYSTEM CONSTANT SET

Setting item	Setting contents	Setting value					
		AV-14A3	AV-14A3/AU	AV-14A3/HK	AV-1415EE	AV-14AMG3	AV-14AMG3/-A
COLOUR	MULTI. → TRIPLE → PAL	TRIPLE	←	←	←	MULTI.	←
BILINGUAL	YES → NO	NO	←	←	←	←	←
TUNER	MU → MA	MU	←	←	←	←	←
AI ECO SENSOR	YES → NO	NO	←	←	←	←	←
LANGUAGE	E/R/A/P → E/C → E/R → E/C/M/I → E/R/U →	E/R	E/C/M/I	E/C	E/R/U	E/R/A/P	←
B/B SOUND	ON → OFF	OFF	←	←	←	←	ON
LOCK	YES ↔ 10 ↔ 20 ↔ ～ ↔ 230 ↔ 240 ↔ 250	180	←	←	←	←	←
COLOUR AUTO	YES → NO	NO	←	←	←	←	YES
QSS	MINT → MQSS	MINT	←	←	←	←	←
ALC	YES → NO	NO	←	←	←	←	←
TEXT RATE	10 ↔ 20 ↔ 40 ↔ 80	20	←	←	←	←	←
AMP TUNER	YES → NO	NO	←	←	←	←	←
VNR	YES → NO	YES	←	←	←	←	←
TEXT TABLE	ARA → CYL	CYL	←	←	←	←	←
VOLUM PWM	POS → NEG	POS	←	←	←	←	←

Table 1

USER SETTING VALUES

Setting item	Setting value	Setting item	Setting value
SUB POWER	ON	LANGUAGE	ENGLISH
CHANNEL POSITION	1 POSITION	CHANNEL PRESET	Refer to OPERATING INSTRUCTION
VOLUME	About 10	SETUP TOUR	ON
TV/VIDEO	TV	VNR	OFF
ON SCREEN DISPLAY	POSITION INDICATION	AUTO SHUTOFF	OFF
COLOUR SYSTEM	PAL	ON TIMER	PR1 0:00
SOUND SYSTEM	B / G	BLUE BACK	OFF
OFF TIMER	OFF OSD. Shows 00	CHILD LOCK	OFF
PICTURE MODE (VSM)	BRIGHT		

Table 2

AV-14A3
AV-1415EE
AV-14AMG3

INITIAL SETTING VALUE OF SERVICE MENU

1. Adjustment of the SERVICE MENU is made on the basis of the initial setting values ; however, the new setting values which set the screen in its optimum condition may differ from the initial setting.
2. Do not change the initial Setting Values of the Setting (Adjustment) items not listed In "ADJUSTMENT".

2. V/C

Setting item \ Colour system		Variable range	Initial setting value			
			PAL	SECAM	NTSC 3.58	NTSC 4.43
1. CUT OFF	RED / GREEN / BLUE	-128～+127	-50	←	←	←
2. DRIVE	RED / BLUE	-128～+127	0	←	←	←
3. BRIGHT		-127～+127	0	←	←	←
4. CONT.		-63～+63	0	←	←	←
5. COLOUR		-63～+63	0	←	←	←
6. TINT	TV	-63～+63	—	—	0	0
	VIDEO (AV-14A3, AV-14A3/AU, AV-14A3/HK, AV-1415EE)		—	—	0	0
	VIDEO (AV-14AMG3, AV-14AMG3/-A)		—	—	+5	0
7. SECAM BL ADJ.		-31～+31	0	←	←	←
8. SHARP Do Not Adj.	TV	-32～+31	- 17(Fixed)	←	←	←
	VIDEO		+10(Fixed)			

3. DEFLECTION

Setting item	Variable range	Initial setting value	
		fv : 50Hz MODE	fv : 60Hz MODE
1. VER. POSITION	-04 ～ +03	0	- 3
2. HOR. POSITION	-16 ～ +15	+1	+ 4
3. VER. HEIGHT	-64 ～ +63	-20	- 2
4. VER. LINEARITY	-32 ～ +31	+15	0
5. VER. SWCURVE	-32 ～ +31	-32	0
6. HOR. VCO ADJUST Do Not Adj.	-63 ～ +62	0	0

4.VSM PRESET

VSM preset mode / VSM Setting item	BRIGHT	STANDARD	SOFT
TINT SETTING VALUE	+15	←	←
COLOUR SETTING VALUE	+15	←	←
BRIGHT SETTING VALUE	+15	←	←
CONT. SETTING VALUE	+30	+15	+13
SHARP SETTING VALUE	+15	←	+12

5. PRESET

The items in the following table, it is no requirement for adjustment.
If values had changed by the miss operation, set the initial setting values in the following table.

Colour System **Do Not Adjust**

Setting item		Initial setting value (Fixed value)			
		PAL	SECAM	NTSC 3.58	NTSC 4.43
1. C TRAP FIX		1	1	1	1
2. SHARP PEAK		0	0	0	0
3. ABL		1	1	1	1
4. GAMMA		0	0	0	0
5. Y. DELAY TIME	TV	0	2	2	3
	VIDEO	0	2	0	2
6. BLACK EXP START		+3	+3	+3	+3
7. C-BPF	TV	1	1	0	0
	VIDEO	1	1	1	1
8. CW / SCP		0	0	0	0
9. VIF DET LEVEL		0	0	0	0
11. IF AGC MIN		0	0	0	0
12. VIF AGC		0	0	0	0
13. VIF PMOD		0	0	0	0
19. VNR		15	15	15	15
20. RGB LIM		1	1	1	1
21. RGB LIMIT LEVEL		2	2	2	2
23. TEXT H. POSITION		-3	-3	-3	-3
24. READ DATA		———	———	———	———

Sound System **Do Not Adjust**

Setting item	B/G	I	D/K	M
10. SIF DET LEVEL	+0	+0	+0	+0
14. SIF BPF BW ADJUST	+0	+0	+0	+0
15. SIF TRAP FO ADJUST	+0	+0	+0	+0
16. SIF TRAP FO ADJUST 2	+0	+0	+0	+0
17. SIF -TRAP	0	0	0	0
18. SIF -BPF	1	0	0	0
22. SIF SW	0	1	1	1

AV-14A3
AV-1415EE
AV-14AMG3

REPLACEMENT OF IC301 (IF V/C DECODER)

- **For the IC301(IF V/C DECODER) of this model, all data are written in the micro-computer. So, write the data in the micro-computer in accordance with the following procedures before starting adjustment.**

PROCEDURES

(1) Turn the POWER OFF.

(2) Replace the IC301 with a new one.

(3) While pressing MENU button and VOL+ button ON the FRONT CABINET simultaneously, turn the POWER ON. When the POWER is turned ON, the data is written in the micro-computer immediately.

LOCATIONS OF FRONT PANEL BUTTONS AND LAMPS

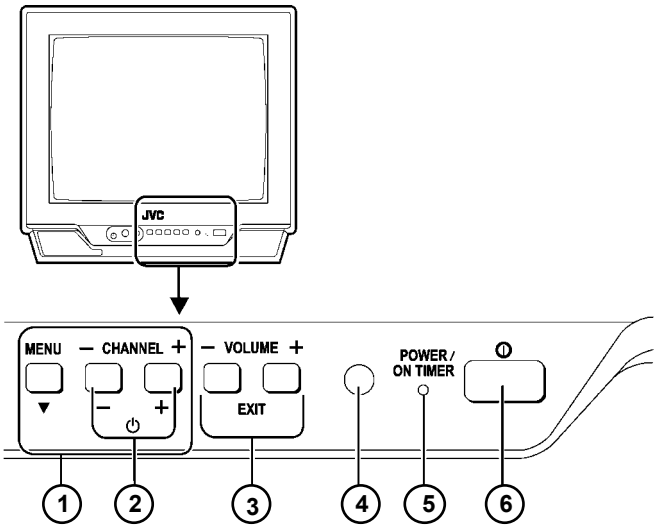

1	MENU buttons
2	CHANNEL −/+buttons (MENU −/+buttons)
3	VOLUME −/+ buttons (MENU −/+ buttons)
4	REMOTE CONTROL sensor
5	POWER/ ON TIMER lamp
6	MAIN POWER button

SERVICE ADJUSTMENTS

BEFORE STARTING SERVICE ADJUSTMENT

1. **There are 2 way of adjusting this TV: One is with the REMOTE CONTROL UNIT and the other is the conventional method using adjustment parts and components.**
2. **The adjustment with the REMOTE CONTROL UNIT is made on the basis of the initial setting values. The setting values which adjust the screen to its optimum condition may differ from the initial setting values.**
3. Make sure that connection is correctly made to AC power source.
4. Turn on the power of the set and equipment before use, and start the adjustment procedures after waiting at least 30 minutes.
5. Unless otherwise specified, prepare the most suitable reception or input signal for adjustment.
6. **Never touch any adjustment parts, which are not specified in the list for this adjustment VRs, transforms, condensers, etc.**
7. Preparation for adjustment
   Unless otherwise specified in the adjustment instructions, preset the following functions with the REMOTE CONTROL UNIT.
   User mode position

PICTURE MODE (VSM)	BRIGHT
VNR	OFF
TINT / COLOUR / BRIGHT CONT. / SHARP	CENTER
BLUE BACK	OFF
OFF TIMER	OFF
AUTO SHUT OFF	OFF

MEASURING INSTRUMENT AND FIXTURES

1. DC voltmeter (or digital voltmeter)
2. Oscilloscope
3. Signal generator (Pattern generator) [PAL / SECAM / NTSC]
4. Remote control unit

ADJUSTMENT ITEMS

Adjustment item	Adjustment item
B1 POWER SUPPLY	DEFLECTION circuit adjustment
FOCUS adjustment	VSM PRESET setting
IF circuit adjustment	PURITY/ CONVERGENCE adjustment
V/C (Video / Chroma) circuit adjustment	

AV-14A3
AV-1415EE
AV-14AMG3

BASIC OPERATION OF SERVICE MENU

- **The adjustment using SERVICE MENU**

The following adjustment items use the SERVICE MENU in the series of the adjustment. The adjustments are made on the basis of the initial setting values. The adjustment values which adjust the screen to the optimum condition can be different from the initial setting values.
With the SERVICE MENU, various settings can be made, and they are broadly classified in the following items of settings.

1.IF ····· Adjustment of the IF circuits.
2.V/C ····· Adjustment of the VIDEO/CHROMA circuit.
3.DEF ····· Adjustment of the DEFLECTION circuit.
4.VSM PRESET ····· Adjustment of the initial setting values of VSM condition as STANDARD, SOFT and BRIGHT. (VSM : Video Status Memory)
5.PRESET ····· Adjustment of the RF circuit **[Do not adjust]**.
6. SETUP TOUR OFF ····· It should be able to select mode (LANGUAGE and AUTO CH PRESET).. **[Should be OFF]**.

- **Key operation of the SERVICE MENU**

[Enter to SERVICE MENU]

Press the **DISPLAY** key and the **PICTURE MODE** key of the REMOTE CONTROL UNIT simultaneously. Then enter the SERVICE MENU mode as shown in Fig.1.

[Exit from SERVICE MENU]

When complete the adjustment work, press the **DISPLAY** key to return to the SERVICE MENU.
And then press the **DISPLAY** key again, return to the normal screen.

[Select from SERVICE MENU]

In SERVICE MENU, press the number (1～6) key of the remote control unit, to select any of the adjustment items.
The colours which selected item characters are changed.

SERVICE MENU

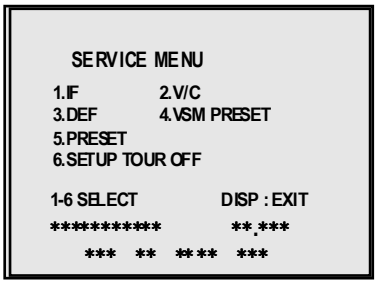

Fig.1

KEY ASSIGNMENT OF REMOTE CONTROL UNIT

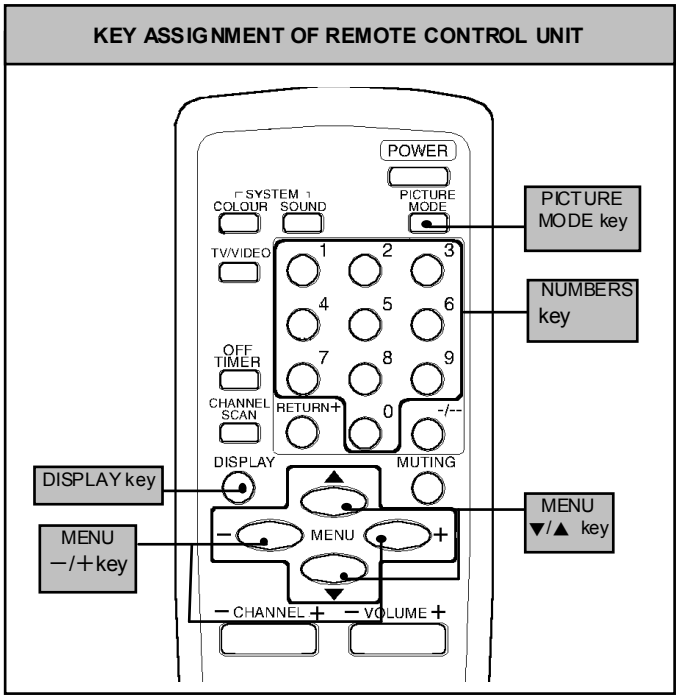

[Method of setting]

1. IF

[1. VCO]

① 1 Key ····· Select **1.IF**.
② 1 Key ····· Select **1.VCO**
③ The VCO (CW) screen will be displayed a allow mark when the AFC voltage is at a certain level.
④ DISPLAY Key ····· As you press this key twice, you will return to the **SERVICE MENU**.

[2. DELAY POINT]

① 1 Key ····· Select **1.IF**.
② 2 Key ····· Select **2.DELAY POINT**.
③ MENU -/+ Key ····· Set (adjust) the setting values of the setting items.
④ DISPLAY Key ····· When this is pressed twice, you will return to the **SERVICE MENU**.

2.V/C, 3.DEF and **4.VSM PRESET**

① 2~4 Key ····· Select one from **2. V/C, 3. DEF** and **4. VSM PRESET**.
② MENU ▼/▲ Key ····· Select setting items.
③ MENU -/+ Key ····· Adjust the values of the items.
④ DISPLAY Key ····· When this is pressed, return to the **SERVICE MENU**.

6.SETUP TOUR

① By pressing the 6 key, you can change the ON or OFF (**should be OFF**).
(Should be OFF)
✻ · If it is ON, then you turn the TV power off, when you are turn the TV power on again.
The JVC's logo will be shown about 15 seconds automatically.
② MENU -/+ Key ····· Select Language.
③ MENU ▼ Key ····· Auto Search.

SERVICE MENU FLOW CHART

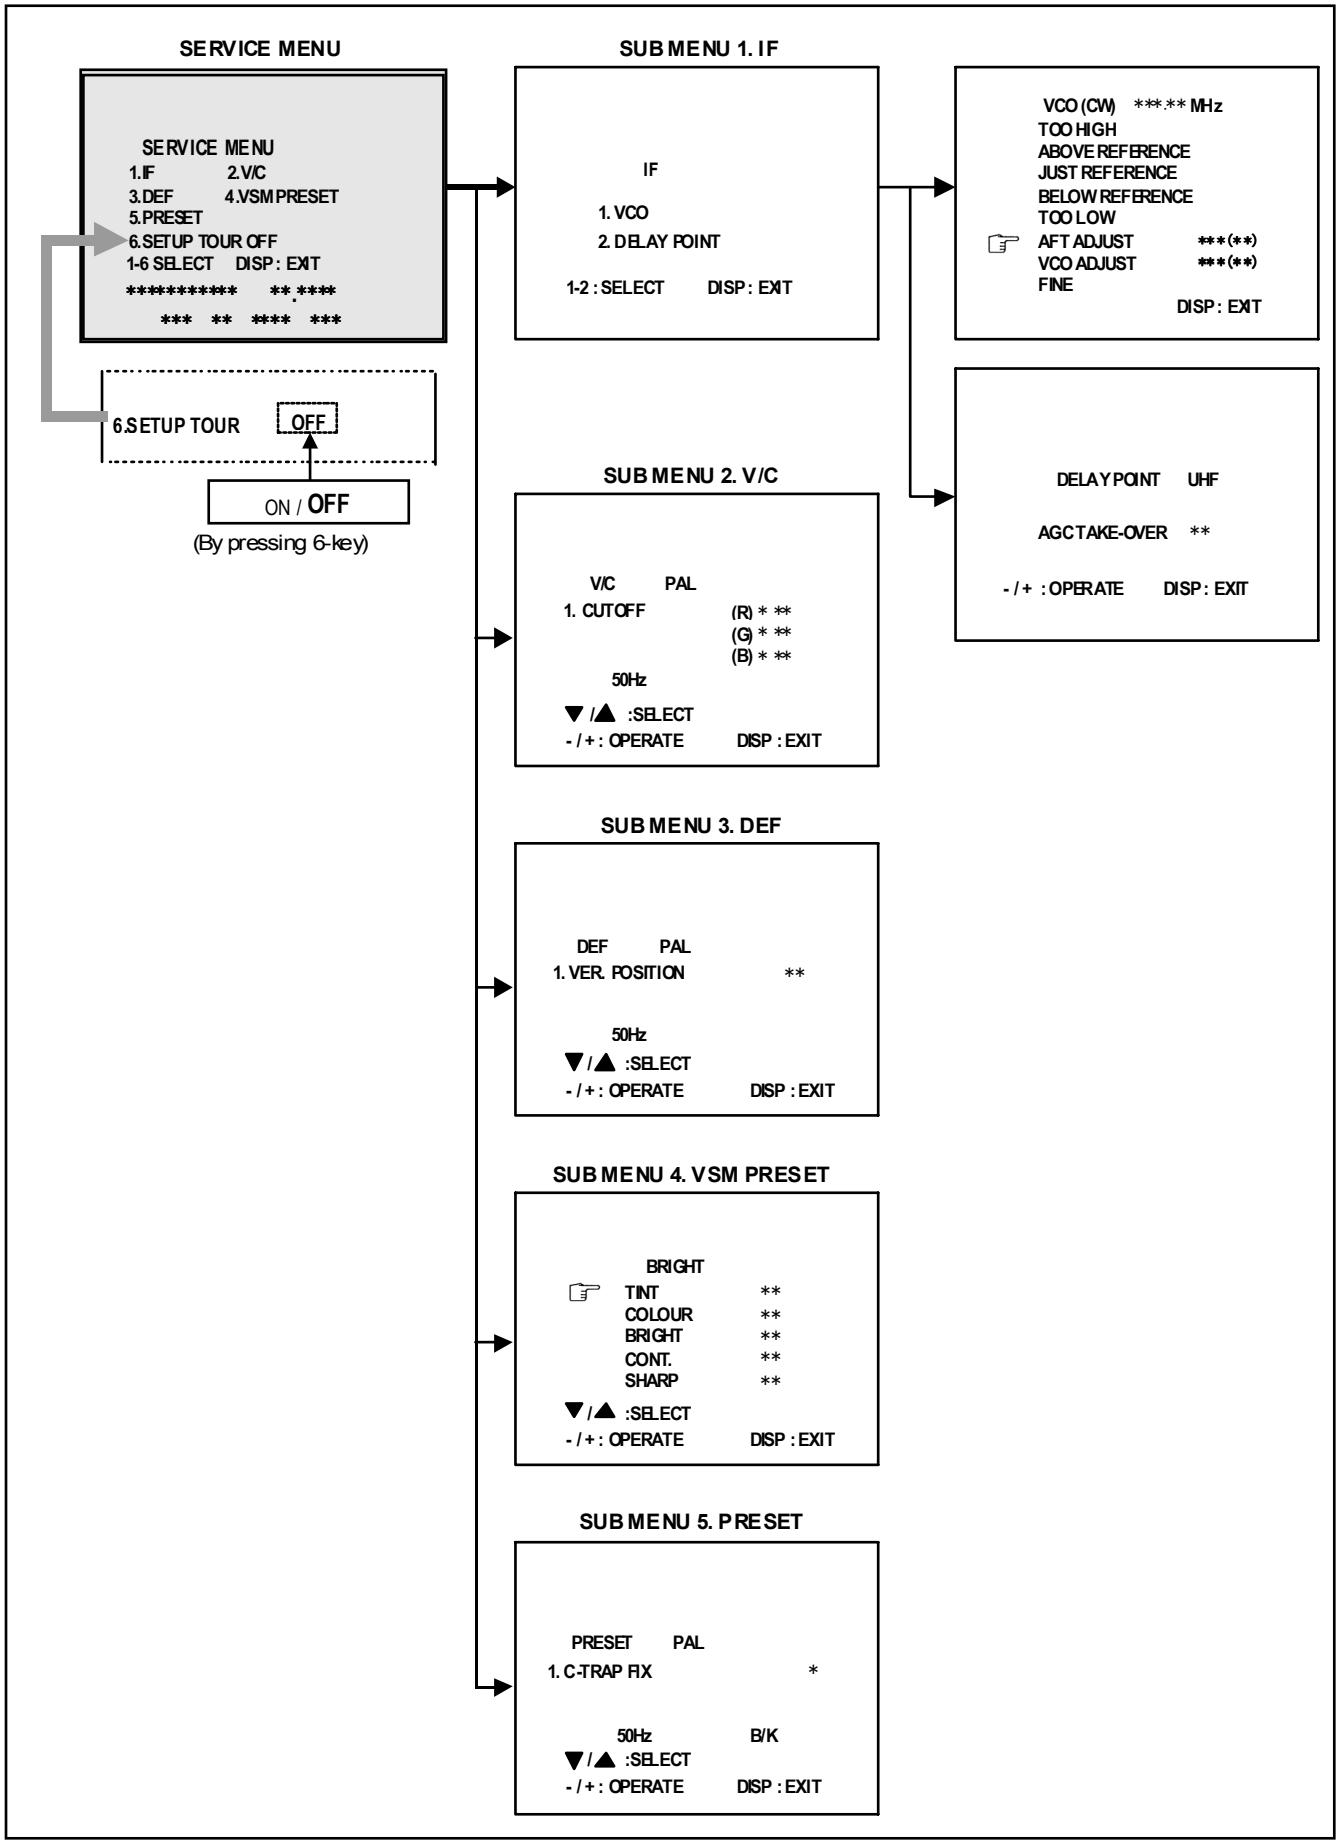

ADJUSTMENT LOCATIONS

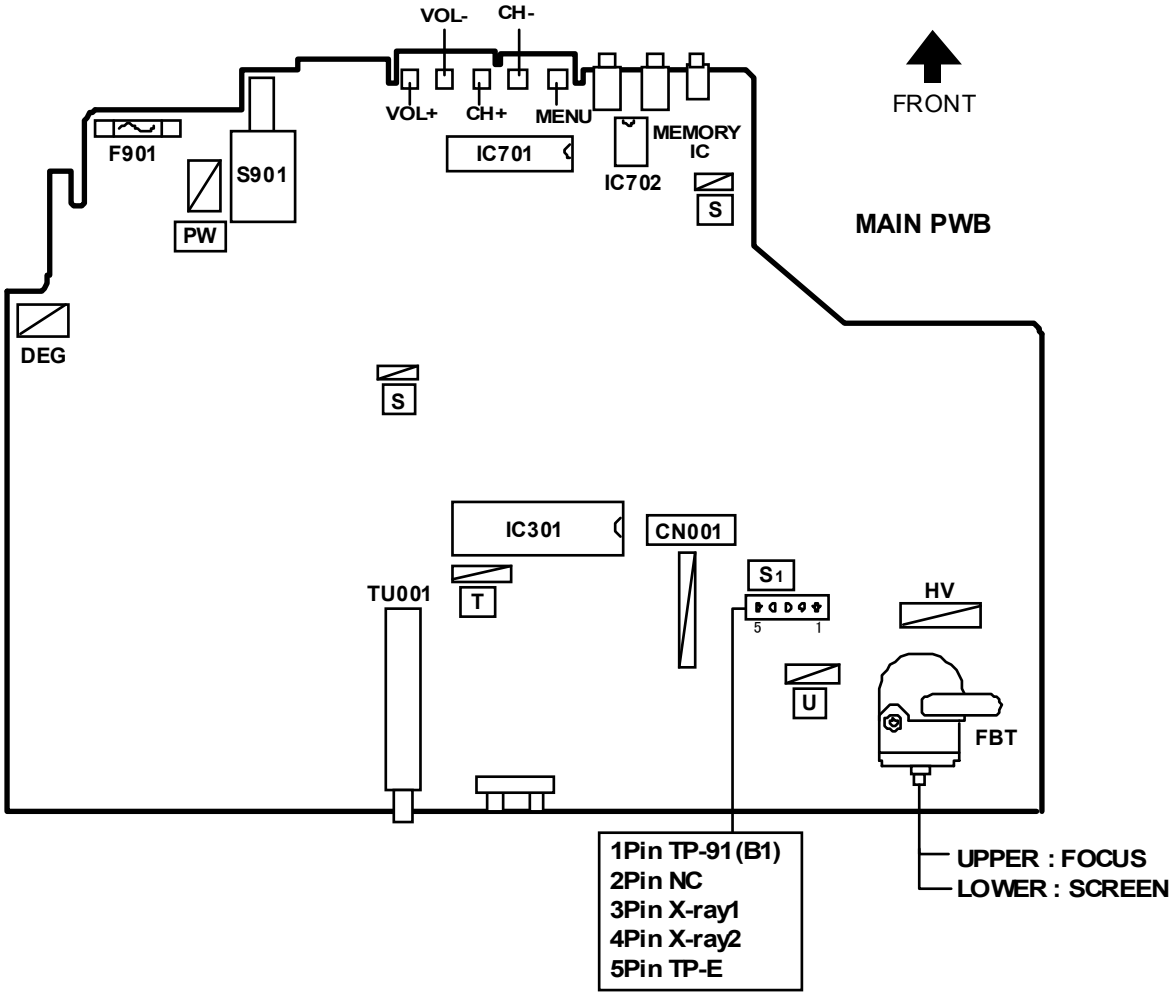

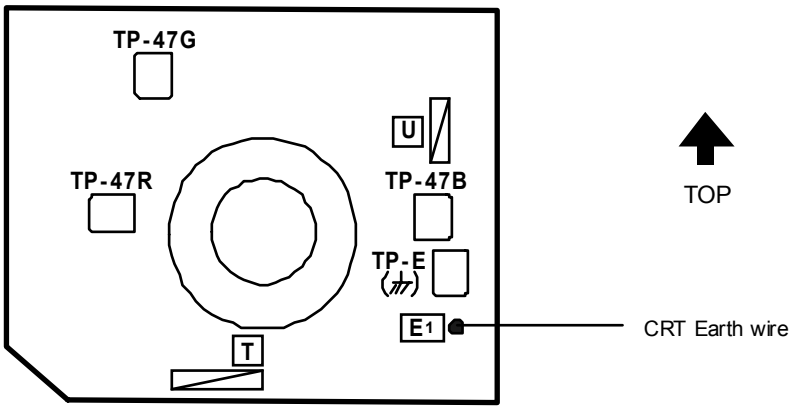

CRT SOCKET PWB (SOLDER SIDE)
(Within MAIN PWB)

ADJUSTMENTS

B1 POWER SUPPLY

Item	Measuring instrument	Test point	Adjustment part	Description
Check of B1 Power Supply	Signal generator DC Volt-meter	TP-91 (B1) TP-E (⏚)		1. Input a whole black signal. 2. Connect a DC voltmeter to TP-91(B1) and TP-E (⏚). 3. Make sure that the voltage is DC116.5±2.0V.

FOCUS ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of FOCUS	Signal generator		FOCUS VR [In HVT]	1. Input a cross-hatch signal. 2. While watching the screen, adjust the FOCUS VR to make the vertical and horizontal lines as fine and sharp as possible. 3. Make sure that when the screen is darkened, the lines remain in good focus.

IF CIRCUIT ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of VCO(CW)	Signal generator Remote control unit		1. VCO	●Please use signal generator which is correct proof about the sending frequency. 1. Input the PAL full colour bar (210.25MHz) signal. 2. Enter the SERVICE MENU. 3. Select 1.IF from the SERVICE MENU. 4. Press 1 key and select **1. VCO**. 5. Select **VCO ADJUST** with MENU ▲/▼ key. 6. Press MENU -/+ key until the colour of the characters TOO HIGH changes blue to yellow. Then gradually press the MENU -/+ key until the TOO LOW changes yellow. At this time, confirm that the value of **VCO ADJUST** is near +00. 7. Select **AFT ADJUST** with MENU ▲/▼ key. 8. Press MENU -/+ key until the characters JUST REFERENCE changes blue to yellow. 9. Press the **DISPLAY** key three times to return to normal screen.

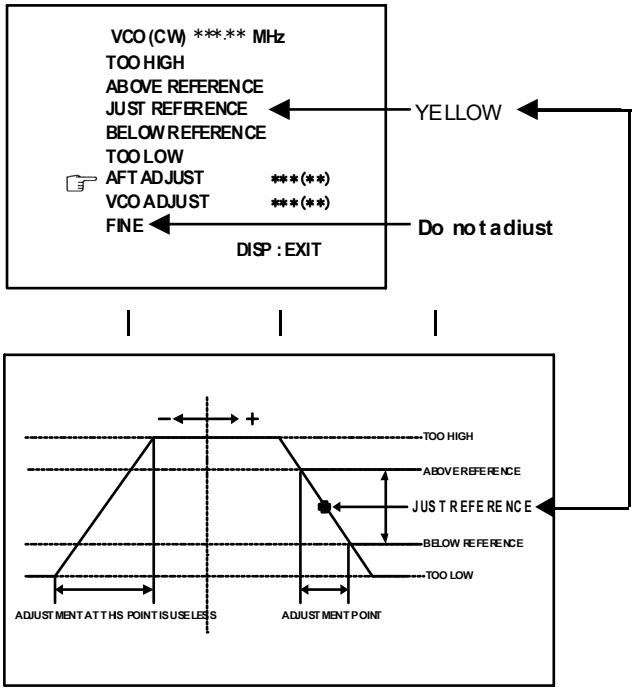

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of DELAY POINT (AGC)	**Signal generator** **Remote control unit**		**DELAY POINT (AGC TAKE-OVER)**	1. Input a black and white signal (colour off). 2. Enter the SERVICE MENU. 3. Select **1. IF** from the SERVICE MENU. 4. Select **2. DELAY POINT** by pressing the **2** key on the remote control unit. 5. Set the setting values of the setting items as shown bellow table. 6. Then adjust the MENU - / + key until video noise disappears. 7. Turn to other channels and make sure that there are no irregularities.

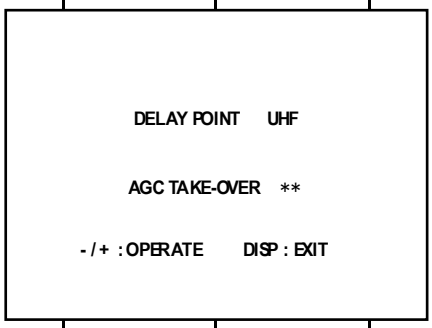

Setting Item		Variable range	Initial setting value	
			SAMSUNG (QAU0246-002)	MATSUSITA (QAU0287-001)
DELAY POINT (AGC TAKE OVER)	**NTSC 3.58**	0～127	45	45
	OTHER		35	35

VIDEO / CHROMA CIRCUIT ADJUSTMENT

The setting (adjustment) using the REMOTE CONTROL UNIT is made on the basis of the initial setting values.
The setting values which adjust the screen to the optimum condition can be different from the initial setting values.
Do not change the initial setting values of the setting items not listed in "ADJUSTMENT".

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of WHITE BALANCE (Low light)	**Signal generator** **Remote control unit**		**1. CUT OFF (R)** **CUT OFF (G)** **CUT OFF (B)** **SCREEN VR [IN HVT]**	1. Input a black and white signal (colour off). 2. Enter the SERVICE MENU. 3. Select **2. V/C** from the SERVICE MENU, then select **1. CUT OFF** (R), (G) and (B) . 4. Set each value to initial setting value with 4～9 keys of the remote control unit. 5. Press the **1** key of the remote control unit to show the single horizontal line on screen. 6. Turn the **SCREEN VR** fully counter-clockwise, then slowly turn it clockwise to where one of a red, blue or green colour is faintly visible. 7. Use keys **4～9** of the remote control unit and adjust the other 2 colours which except the appeared colour to where the single horizontal line appears white. 8. Turn the **SCREEN VR** to where the single horizontal line glows faintly. 9. Press the **2** key to turn off the single horizontal line. 10. Press the DISPLAY key twice to return to the normal screen.
Adjustment of WHITE BALANCE (High light)	**Signal generator** **Remote control unit**		**2. DRIVE (R)** **DRIVE (B)**	1. Input a black and white signal (colour off). 2. Enter the SERVICE MENU. 3. Select **2. V/C** from the SERVICE MENU. 4. Select **2. DRIVE (R) / (B)** with MENU ▼/▲ key, and set each value to initial setting value with 4 and 7 or 6 and 9 keys of the remote control unit. 5. Use the keys **4** and **7** or **6** and **9** to produce a white screen 6. Press the DISPLAY key twice to return to the nomal screen.

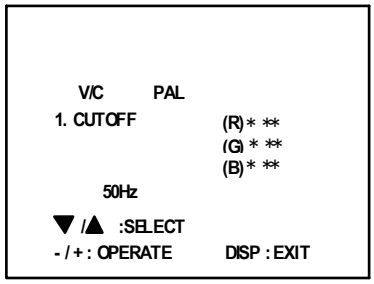

KEY ASSIGNMENT OF REMOTE CONTROL UNIT

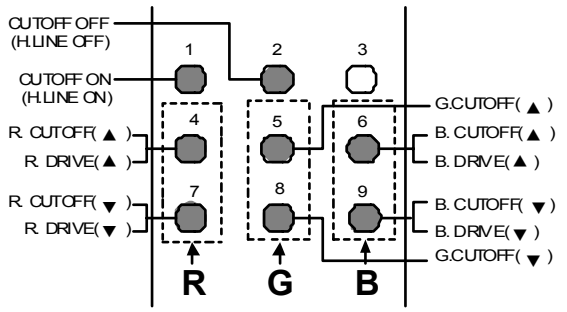

Adjustment item		Variable range	Initial setting value
1. CUT OFF	R	-128～+127	-50
	G	-128～+127	-50
	B	-128～+127	-50

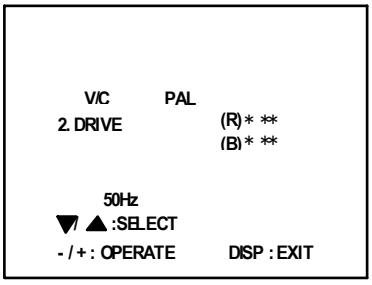

Adjustment item		Variable range	Initial setting value
2. DRIVE	R	-128～+127	+0
	B	-128～+127	+0

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SUB BRIGHT	**Remote control unit**		**3. BRIGHT**	1. Receive any broadcast. 2. Enter the SERVICE MENU. 3. Select **2. V/C** from SERVICE MENU. 4. Select **3. BRIGHT** with the MENU ▼/▲key. 5. Set the initial setting value with the MENU - / + key. 6. If the brightness is not the best with the initial set value, make fine adjustment until you get the best brightness.
Adjustment of SUB CONT.	**Remote control unit**		**4. CONT.**	1. Receive any broadcast. 2. Enter the SERVICE MENU. 3. Select **2. V/C** from SERVICE MENU. 4. Select **4. CONT**. with the MENU ▼/▲key. 5. Set the initial setting value with the MENU - / + key. 6. If the contrast is not the best with the initial set value, make fine adjustment until you get the best contrast.
Adjustment of SUB COLOUR I	**Remote control unit**		**5. COLOUR**	**[Method of adjustment without measuring instrument]**
			PAL COLOUR	1. Receive a PAL broadcast. 2. Enter the SERVICE MENU. 3. Select **2. V/C** from the SERVICE MENU. 4. Select **5. COLOUR** with the MENU ▼/▲ key. 5. Set the initial setting value for PAL COLOUR with the MENU - / + key. 6. If the colour is not the best with the initial set value, make fine adjustment until you get the best colour.
			SECAM COLOUR	1. Receive a SECAM broadcast. 2. Make fine adjustment of SECAM COLOUR as previously.
			NTSC 3.58 COLOUR	1. Receive a NTSC 3.58MHz broadcast. 2. Make similar fine adjustment of NTSC 3.58 COLOUR as previously.
			NTSC 4.43 COLOUR	When NTSC 3.58 adjustment completed, NTSC 4.43 will be automatically set at the respective values.

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SUB COLOUR Ⅱ	**Signal generator** **Oscillo-scope** **Remote control unit**	**TP-47G/R** **TP-E (⏚)** **[CRT SOCKET PWB]**	**5. COLOUR**	**[Method of adjustment using measuring instrument]**
			PAL COLOUR	1. Input a PAL full field colour bar signal (75% white). 2. Enter the SERVICE MENU. 3. Select **2. V/C** from SERVICE MENU. 4. Select **5. COLOUR** with the MENU ▼/▲ key. 5. Set the initial setting value of PAL COLOUR with the MENU - / + key. 6. Connect the oscilloscope between TP-47G/R and TP-E (⏚). 7. Adjust PAL COLOUR to bring the value of **(A)** in the illustration to +11V(W-G). (Voltage value between (**W**) and (**G**))
			SECAM COLOUR	1. Input a SECAM full field colour bar signal (75% white). 2. Set the initial setting value of SECAM COLOUR with the MENU - / + key. 3. Adjust SECAM COLOUR to bring the value of **(A)** in the illustration to +4V(W-G). (Voltage value between (**W**) and (**G**))
			NTSC 3.58 COLOUR	1. Input a NTSC 3.58 full field colour bar signal (75% white). 2. Set the initial setting value of NTSC 3.58 COLOUR with the MENU - / + key. 3. Adjust NTSC 3.58 COLOUR to bring the value of **(A)** in the illustration to +7V(W-G). (Voltage value between (**W**) and (**G**))
			NTSC 4.43 COLOUR	When NTSC 3.58 is set, NTSC 4.43 will be automatically set at the respective values.

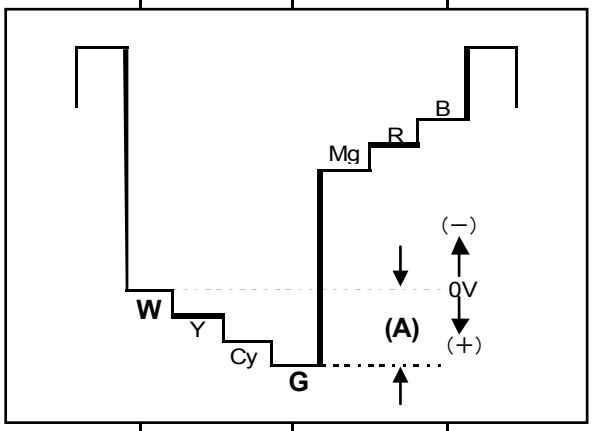

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of TINT Ⅰ	**Signal generator** **Remote control unit**		**6. TINT**	**[Method of adjustment without measuring instrument]**
			NTSC 3.58 TINT	1. Input a NTSC 3.58 full field colour bar signal (75% white). 2. Enter the SERVICE MENU. 3. Select **2. V/C** from SERVICE MENU. 4. Select **6. TINT** with the MENU ▼/▲ key. 5. Set the initial setting value of NTSC 3.58 with the MENU - / + key. 6. If you cannot get the best tint with the initial setting value, make fine adjustment until you get the best tint.
			NTSC 4.43 TINT	When NTSC 3.58 is set, NTSC 4.43 will be automatically set at the respective values.
Adjustment of TINT Ⅱ	**Signal generator** **Oscillo-scope** **Remote control unit**	**TP-47G/R** **TP-E (⏚)** **[CRT SOCKET PWB]**	**6. TINT**	**[Method of adjustment using measuring instrument]**
			NTSC 3.58 TINT	1. Input a NTSC 3.58 full field colour bar signal (75% white). 2. Enter the SERVICE MENU. 3. Select **2. V/C** from SERVICE MENU. 4. Select **6. TINT** with the MENU ▼/▲ key. 5. Set the initial setting value of NTSC 3.58 with the MENU - / + key. 6. Connect the oscilloscope between TP-47G/R and TP-E. (⏚). 7. Adjust NTSC 3.58 TINT to bring the value of **(B)** in the illustration to +7V(W- **Cy**). (Voltage value between (**W**) and (**Cy**))
			NTSC 4.43 TINT	When NTSC 3.58 is set, NTSC 4.43 will be automatically set at the respective values.

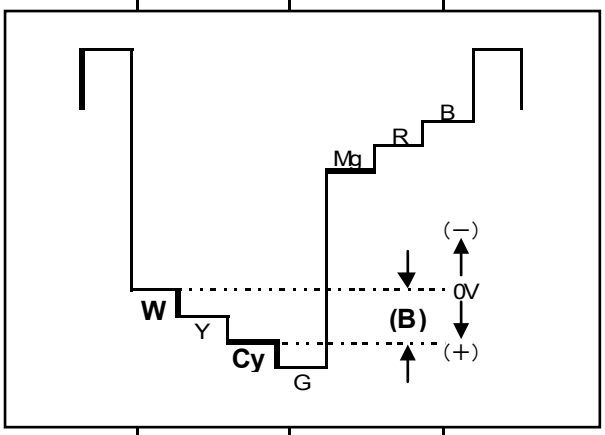

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SECAM BLACK OFFSET	**Remote control unit** **Signal generator**		**7.SECAM BL ADJUST**	**[Method of adjustment using measuring instrument]** 1. Input a SECAM full field colour bar signal. 2. Enter the SERVICE MENU. 3. Select **2. V/C** from SERVICE MENU. 4. Select **7. SECAM BL ADJUST** with MENU ▼/▲ key. 5. Set the initial setting value with the MENU -/ + key. 6. Switch the ①key (colour OFF) and ②key (colour ON) on the remote control and make sure that there is no colour on the black and white screen. 7. If the black and white screen is not best with the initial setting value, make fine adjustment until you get the best black and white screen. 8. While watching the screen, adjust the value to be the same colour between ON & OFF by ten key on the remote control unit. 9. Press the DISPLAY key twice to return to the normal screen.

KEY ASSIGNMENT OF REMOTE CONTROL UNIT

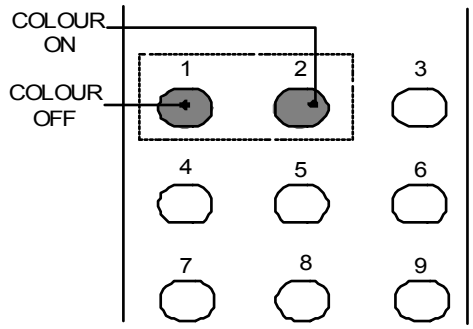

DEFLECTION CIRCUIT ADJUSTMENT

- There are 2 modes of adjustment (setting value) ---- ① 50Hz mode and ② 60Hz mode ---- depending upon the kind of signals (vertical frequency 50Hz / 60Hz).
- When adjusted in mode ① , mode ② will be automatically set.

The setting (adjustment) using the REMOTE CONTROL UNIT is made on the basis of the initial setting values.
The setting values which adjust the screen to the optimum condition can be different from the initial setting values.

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of V.HEIGHT & V.POSITION	**Signal generator** **Remote control unit**		**1. VER. POSITION** **3. VER. HEIGHT**	1. Input a circle pattern signal. 2. Enter the SERVICE MENU. 3. Select **3. DEF.** from SERVICE MENU. 4. Select **1. VER. POSITION** with the MENU ▼/▲ key. 5. Set the initial setting value with the MENU - / + key. 6. Adjust **V** and **V'** to be equal with the MENU - / + key as shown in Fig.2. 7. Input a cross-hatch signal. 8. Select **3. V. HEIGHT** with the MENU ▼/▲ key. 9. Set the initial setting value with the MENU - / + key. 10. As shown in Fig.1, adjust **VER. HEIGHT** and make the vertical screen size **92%** of the picture size with the MENU - / + keys of remote control unit.
Adjustment of HOR. POSITION	**Signal generator** **Remote control unit**		**2. HOR. POSITION**	11. Input a circle pattern signal. 12. Select **2. HOR POSITION** with the MENU ▼/▲ key. 13. Set the initial setting value of **2. HOR. POSITION** with the MENU - / + key. 14. Adjust **2. HOR. POSITION** to make **H=H"** as shown in Fig.2 with the MENU - / + key.

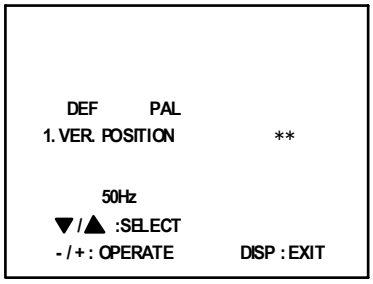

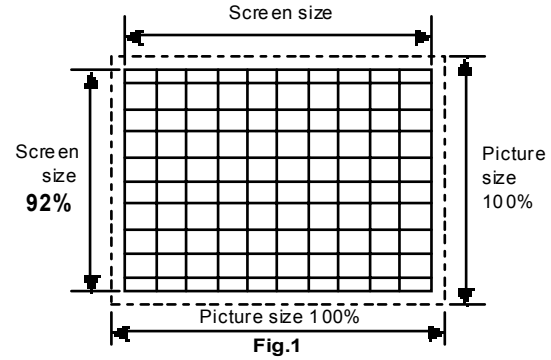

Fig.1

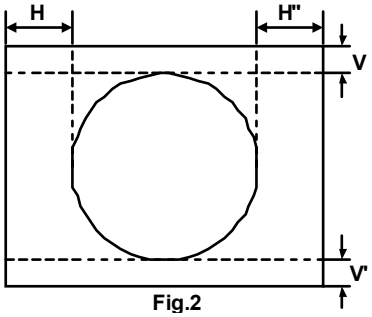

Fig.2

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of VER. LIN. & VER. SCURVE	**Signal generator** **Remote control unit**		**4. VER. LIN.** **5. VER. SCURVE**	● **When the vertical linearity has been deteriorated remarkably, perform the following steps.** 15. Input a cross-hatch signal. 16. Select **4. VER. LIN.** with the MENU ▼/▲ key. 17. Set the initial setting value of **4. VER LIN.** with the MENU - / + key. 18. Select **5. VER. SCURVE** with the MENU ▼/▲ key. 19. Set the initial setting value of **5. VER. SCURVE** with the MENU - / + key. 20. Adjust **4. VER. LIN.** and **5. VER. SCURVE** so that the spaces of each line as shown in Fig.3 on **TOP**, **CENTER** and **BOTTOM** become uniform. Make sure that the adjustment is properly done on the screen of 60Hz mode. **[NOTE]** ● Adjust to make both 50Hz & 60Hz are the same v. size and fine straight line. ● When adjust again, adjust 50Hz mode first. ● When adjust in 60Hz mode, only 60Hz mode is adjust.

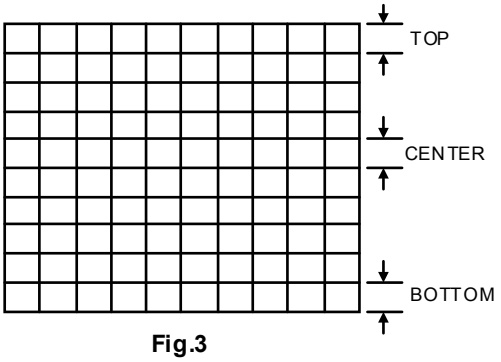

Fig.3

VSM PRESET SETTING

Item	Measuring instrument	Test point	Adjustment part	Description
Setting of VSM PRESET	**Remote control unit**		**TINT** **COLOUR** **BRIGHT** **CONT.** **SHARP**	1. Enter the SERVICE MENU. 2. Select **4. VSM PRESET** from the SERVICE MENU. 3. Select BRIGHT with the PICTURE MODE key. 4. Adjust the MENU ▼/▲ and MENU - / + key to bring the set values of **TINT ~ SHARP** to the values shown in the below table. 5. Respectively select the VSM PRESET mode for SOFT and STANDARD, and make similar adjustment as in 3 above.

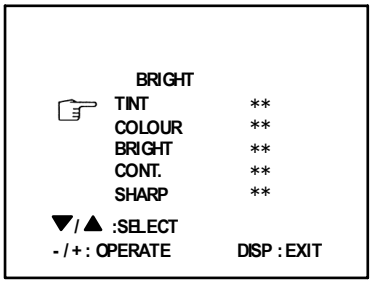

● VSM PRESET

VSM Setting Item	BRIGHT	STANDARD	SOFT
TINT	+15	←	←
COLOUR	+15	←	←
BRIGHT	+15	←	←
CONT	+30	+15	+13
SHARP	+15	←	+12

PURITY / CONVERGENCE ADJUSTMENT

PURITY ADJUSTMENT

1. Demagnetize CRT with the demagnetizer.
2. Loosen the retainer screw of the deflection yoke.
3. Remove the wedges.
4. Input a green raster signal from the signal generator, and turn the screen to green raster.
5. Move the deflection yoke backward.
6. Bring the long lug of the purity magnets on the short lug and position them horizontally. (Fig.2)
7. Adjust the gap between two lugs so that the GREEN RASTER will come into the center of the screen. (Fig.3)
8. Move the deflection yoke forward, and fix the position of the deflection yoke so that the whole screen will become green.
9. Insert the wedge to the top side of the deflection yoke so that it will not move.
10. Input a cross hatch signal.
11. Verify that the screen is horizontal.
12. Input red and blue raster signals, and make sure that purity is properly adjusted.

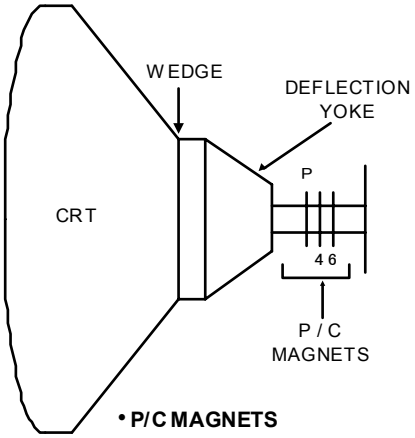

• P/C MAGNETS

P : PURITY MAGNET
4 : 4 POLES (convergence magnets)
6 : 6 POLES (convergence magnets)

Fig.1

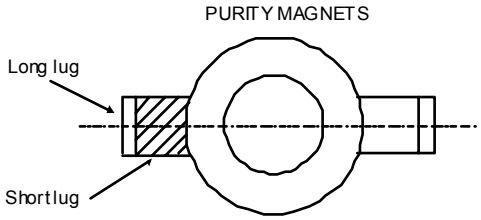

Bring the long lug over the short lug and position them horizontally.

Fig.2

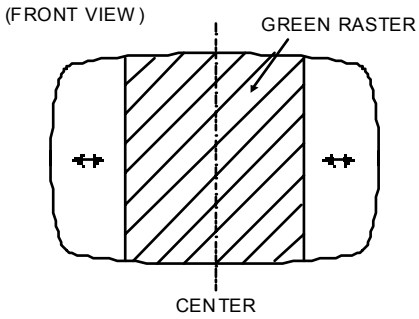

Fig.3

STATIC CONVERGENCE ADJUSTMENT

1. Input a cross hatch signal.
2. Using 4-pole convergence magnets, overlap the red and blue lines in the center of the screen (Fig.1) and turn them to magenta (red/blue).
3. Using 6-pole convergence magnets, overlap the magenta(red/blue) and green lines in the center of the screen and turn them to white.
4. Repeat 2 and 3 above, and make best convergence.

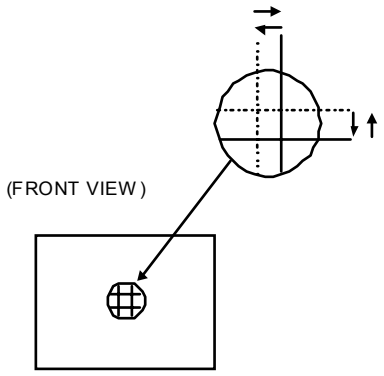

Fig.1

DYNAMIC CONVERGENCE ADJUSTMENT

1. Move the deflection yoke up and down and overlap the lines in the periphery. (Fig. 2)
2. Move the deflection yoke left to right and overlap the lines in the periphery. (Fig. 3)
3. Repeat 1 and 2 above, and make best convergence.

(FRONT VIEW)

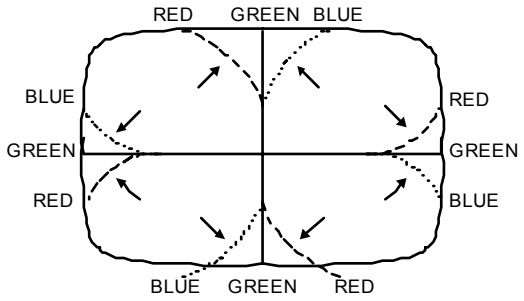

Fig.2

● After adjustment, fix the wedge at the original position.
Fasten the retainer screw of the deflection yoke.
Fix the 6 magnets with glue.

(FRONT VIEW)

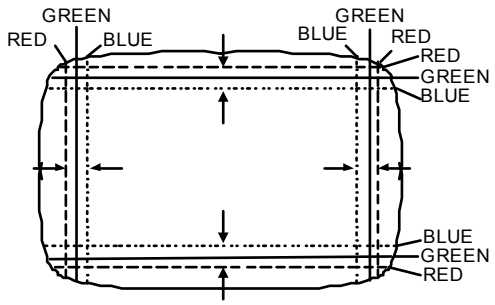

Fig.3

AV-14A3
AV-1415EE
AV-14AMG3

BLOCK DIAGRAM

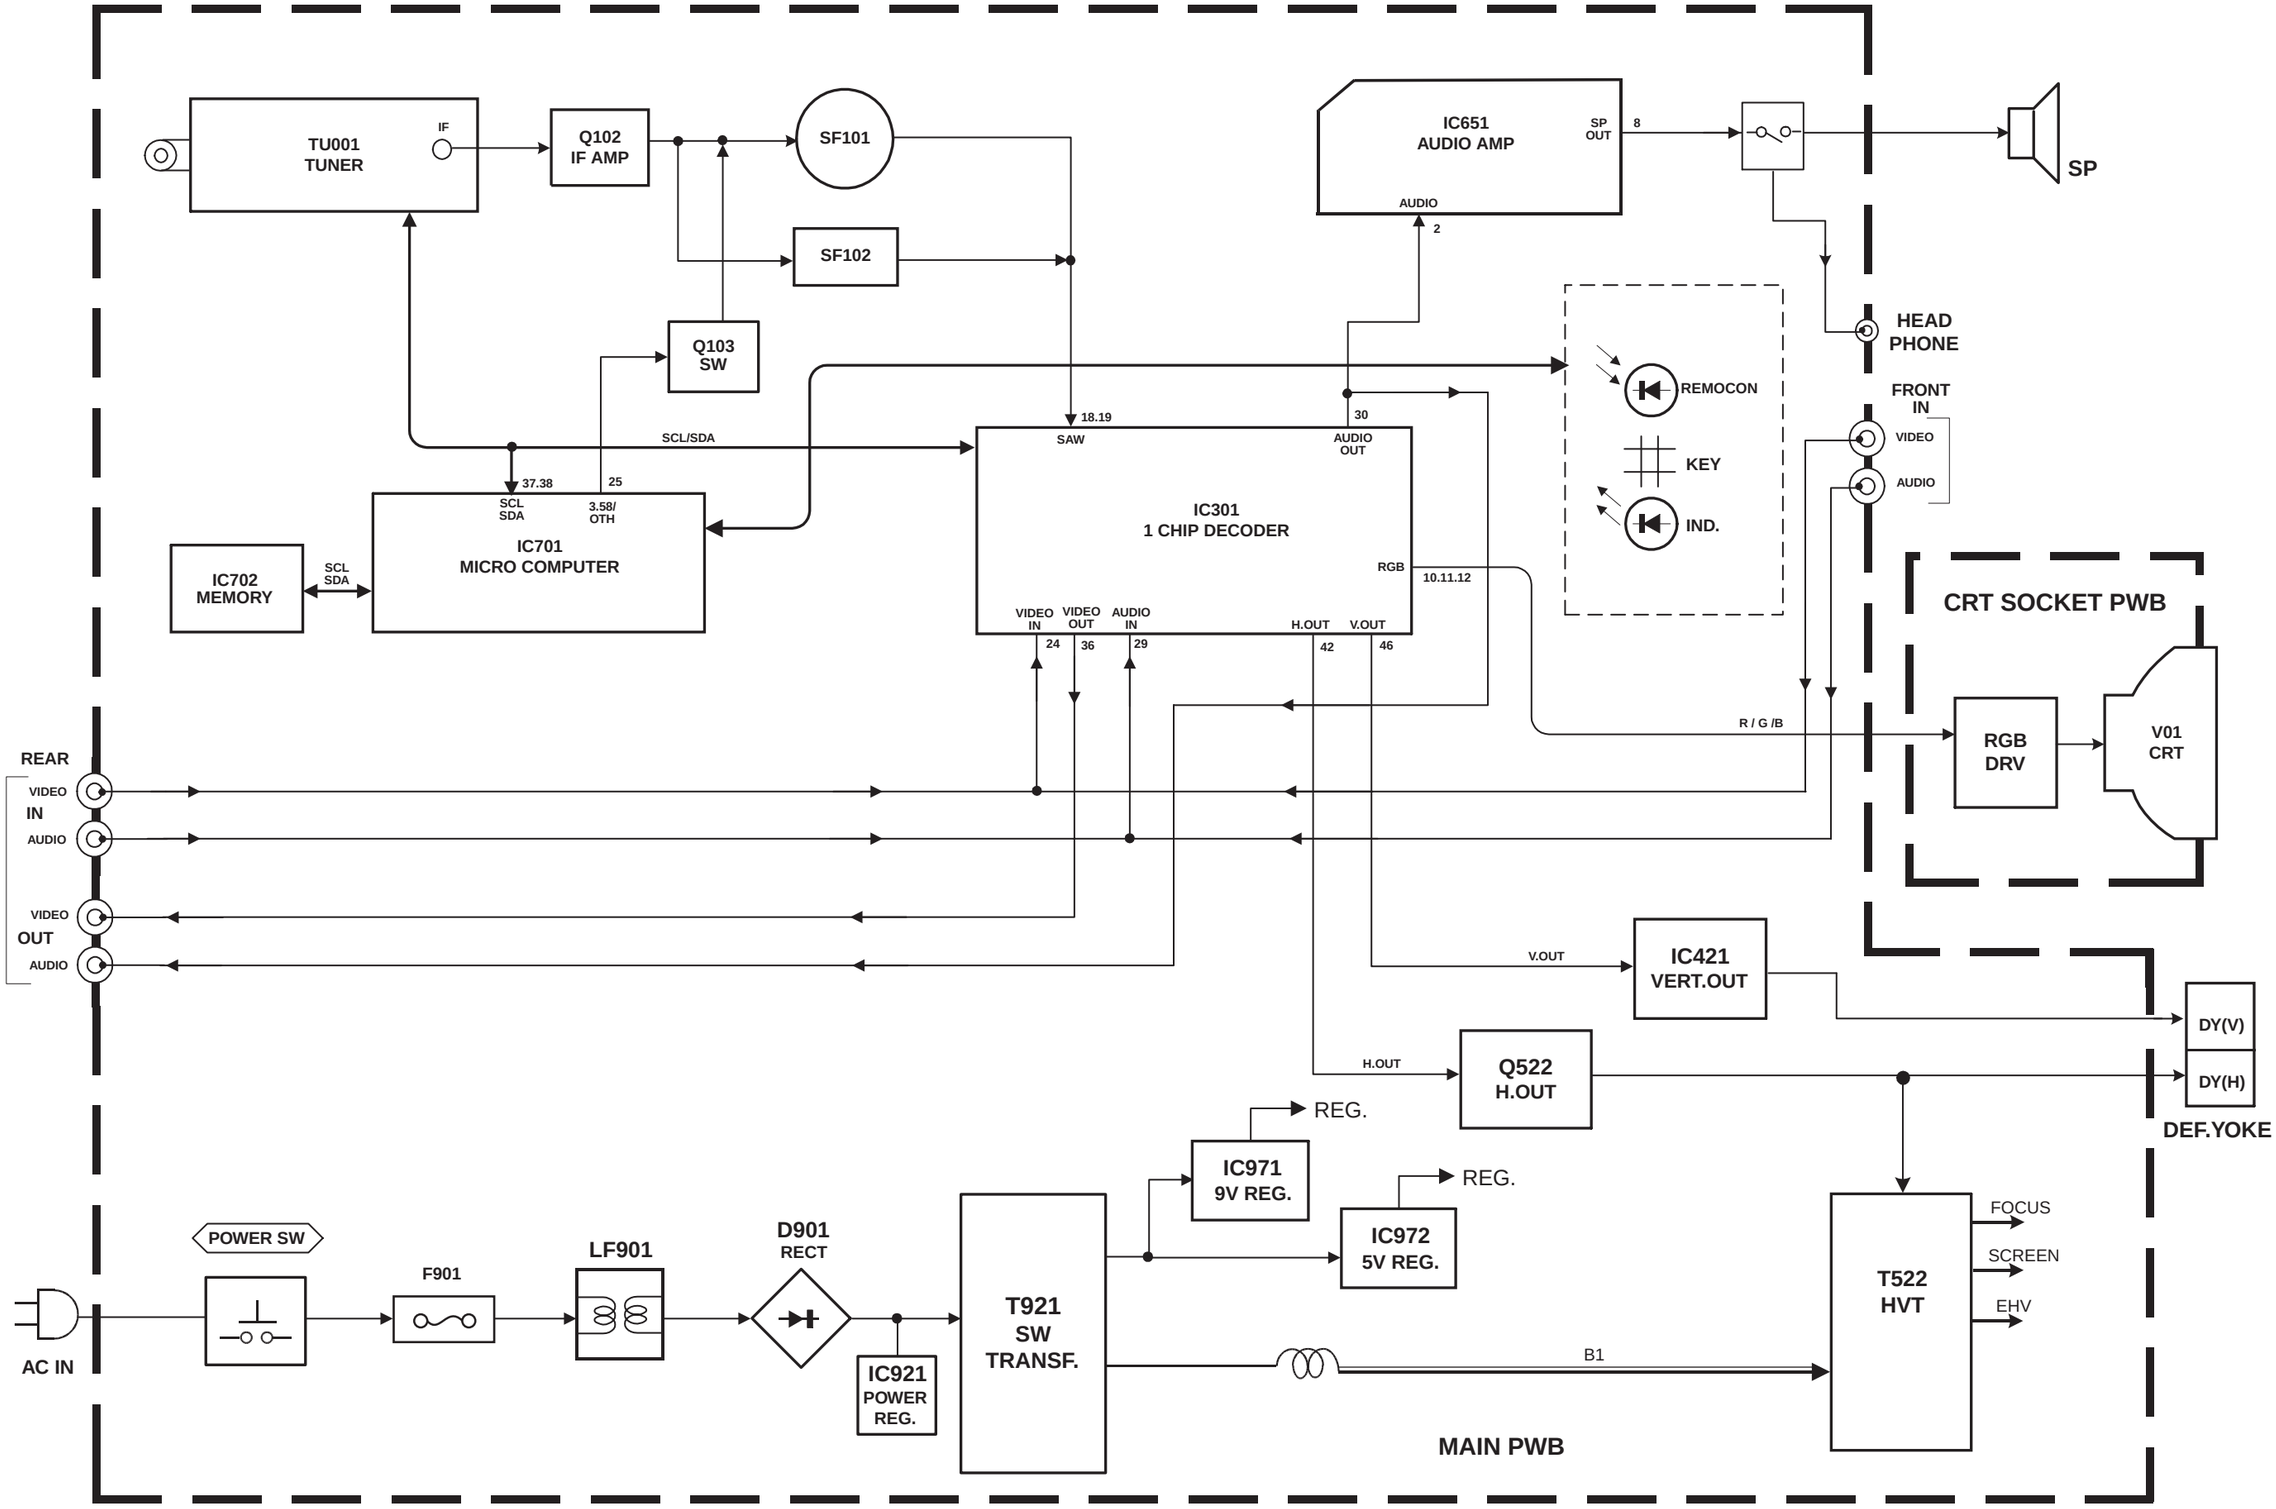

CIRCUIT DIAGRAMS

MAIN PWB CIRCUIT DIAGRAMS **(1/2) [AV-14A3, AV-14A3/AU, AV-14A3/HK, AV-1415EE]**

MAIN PWB ASS'Y (1/2)

SCG-1413A-H2
(AV-14A3)

SCG-1426A-H2
(AV-1415EE)

SCG-1427A-H2
(AV-14A3/AU)

SCG-1428A-H2
(AV-14A3/HK)

NOTE

*1:	2SD601A/QR/-X
*2:	2SB709A/QR/-X
*3:	UN2212-X
*4:	MA111-X
*5:	MTZJ9.1B-T2
*6:	MTZJ6.8C-T2
*7:	MTZJ12C-T2
*8:	UN2112-X
*9:	QQR0621-002Z
*10:	2SC5083/L-P/-T

DIFFERENCE LIST (*PARTS)

	14A3	1415EE	14A3/AU	14A3/HK
⚠ IC701	SCG -1413A-H2 MN18732 87JJ1	SCG -1426A-H2 MN18732 87JK1	SCG -1427A-H2 MN18732 87JL1	SCG -1428A-H2 MN18732 87JL1

MAIN PWB CIRCUIT DIAGRAMS (2/2) [AV-14A3, AV-14A3/AU, AV-14A3/HK, AV-1415EE]

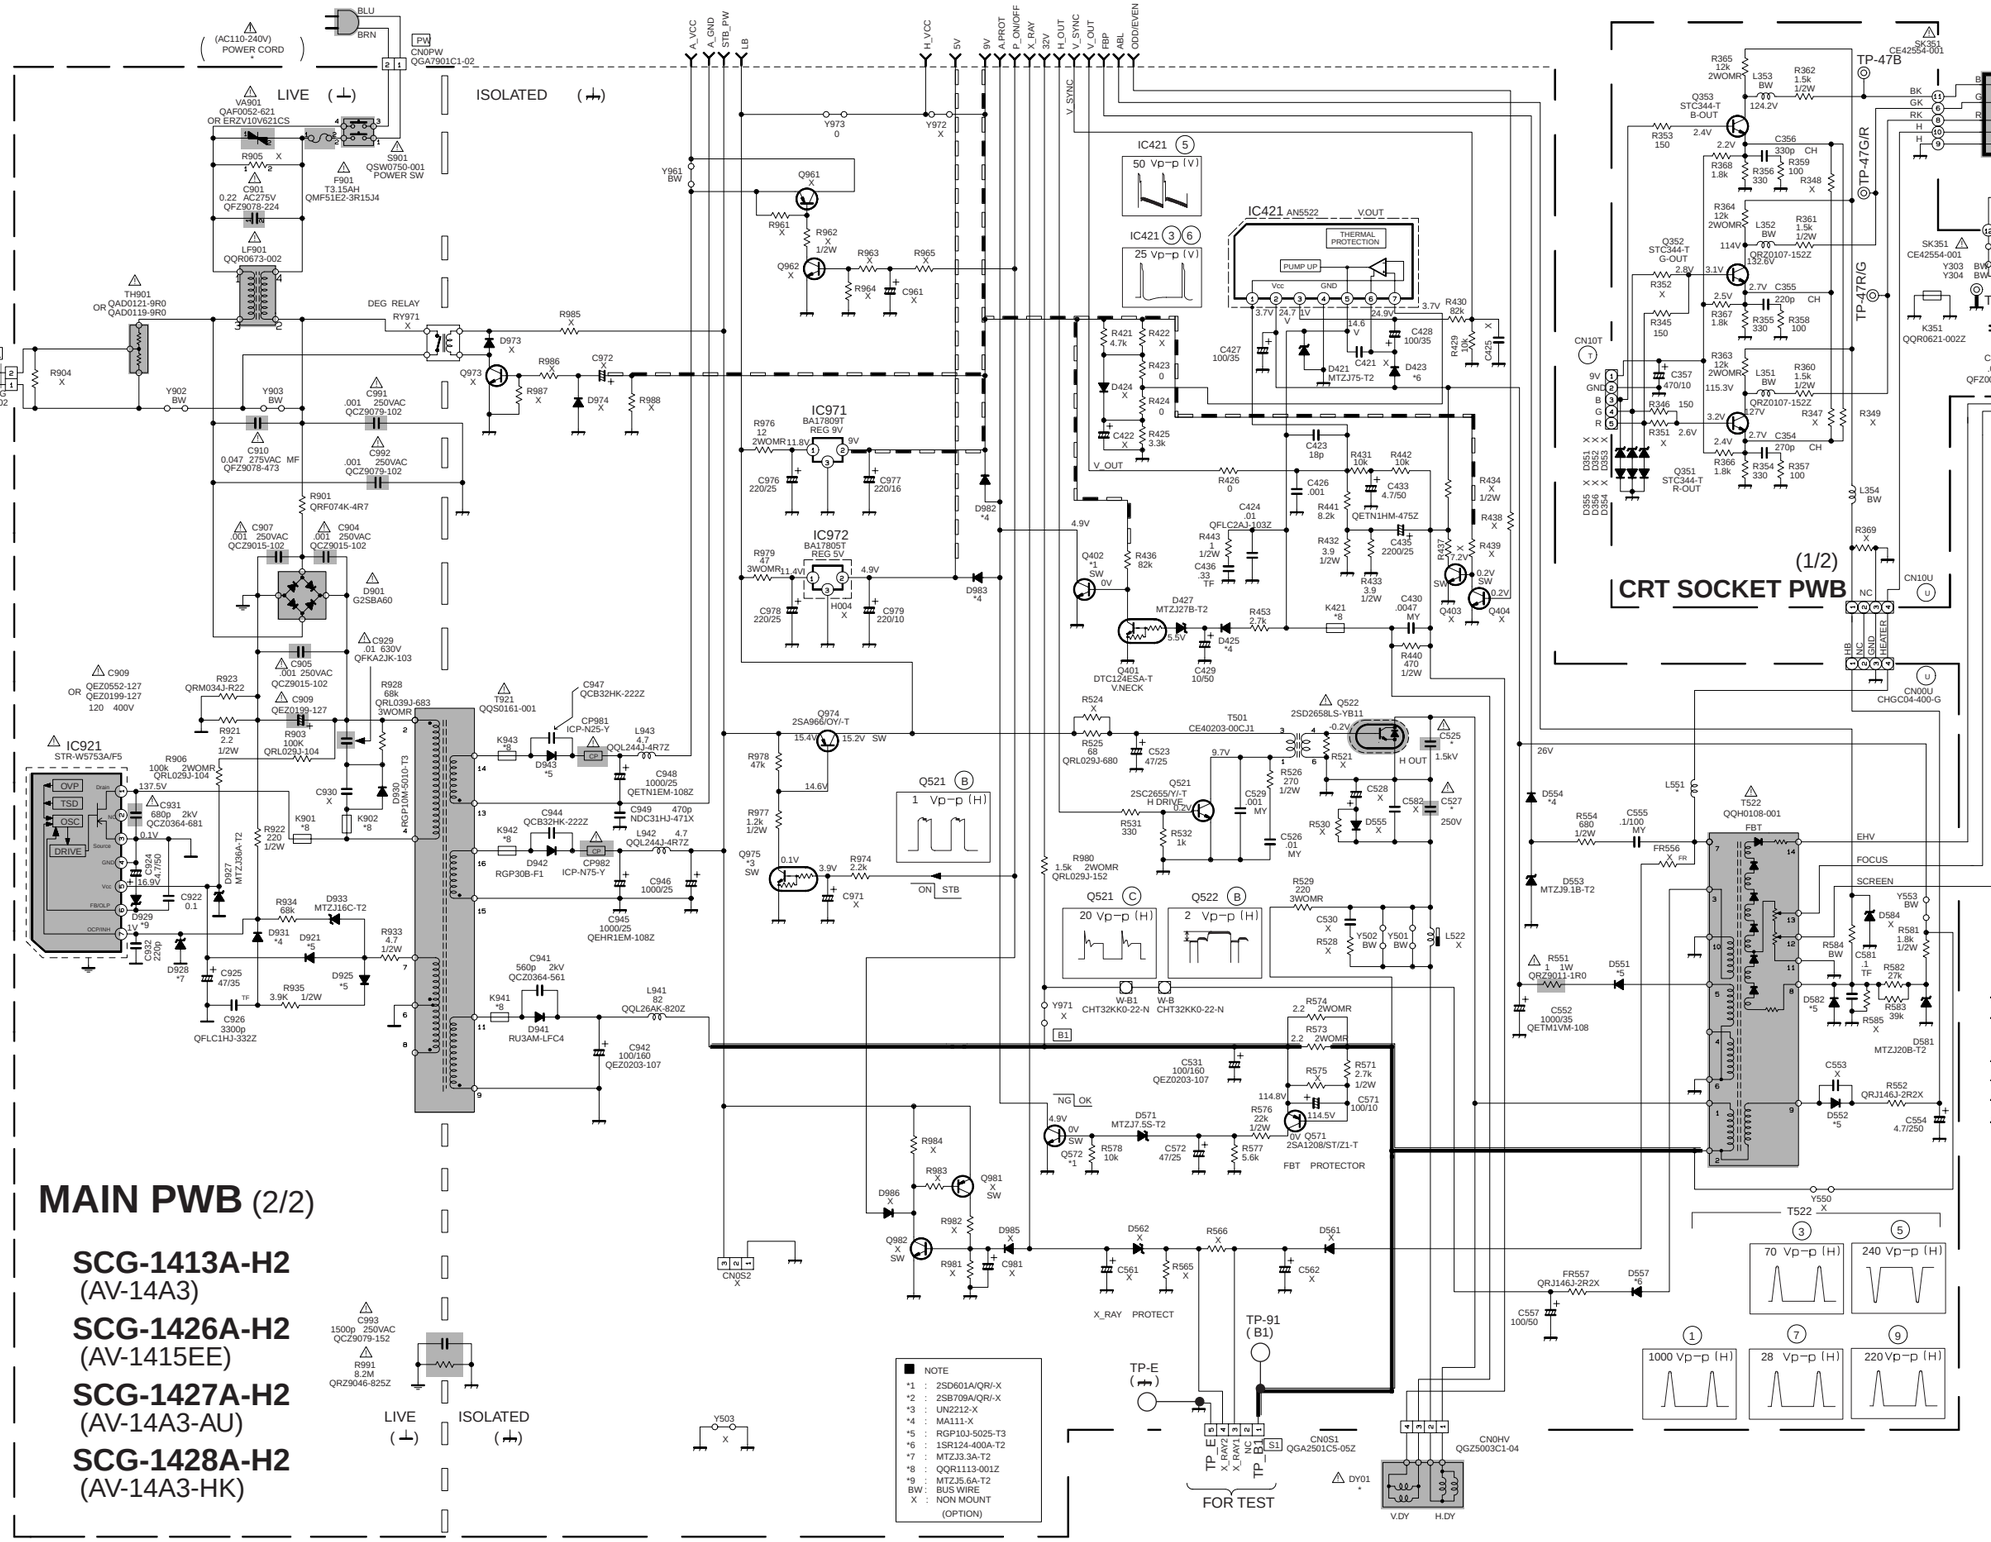

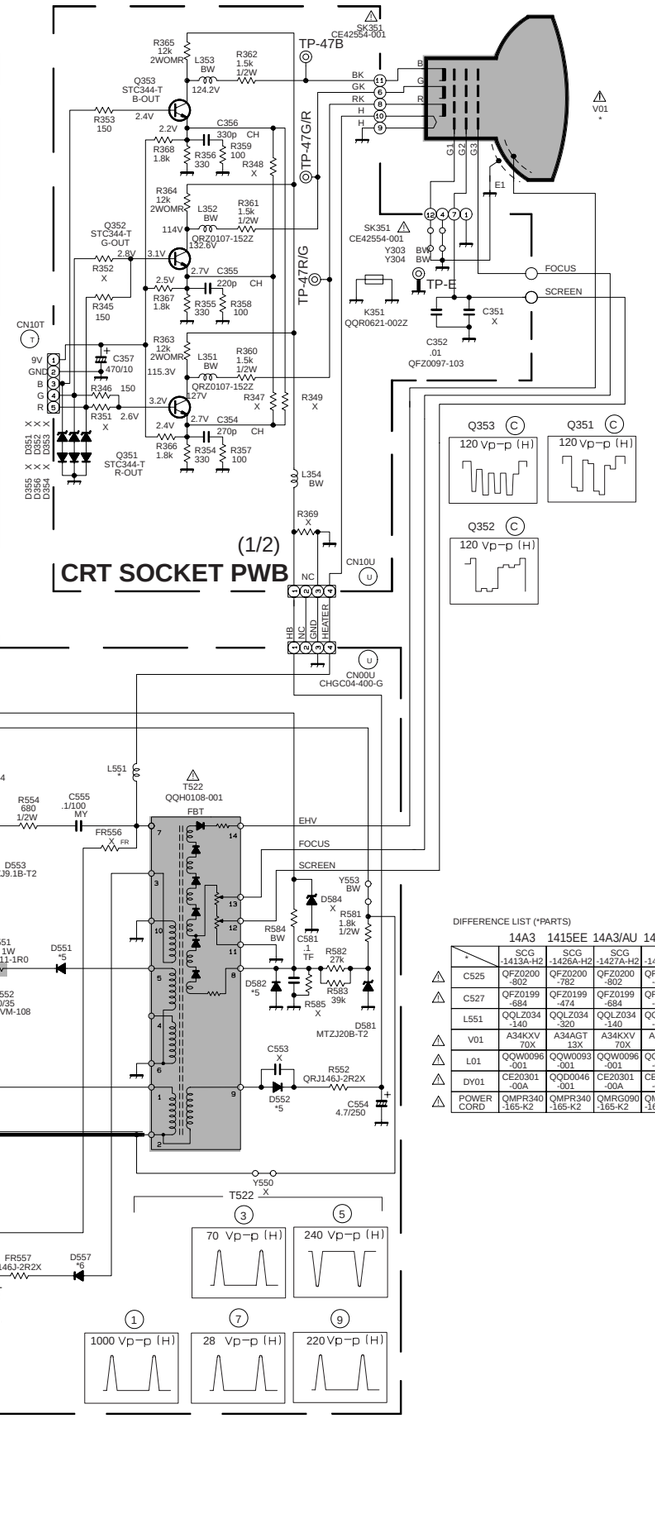

*	14A3 SCG -1413A-H2	1415EE SCG -1426A-H2	14A3/AU SCG -1427A-H2	14A3/HK SCG -1428A-H2
△ C525	QFZ0200 -802	QFZ0200 -782	QFZ0200 -802	QFZ0200 -802
△ C527	QFZ0199 -684	QFZ0199 -474	QFZ0199 -684	QFZ0199 -684
L551	QQLZ034 -140	QQLZ034 -320	QQLZ034 -140	QQLZ034 -140
△ V01	A34KXV 70X	A34AGT 13X	A34KXV 70X	A34KXV 70X
△ L01	QQW0096 -001	QQW0093 -001	QQW0096 -001	QQW0096 -001
△ DY01	CE20301 -00A	QQD0046 -001	CE20301 -00A	CE20301 -00A
POWER CORD	QMPR340 -165-K2	QMPR340 -165-K2	QMRG090 -165-K2	QMPR370 -165-E2

MAIN PWB (2/2)

SCG-1413A-H2
(AV-14A3)

SCG-1426A-H2
(AV-1415EE)

SCG-1427A-H2
(AV-14A3-AU)

SCG-1428A-H2
(AV-14A3-HK)

MAIN PWB CIRCUIT DIAGRAMS **(1/2) [AV-14AMG3, AV-14AMG3/-A]**

MAIN PWB ASS'Y (1/2)

SCG-1429A (AV-14AMG3)
SCG-1429A (AV-14AMG3-A)

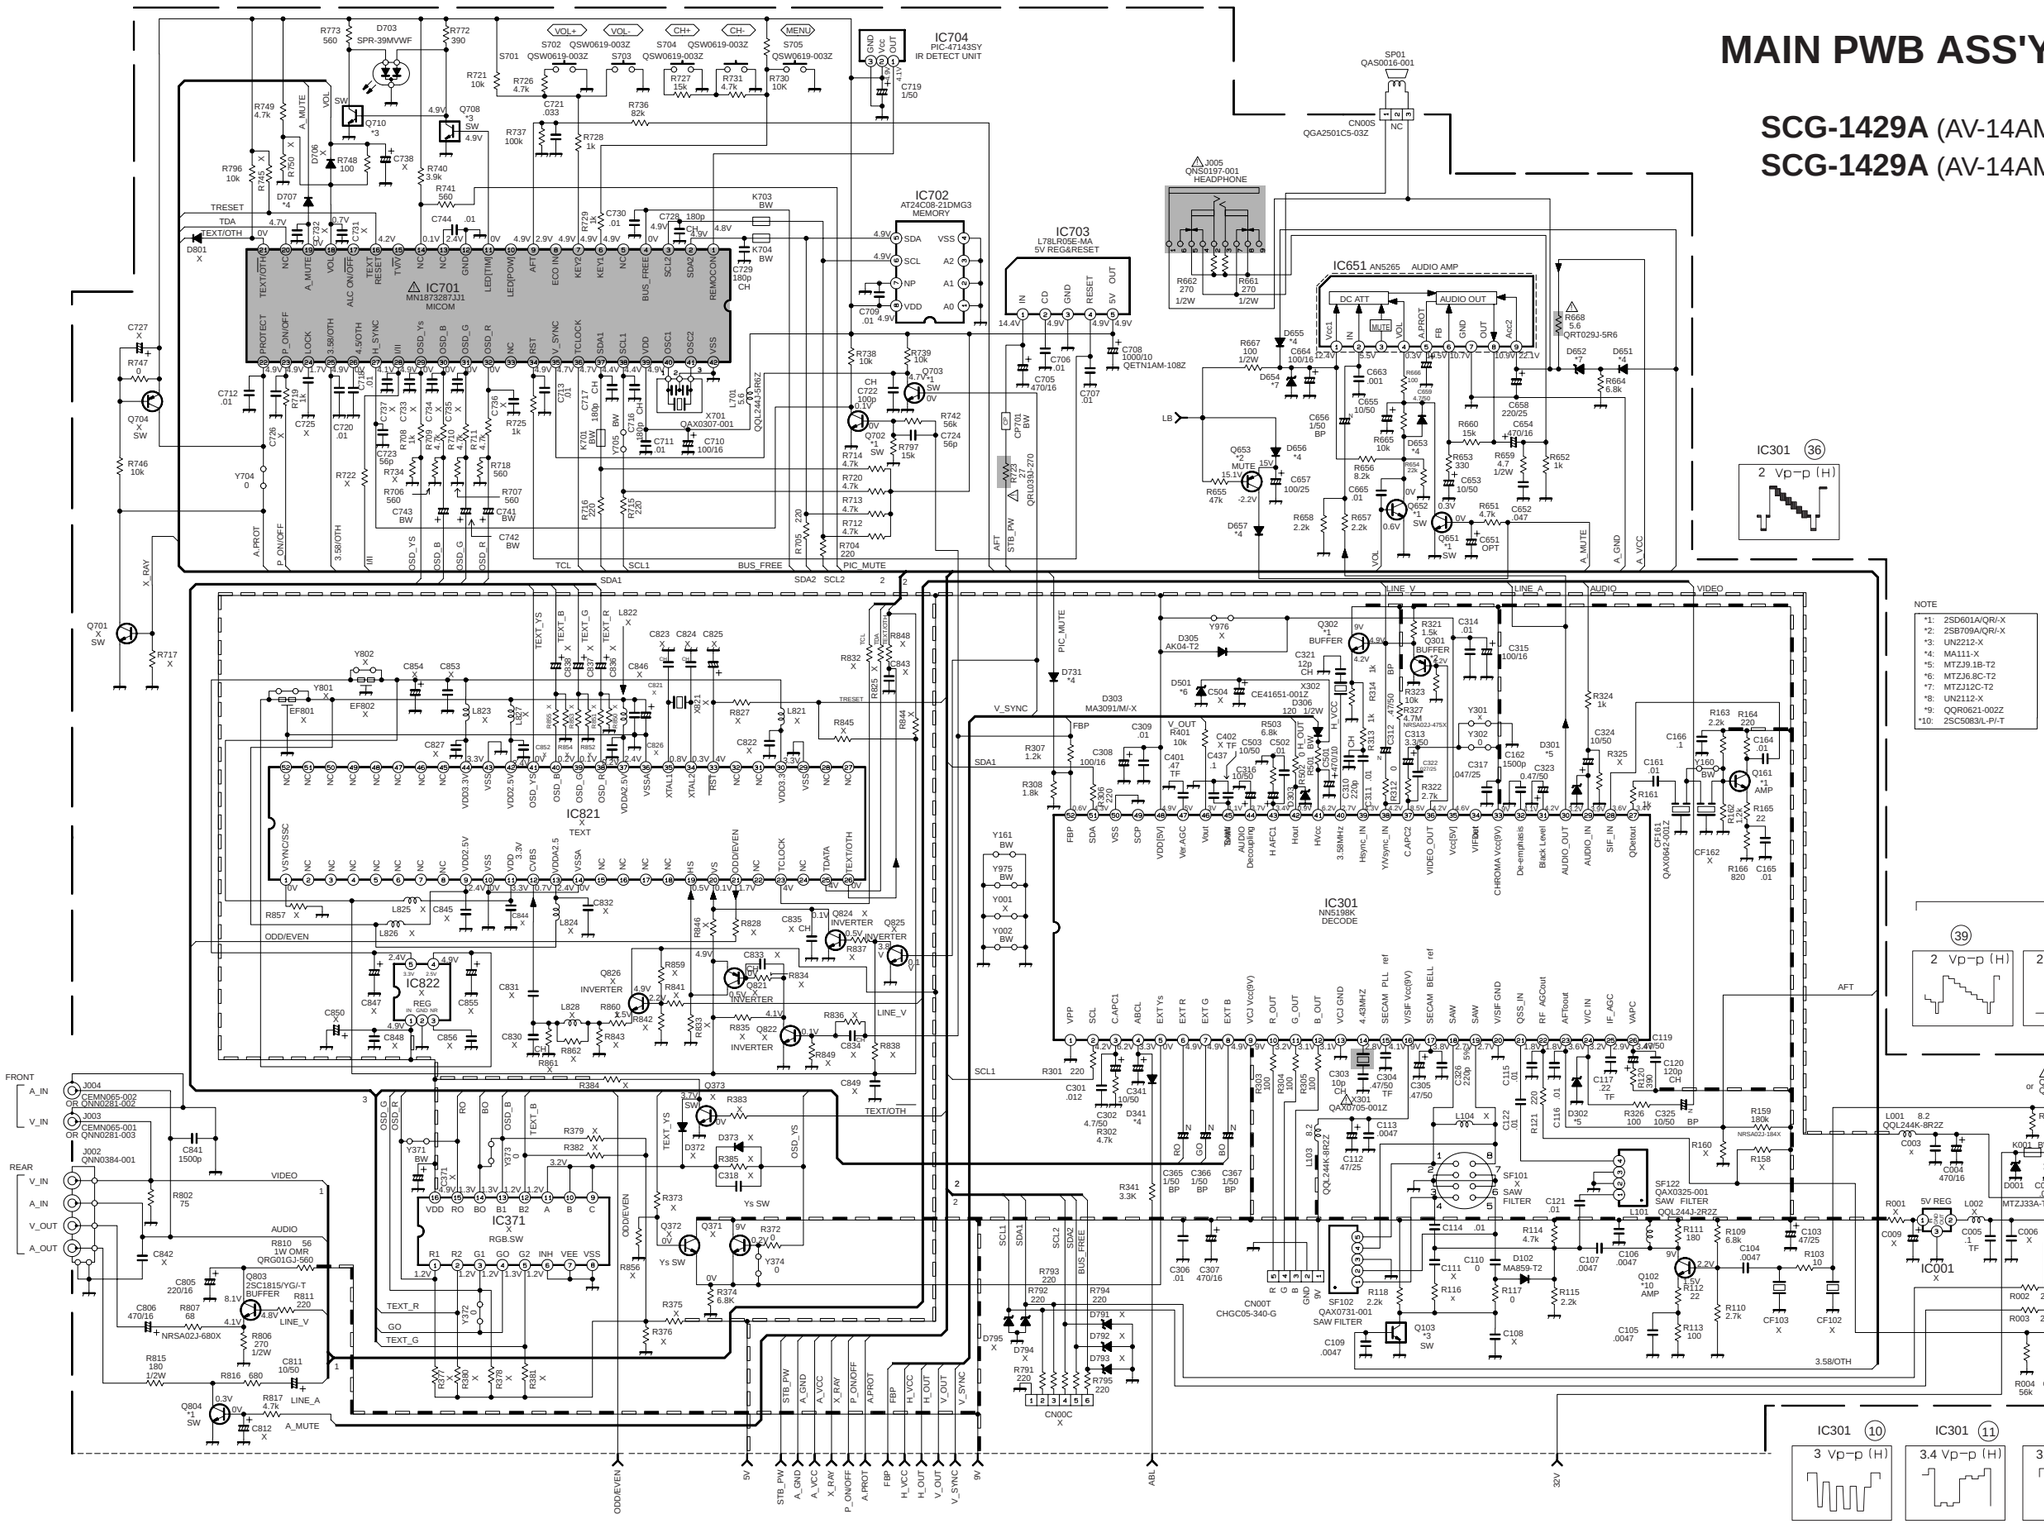

NOTE

*1:	2SD601A/QR/-X
*2:	2SB709A/QR/-X
*3:	UN2212-X
*4:	MA111-X
*5:	MTZJ9.1B-T2
*6:	MTZJ6.8C-T2
*7:	MTZJ12C-T2
*8:	UN2112-X
*9:	QQR0621-002Z
*10:	2SC5083/L-P/-T

MAIN PWB CIRCUIT DIAGRAM (2/2) [AV-14AMG3, AV-14AMG3/-A]

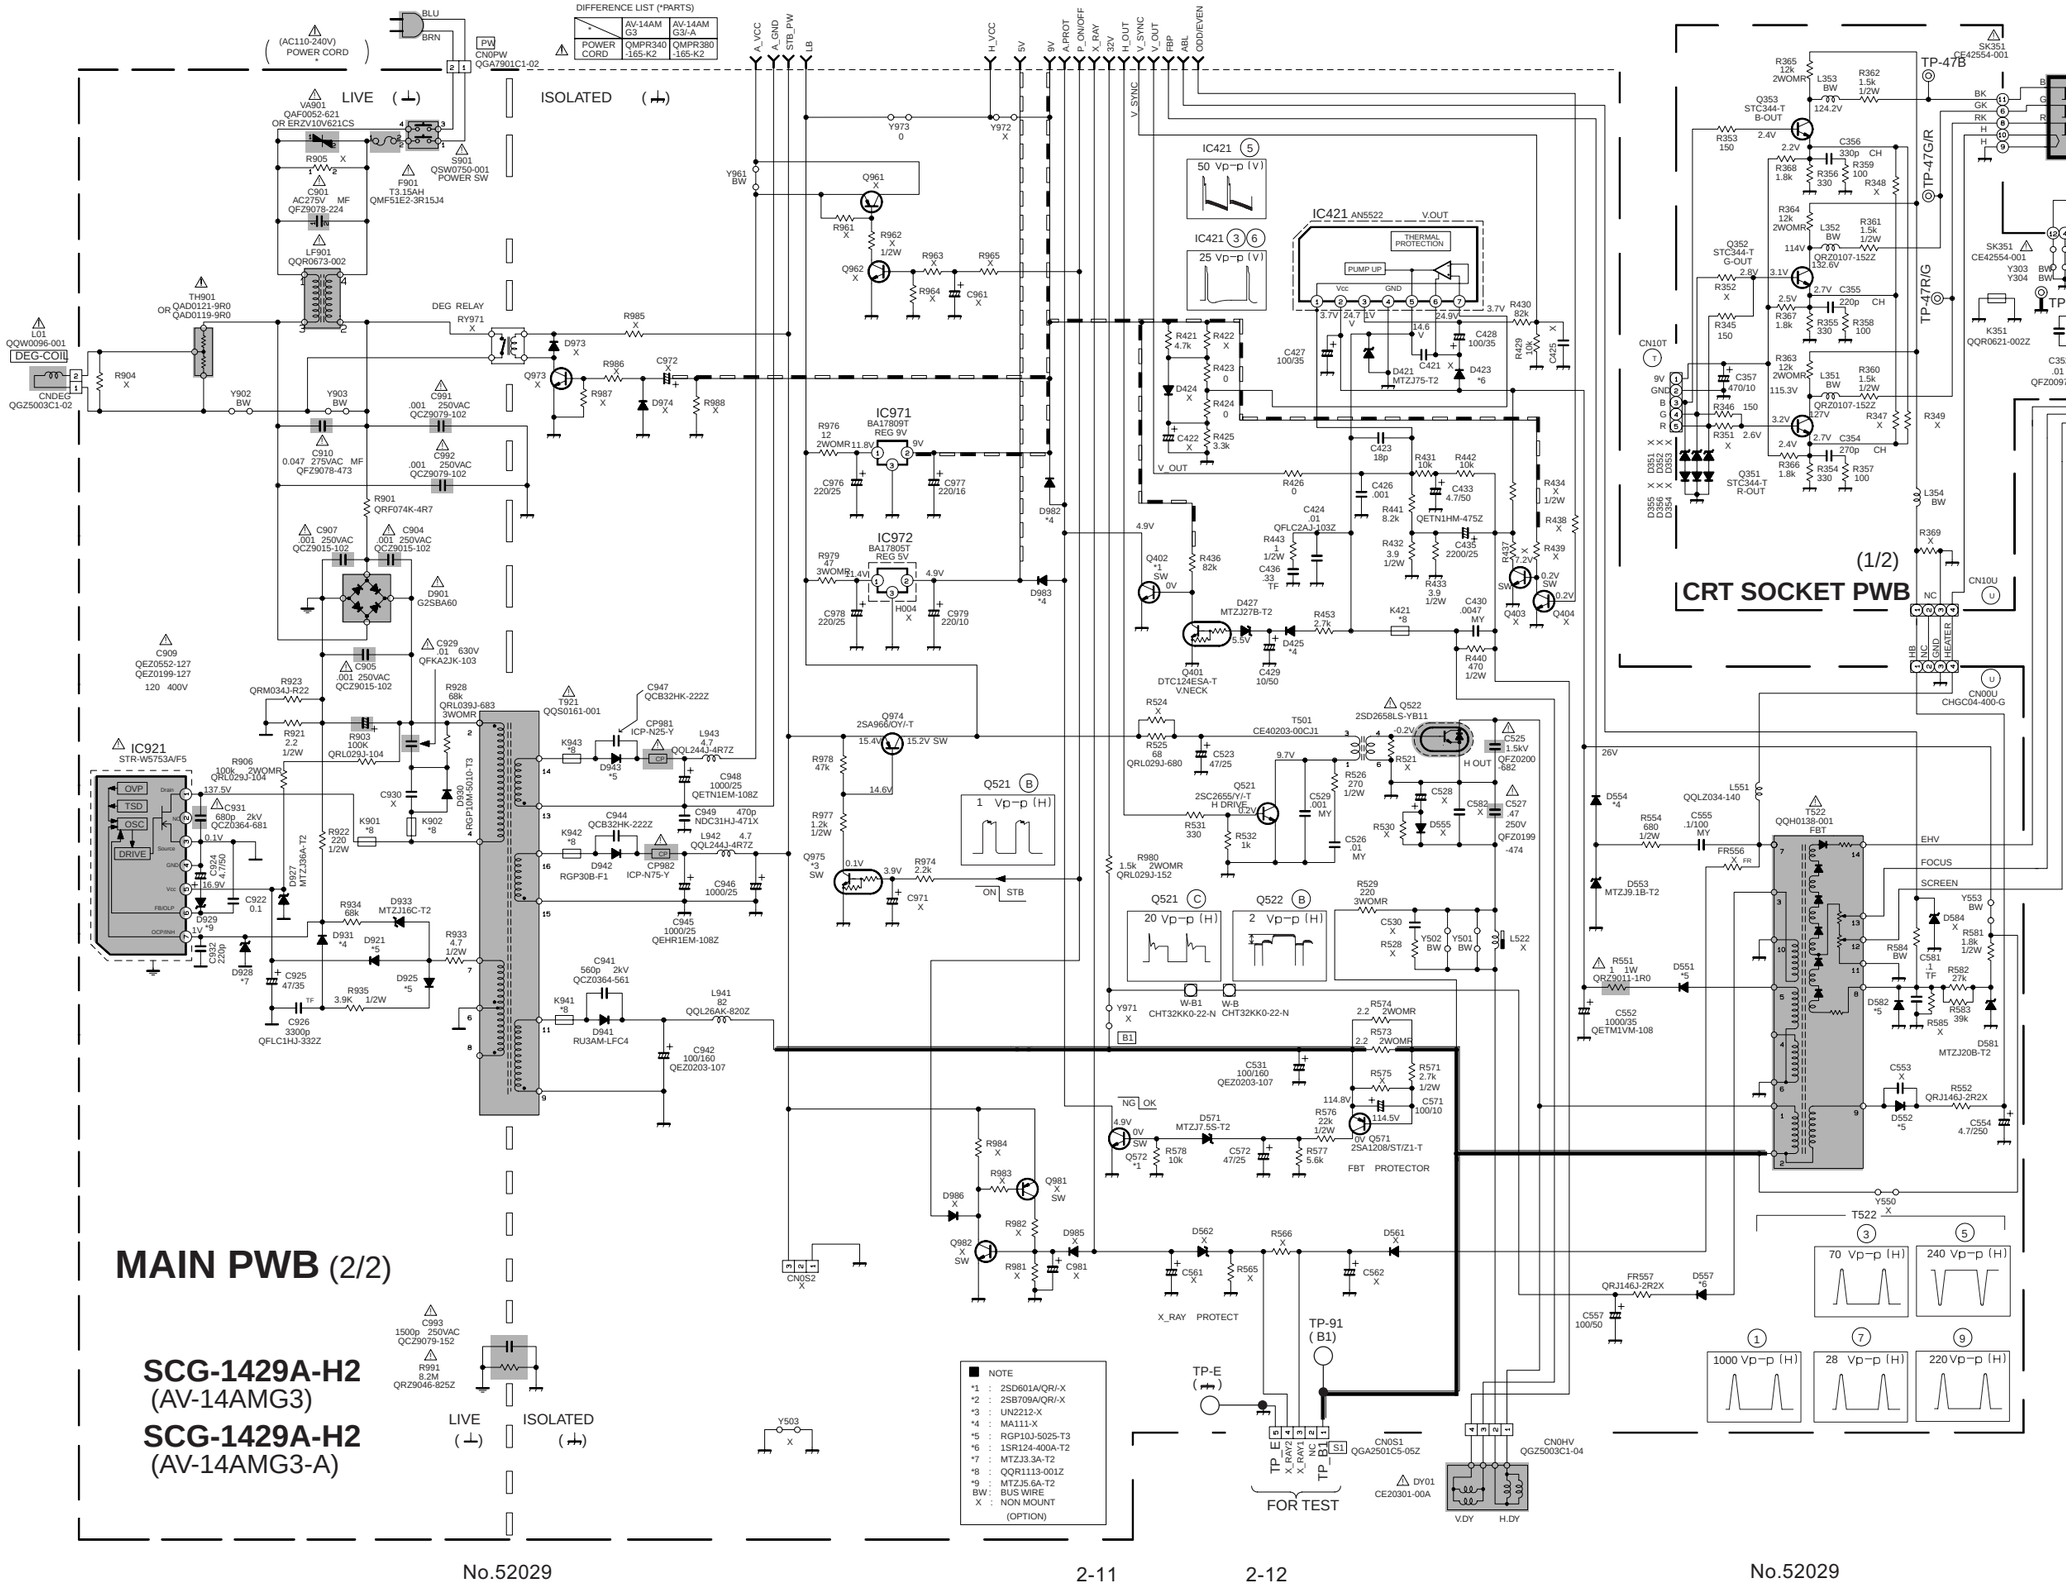

PARTS LIST

CAUTION

- The parts identified by the ⚠ symbol are important for the safety. Whenever replacing these parts, be sure to use specified ones to secure the safety .
- The parts not indicated in this Parts List and those which are filled with lines —— in the Parts No. columns will not be supplied.
- P. W. Board Ass'y will not be supplied, but those which are filled with the Parts No. in the Parts No. columns will be supplied.

ABBREVIATIONS OF RESISTORS, CAPACITORS AND TOLERANCES

RESISTORS		CAPACITORS	
C R	Carbon Resistor	C CAP.	Ceramic Capacitor
F R	Fusible Resistor	E CAP.	Electrolytic Capacitor
P R	Plate Resistor	M CAP.	Mylar Capacitor
V R	Variable Resistor	HV CAP.	High Voltage Capacitor
HV R	High Voltage Resistor	MF CAP.	Metalized Film Capacitor
MF R	Metal Film Resistor	MM CAP.	Metalized Mylar Capacitor
MG R	Metal Glazed Resistor	MP CAP.	Metalized Polystyrol Capacitor
MP R	Metal Plate Resistor	PP CAP.	Polypropylene Capacitor
OM R	Metal Oxide Film Resistor	PS CAP.	Polystyrol Capacitor
CMF R	Coating Metal Film Resistor	TF CAP.	Thin Film Capacitor
UNF R	Non-Flammable Resistor	MPP CAP.	Metalized Polypropylene Capacitor
CH V R	Chip Variable Resistor	TAN. CAP.	Tantalum Capacitor
CH MG R	Chip Metal Glazed Resistor	CH C CAP.	Chip Ceramic Capacitor
COMP. R	Composition Resistor	BP E CAP.	Bi-Polar Electrolytic Capacitor
LPTC R	Linear Positive Temperature Coefficient Resistor	CH AL E CAP.	Chip Aluminum Electrolytic Capacitor
		CH AL BP CAP.	Chip Aluminum Bi-Polar Capacitor
		CH TAN. E CAP.	Chip Tantalum Electrolytic Capacitor
		CH AL BP E CAP.	Chip Tantalum Bi-Polar Electrolytic Capacitor

TOLERANCES									
F	G	J	K	M	N	R	H	Z	P
±1%	±2%	±5%	±10%	±20%	±30%	+30% -10%	+50% -10%	+80% -20%	+100% -0%

CONTENTS

■ USING PW BOARD & REMOTE CONTROL UNIT ····· 34
■ REMOTE CONTROL UNIT PARTS LIST ····· 35
■ EXPLODED VIEW PARTS LIST ····· 36
■ EXPLODED VIEW ····· 37
■ PRINTED WIRING BOARD PARTS LIST

[AV-14A3]

● MAIN PW BOARD ASS'Y (SCG-1413A-H2) (With CRT SOCKET PW BOARD) ····· 38

[AV-14A3/AU]

● MAIN PW BOARD ASS'Y (SCG-1427A-H2) (With CRT SOCKET PW BOARD) ····· 41

[AV-14A3/HK]

● MAIN PW BOARD ASS'Y (SCG-1428A-H2) (With CRT SOCKET PW BOARD) ····· 44

[AV-1415EE]

● MAIN PW BOARD ASS'Y (SCG-1426A-H2) (With CRT SOCKET PW BOARD) ····· 47

[AV-14AMG3 / AV-14AMG3/-A]

● MAIN PW BOARD ASS'Y (SCG-1429A-H2) (With CRT SOCKET PW BOARD) ····· 50

■ PACKING PARTS LIST ····· 54
■ PACKING ····· 55

USING PW BOARD & REMOTE CONTROL UNIT

PWB ASS'Y / Model	MAIN PWB	REMOTE CONTROL UNIT
AV-14A3	SCG-1413A-H2	RM-C360GY-1H
AV-14A3/AU	SCG-1427A-H2	↑
AV-14A3/HK	SCG-1428A-H2	↑
AV-1415EE	SCG-1426A-H2	↑
AV-14AMG3	SCG-1429A-H2	↑
AV-14AMG3/-A	↑	↑

REMOTE CONTROL UNIT PARTS LIST (RM-C360GY-1H)

⚠ Ref.No.	Part No.	Part Name.	Description
1	25-1168F	BATTERY COVER	

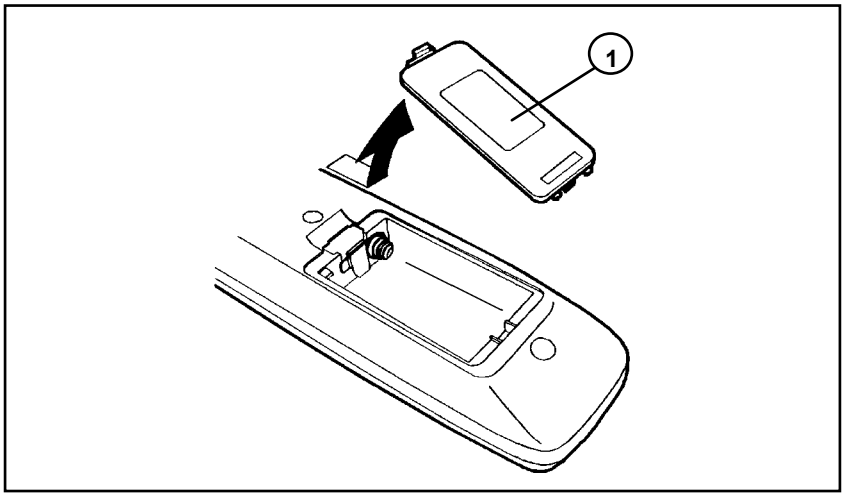

EXPLODED VIEW PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description	
⚠	V01	A34JXV70X	PICTURE TUBE	AV-14A3	
⚠	V01	A34JXV70X	PICTURE TUBE	AV-14A3/AU	
⚠	V01	A34JXV70X	PICTURE TUBE	AV-14A3/HK	
⚠	V01	A34AGT13X	PICTURE TUBE	AV-1415EE	
⚠	V01	A34JXV70X	PICTURE TUBE	AV-14AMG3	
⚠	V01	A34JXV70X	PICTURE TUBE	AV-14AMG3/-A	
⚠	L01	QQW0096-001	DEG COIL	or CELD025-005J6	AV-14A3
⚠	L01	QQW0096-001	DEG COIL	or CELD025-005J6	AV-14A3/AU
⚠	L01	QQW0096-001	DEG COIL	or CELD025-005J6	AV-14A3/HK
⚠	L01	QQW0093-001	DEG COIL	---	AV-1415EE
⚠	L01	QQW0096-001	DEG COIL	or CELD025-005J6	AV-14AMG3
⚠	L01	QQW0096-001	DEG COIL	or CELD025-005J6	AV-14AMG3/-A
⚠	DY01	CE20301-00A	DEF YOKE	AV-14A3	
⚠	DY01	CE20301-00A	DEF YOKE	AV-14A3/AU	
⚠	DY01	CE20301-00A	DEF YOKE	AV-14A3/HK	
⚠	DY01	QQD0046-001	DEF YOKE	AV-1415EE	
⚠	DY01	CE20301-00A	DEF YOKE	AV-14AMG3	
⚠	DY01	CE20301-00A	DEF YOKE	AV-14AMG3/-A	
⚠	T1522	QQH0108-001	F.B.TRANSF.	AV-14A3	
⚠	T1522	QQH0108-001	F.B.TRANSF.	AV-14A3/AU	
⚠	T1522	QQH0108-001	F.B.TRANSF.	AV-14A3/HK	
⚠	T1522	QQH0132-001	F.B.TRANSF.	AV-1415EE	
⚠	T1522	QQH0132-001	F.B.TRANSF.	AV-14AMG3	
⚠	T1522	QQH0132-001	F.B.TRANSF.	AV-14AMG3/-A	
⚠	1	LC10164-027A-H	FRONT CABINET	AV-14A3	
⚠	1	LC10164-027A-H	FRONT CABINET	AV-14A3/AU	
⚠	1	LC10164-027A-H	FRONT CABINET	AV-14A3/HK	
⚠	1	LC10164-028A-H	FRONT CABINET	AV-1415EE	
⚠	1	LC10164-029A-H	FRONT CABINET	AV-14AMG3	
⚠	1	LC10164-029A-H	FRONT CABINET	AV-14AMG3/-A	
	2	A48457-3-H	SPRING		
	3	CHGB0016-0A	BRAIDED ASSY		
	4	CE40305-00B	PC MAGNET	or CE42511-00A	
	5	QAS0016-001	SPEAKER		
⚠	6	LC30345-001A-H	SP HOLDER		
	7	CE42153-00AJ1	WEDGE ASSY	(X3)	
⚠	8	LC30347-003A-H	CONTROL KNOB		
⚠	9	LC30348-003A-H	POWER KNOB		
⚠	10	LC30346-001B-H	REMOCON LENS		
⚠	11	CM48144-002-H	PB STOPPER		
⚠	12	QMPR340-165-K2	POWER CORD	AV-14A3	
⚠	12	QMPG090-165-K2	POWER CORD	AV-14A3/AU	
⚠	12	QMPR370-165-E2	POWER CORD	AV-14A3/HK	
⚠	12	QMPR340-165-K2	POWER CORD	AV-1415EE	
⚠	12	QMPR340-165-K2	POWER CORD	AV-14AMG3	
⚠	12	QMPR380-165-K2	POWER CORD	AV-14AMG3/-A	
⚠	13	CM47005-A01-H	CORD CLAMP		
⚠	14	LC10165-001D-H	REAR COVER		
	15	QYSBSFG4016Z	TAP SCREW	(X4)	
	16	QYSBSF3010Z	TAP SCREW	(X1)	
	17	QYSBSBG4012M	TAP SCREW	(X1)	
⚠	18	GG20024-001A-H	RATING LABEL		

EXPLODED VIEW

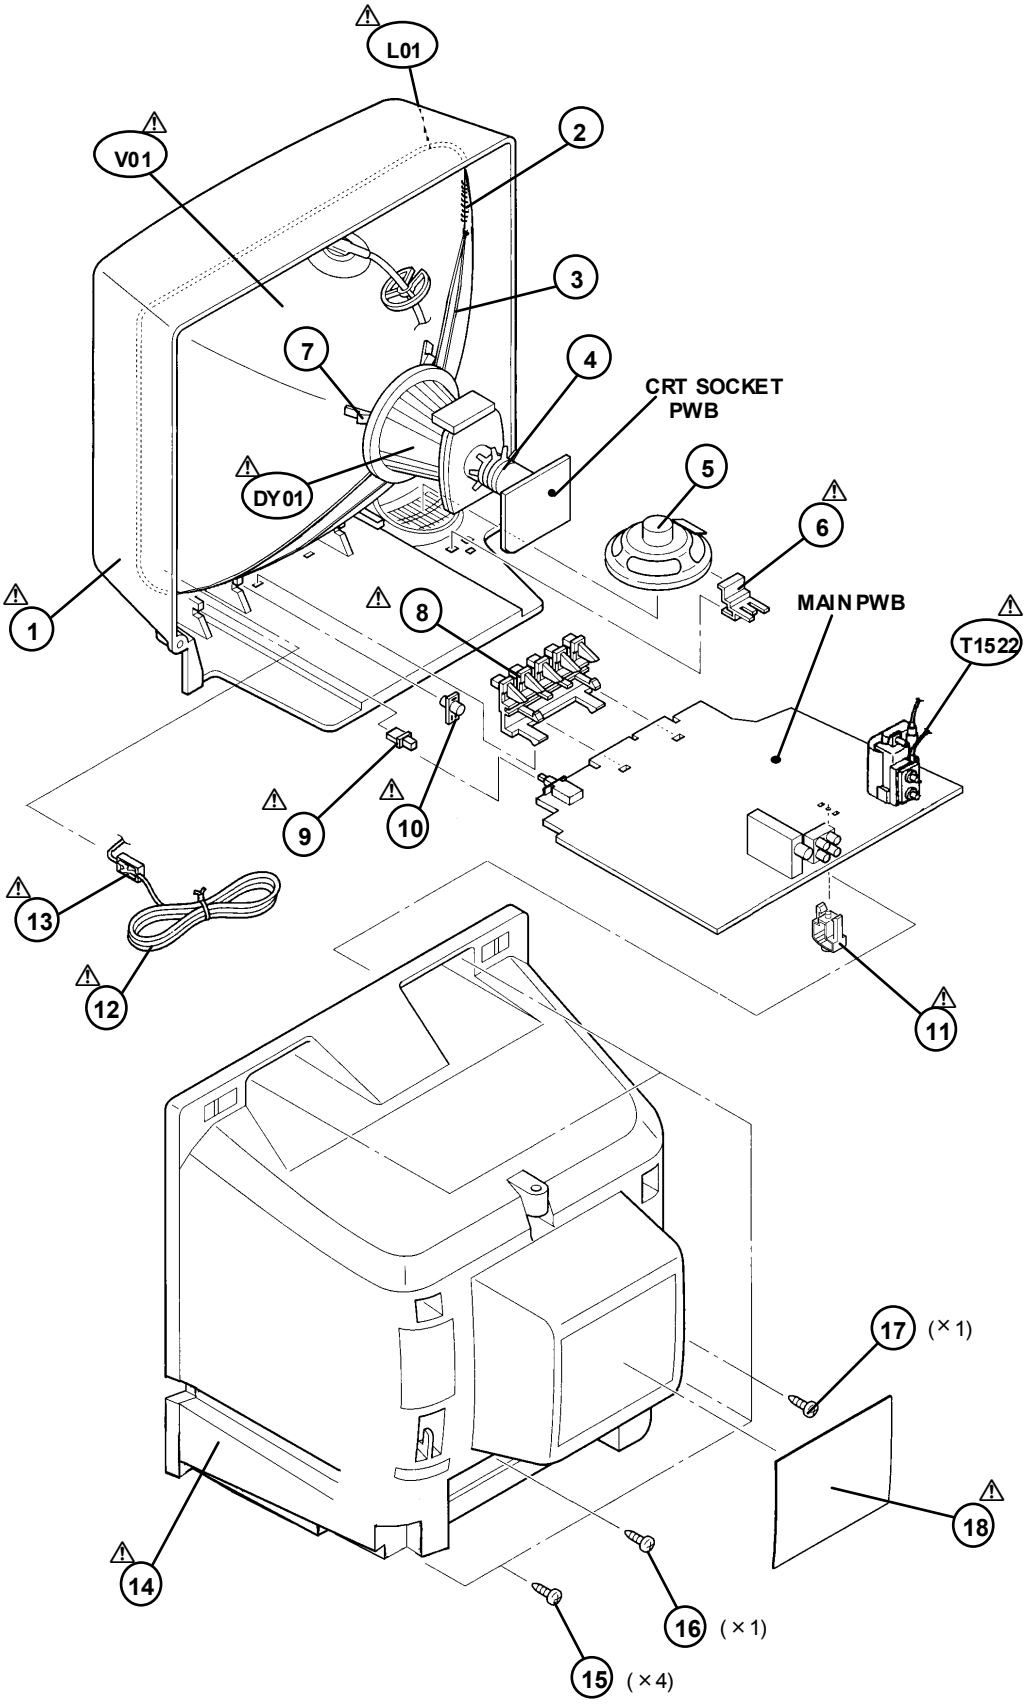

PRINTED WIRING BOARD PARTS LIST

[AV-14A3]

MAIN P.W. BOARD ASS'Y (SCG-1413A-H2)

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1002	NRSA63J-221X	MG R	220Ω 1/16W J
	R1003	NRSA63J-221X	MG R	220Ω 1/16W J
	R1004	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1102	NRSA63J-750X	MG R	75Ω 1/16W J
	R1103	NRSA63J-100X	MG R	10Ω 1/16W J
	R1109	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1110	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1111	NRSA63J-181X	MG R	180Ω 1/16W J
	R1112	NRSA63J-100X	MG R	10Ω 1/16W J
	R1113	NRSA63J-101X	MG R	100Ω 1/16W J
	R1120	NRSA63J-391X	MG R	390Ω 1/16W J
	R1121	NRSA63J-221X	MG R	220Ω 1/16W J
	R1159	NRSA02J-184X	MG R	180kΩ 1/10W J
	R1301	NRSA63J-221X	MG R	220Ω 1/16W J
	R1302	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1303	NRSA63J-101X	MG R	100Ω 1/16W J
	R1304	NRSA63J-101X	MG R	100Ω 1/16W J
	R1305	NRSA63J-101X	MG R	100Ω 1/16W J
	R1306	NRSA63J-221X	MG R	220Ω 1/16W J
	R1307	NRSA63J-122X	MG R	1.2kΩ 1/16W J
	R1308	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1312	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1313	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1314	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1321	NRSA63J-152X	MG R	1.5kΩ 1/16W J
	R1322	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1323	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1324	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1326	NRSA63J-101X	MG R	100Ω 1/16W J
	R1327	NRSA02J-475X	MG R	4.7MΩ 1/10W J
	R1341	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1345	NRSA63J-151X	MG R	150Ω 1/16W J
	R1346	NRSA63J-151X	MG R	150Ω 1/16W J
	R1353	NRSA63J-151X	MG R	150Ω 1/16W J
	R1354	NRSA63J-331X	MG R	330Ω 1/16W J
	R1355	NRSA63J-331X	MG R	330Ω 1/16W J
	R1356	NRSA63J-331X	MG R	330Ω 1/16W J
	R1357	NRSA63J-101X	MG R	100Ω 1/16W J
	R1358	NRSA63J-101X	MG R	100Ω 1/16W J
	R1359	NRSA63J-101X	MG R	100Ω 1/16W J
	R1360	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1361	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1362	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1363	QRL029J-123	OM R	12kΩ 2W J
	R1364	QRL029J-123	OM R	12kΩ 2W J
	R1365	QRL029J-123	OM R	12kΩ 2W J
	R1366	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1367	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1368	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1372	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1374	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1401	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1421	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1423	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1424	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1425	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1426	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1429	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1430	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1431	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1432	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1433	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1436	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1440	QRE121J-471Y	C R	470Ω 1/2W J
	R1441	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1442	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1443	QRE121J-1R0Y	C R	1.0Ω 1/2W J
	R1453	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1502	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1503	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1525	QRL029J-180	OM R	18Ω 2W J
	R1526	QRE121J-271Y	C R	270Ω 1/2W J
	R1529	QRL039J-681	OM R	680Ω 3W J

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1531	NRSA63J-331X	MG R	330Ω 1/16W J
	R1532	NRSA63J-102X	MG R	1kΩ 1/16W J
⚠	R1551	QRZ9011-1R0	F R	1.0Ω 1/2W J
	R1552	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	R1554	QRE121J-681Y	C R	680Ω 1/2W J
	R1571	QRE121J-222Y	C R	2.2kΩ 1/2W J
	R1573	QRT029J-2R2	MF R	2.2Ω 2W J
	R1574	QRT029J-1R5	MF R	1.5Ω 2W J
	R1576	QRE121J-223Y	C R	22kΩ 1/2W J
	R1577	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1578	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1581	QRE121J-182Y	C R	1.8kΩ 1/2W J
	R1582	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1583	NRSA63J-393X	MG R	39kΩ 1/16W J
	R1651	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1652	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1653	NRSA63J-331X	MG R	330Ω 1/16W J
	R1654	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1655	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1656	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1657	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1658	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1659	QRE121J-4R7Y	C R	4.7Ω 1/2W J
	R1660	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1661	QRE121J-271Y	C R	270Ω 1/2W J
	R1662	QRE121J-271Y	C R	270Ω 1/2W J
	R1664	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1665	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1666	NRSA63J-101X	MG R	100Ω 1/16W J
	R1667	QRE121J-101Y	C R	100Ω 1/2W J
⚠	R1668	QRT029J-5R6	MF R	5.6Ω 2W J
	R1704	NRSA63J-221X	MG R	220Ω 1/16W J
	R1705	NRSA63J-221X	MG R	220Ω 1/16W J
	R1706	NRSA63J-561X	MG R	560Ω 1/16W J
	R1707	NRSA63J-561X	MG R	560Ω 1/16W J
	R1708	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1709	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1710	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1711	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1712	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1713	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1714	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1715	NRSA63J-221X	MG R	220Ω 1/16W J
	R1716	NRSA63J-221X	MG R	220Ω 1/16W J
	R1718	NRSA63J-561X	MG R	560Ω 1/16W J
	R1719	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1720	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1721	NRSA63J-103X	MG R	10kΩ 1/16W J
⚠	R1723	QRL039J-270	OM R	27Ω 3W J
	R1725	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1726	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1727	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1728	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1729	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1730	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1731	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1736	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1737	NRSA63J-104X	MG R	100kΩ 1/16W J
	R1738	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1739	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1740	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1741	NRSA63J-561X	MG R	560Ω 1/16W J
	R1742	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1746	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1747	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1748	NRSA63J-101X	MG R	100Ω 1/16W J
	R1749	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1772	NRSA63J-391X	MG R	390Ω 1/16W J
	R1773	NRSA63J-561X	MG R	560Ω 1/16W J
	R1791	NRSA63J-221X	MG R	220Ω 1/16W J
	R1792	NRSA63J-221X	MG R	220Ω 1/16W J
	R1793	NRSA63J-221X	MG R	220Ω 1/16W J
	R1794	NRSA63J-221X	MG R	220Ω 1/16W J

[AV-14A3]

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1795	NRSA63J-221X	MG R	220Ω 1/16W J
	R1796	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1797	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1802	NRSA63J-750X	MG R	75Ω 1/16W J
	R1806	QRE121J-271Y	C R	270Ω 1/2W J
	R1807	NRSA63J-680X	MG R	68Ω 1/16W J
	R1810	QRG01GJ-560	OM R	56Ω 1W J
	R1811	NRSA63J-221X	MG R	220Ω 1/16W J
	R1815	QRE121J-181Y	C R	180Ω 1/2W J
	R1816	NRSA63J-681X	MG R	680Ω 1/16W J
	R1817	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1901	QRF074K-4R7	UNF R	4.7Ω 7W K
	R1903	QRL029J-104	OM R	100kΩ 2W J
	R1906	QRL029J-104	OM R	100kΩ 2W J
	R1921	QRE121J-2R2Y	C R	2.2Ω 1/2W J
	R1922	QRE121J-221Y	C R	220Ω 1/2W J
	R1923	QRM034J-R22	MP R	0.22Ω 3W J
	R1928	QRL039J-683	OM R	68kΩ 3W J
	R1933	QRE121J-4R7Y	C R	4.7Ω 1/2W J
	R1934	NRSA63J-683X	MG R	68kΩ 1/16W J
	R1935	QRE121J-392Y	C R	3.9kΩ 1/2W J
	R1974	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1976	QRT029J-8R2	MF R	8.2Ω 2W J
	R1977	QRE121J-122Y	C R	1.2kΩ 1/2W J
	R1978	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1979	QRL039J-220	OM R	22Ω 3W J
	R1980	QRL029J-152	OM R	1.5kΩ 2W J
⚠	R1991	QRZ9046-825Z	C R	8.2MΩ 1/2W K
	CAPACITOR			
	C1001	QETN1HM-106Z	E CAP.	10μF 50V M
	C1002	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1004	QETN1CM-477Z	E CAP.	470μF 16V M
	C1005	QFV71HJ-104Z	MF CAP.	0.1μF 50V J
	C1008	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1103	QETN1EM-476Z	E CAP.	47μF 25V M
	C1104	NCB31HK-472X	C CAP.	4700pF 50V K
	C1105	NCB31HK-472X	C CAP.	4700pF 50V K
	C1106	NCB31HK-472X	C CAP.	4700pF 50V K
	C1107	NCB31HK-472X	C CAP.	4700pF 50V K
	C1110	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	C1112	QETN1EM-476Z	E CAP.	47μF 25V M
	C1113	NCB31HK-472X	C CAP.	4700pF 50V K
	C1115	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1116	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1117	QFV71HJ-224Z	MF CAP.	0.22μF 50V J
	C1119	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1120	NDC31HJ-121X	C CAP.	120pF 50V J
	C1121	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1122	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1162	NCB31HK-152X	C CAP.	1500pF 50V K
	C1301	NCB31HK-123X	C CAP.	0.012μF 50V K
	C1302	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1303	NDC31HJ-100X	C CAP.	10pF 50V J
	C1304	QFV71HJ-474Z	MF CAP.	0.47μF 50V J
	C1305	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1306	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1307	QETN1CM-477Z	E CAP.	470μF 16V M
	C1308	QETN1CM-107Z	E CAP.	100μF 16V M
	C1309	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1310	NDC31HJ-221X	C CAP.	220pF 50V J
	C1311	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1312	QENC1HM-474Z	E CAP.	0.47μF 50V M
	C1313	QETN1HM-335Z	E CAP.	3.3μF 50V M
	C1314	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1315	QETN1CM-107Z	E CAP.	100μF 16V M
	C1316	QETN1HM-106Z	E CAP.	10μF 50V M
	C1317	NCB31EK-473X	C CAP.	0.047μF 25V K
	C1321	NDC31HJ-120X	C CAP.	12pF 50V J
	C1322	NCB31EK-273X	C CAP.	0.027μF 25V K
	C1323	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1324	QETN1HM-106Z	E CAP.	10μF 50V M
	C1325	QENC1HM-106Z	BP E CAP.	10μF 50V M
	C1326	NCS21HJ-221X	C CAP.	220pF 50V J
	C1341	QETN1HM-106Z	E CAP.	10μF 50V M
	C1352	QFZ0097-103	MM CAP.	0.01μF 125V K
	C1354	NDC31HJ-271X	C CAP.	270pF 50V J

⚠	Symbol No.	Part No.	Part Name	Description
	CAPACITOR			
	C1355	NDC31HJ-221X	C CAP.	220pF 50V J
	C1356	NDC31HJ-331X	C CAP.	330pF 50V J
	C1357	QETN1AM-477Z	E CAP.	470μF 10V M
	C1365	QENC1HM-105Z	E CAP.	1μF 50V M
	C1366	QENC1HM-105Z	E CAP.	1μF 50V M
	C1367	QENC1HM-105Z	E CAP.	1μF 50V M
	C1401	QFV71HJ-474Z	MF CAP.	0.47μF 50V J
	C1423	QCS32HJ-180Z	C CAP.	18pF 500V J
	C1424	QFLC2AJ-103Z	M CAP.	0.01μF 100V J
	C1426	QFLC1HJ-102Z	M CAP.	1000pF 50V J
	C1427	QETN1VM-107Z	E CAP.	100μF 35V M
	C1428	QETN1VM-107Z	E CAP.	100μF 35V M
	C1429	QETN1HM-106Z	E CAP.	10μF 50V M
	C1430	QFLC2AJ-472Z	M CAP.	4700pF 100V J
	C1433	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1435	QETM1EM-228	E CAP.	2200μF 25V M
	C1436	QFV71HJ-334Z	MF CAP.	0.33μF 50V J
	C1437	NCB31HK-104X	C CAP.	0.1μF 50V K
	C1501	QETN1AM-477Z	E CAP.	470μF 10V M
	C1502	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1503	QETN1HM-106Z	E CAP.	10μF 50V M
	C1523	QETN1EM-476Z	E CAP.	47μF 25V M
⚠	C1525	QFZ0200-802	MPP CAP.	8000pF 1.5kVH±3%
	C1526	QFLC1HJ-103Z	M CAP.	0.01μF 50V J
⚠	C1527	QFZ0199-684	MPP CAP	0.68μF 250V J
	C1529	QFLC2AJ-102Z	M CAP.	1000pF 100V J
	C1531	QEZ0203-107	E CAP.	100μF 160V M
	C1552	QETM1VM-108	E CAP.	1000μF 35V M
	C1554	QETN2EM-475Z	E CAP.	4.7μF 250V M
	C1555	QFLC2AJ-104Z	M CAP.	0.1μF 100V J
	C1557	QETN1HM-107Z	E CAP.	100μF 50V M
	C1571	QETN1AM-107Z	E CAP.	100μF 10V M
	C1572	QETN1EM-476Z	E CAP.	47μF 25V M
	C1581	QFV71HJ-104Z	MF CAP.	0.1μF 50V J
	C1652	NCB31HK-473X	C CAP.	0.047μF 50V K
	C1653	QETN1HM-106Z	E CAP.	10μF 50V M
	C1654	QETN1CM-477Z	E CAP.	470μF 16V M
	C1655	QETN1HM-106Z	E CAP.	10μF 50V M
	C1656	QENC1HM-105Z	E CAP.	1μF 50V M
	C1657	QETN1EM-107Z	E CAP.	100μF 25V M
	C1658	QETN1EM-227Z	E CAP.	220μF 25V M
	C1659	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1663	NCB31HK-102X	C CAP.	1000pF 50V K
	C1664	QETN1CM-107Z	E CAP.	100μF 16V M
	C1665	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1705	QETN1CM-477Z	E CAP.	470μF 16V M
	C1706	NCB31HK-104X	C CAP.	0.1μF 50V K
	C1707	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1708	QETN1AM-108Z	E CAP.	1000μF 10V M
	C1709	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1710	QETN1CM-107Z	E CAP.	100μF 16V M
	C1711	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1712	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1713	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1716	NDC31HJ-181X	C CAP.	180pF 50V J
	C1717	NDC31HJ-181X	C CAP.	180pF 50V J
	C1718	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1719	QETN1HM-105Z	E CAP.	1μF 50V M
	C1720	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1721	NCB31EK-333X	C CAP.	0.033μF 25V K
	C1722	NDC31HJ-101X	C CAP.	100pF 50V J
	C1723	NDC31HJ-560X	C CAP.	56pF 50V J
	C1724	NDC31HJ-560X	C CAP.	56pF 50V J
	C1728	NDC31HJ-181X	C CAP.	180pF 50V J
	C1729	NDC31HJ-181X	C CAP.	180pF 50V J
	C1730	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1744	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1805	QETN1CM-227Z	E CAP.	220μF 16V M
	C1806	QETN1CM-477Z	E CAP.	470μF 16V M
	C1811	QETN1HM-106Z	E CAP.	10μF 50V M
	C1841	NCB31HK-152X	C CAP.	1500pF 50V K
⚠	C1901	QFZ9078-224	MPF CAP.	0.22μFAC275V M
⚠	C1904	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1905	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1907	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1909	QEZ0552-127	E CAP. or QEZ0199-127	120μF 400V M
⚠	C1910	QFZ9078-473	MPF CAP.	0.047μFAC275V M
	C1922	QFLC1HJ-104Z	M CAP.	0.1μF 50V J

[AV-14A3]

⚠	Symbol No.	Part No.	Part Name	Description
	CAPACITOR			
	C1924	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1925	QETN1VM-476Z	E CAP.	47μF 35V M
	C1926	QFLC1HJ-332Z	M CAP.	3300pF 50V J
⚠	C1929	QFKA2JK-103	MM CAP.	0.01μF 630V K
⚠	C1931	QCZ0364-681	C CAP.	680pF 2kV K
	C1932	NDC31HJ-221X	C CAP.	220pF 50V J
	C1941	QCZ0364-561	C CAP.	560pF 2kV K
	C1942	QEZ0203-107	E CAP.	100μF 160V M
	C1944	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1945	QEHR1EM-108Z	E CAP.	1000μF 25V M
	C1946	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1947	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1948	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1949	NDC31HJ-471X	C CAP.	470pF 50V J
	C1976	QETN1EM-227Z	E CAP.	220μF 25V M
	C1977	QETN1CM-227Z	E CAP.	220μF 16V M
	C1978	QETN1EM-227Z	E CAP.	220μF 25V M
	C1979	QETN1AM-227Z	E CAP.	220μF 10V M
⚠	C1991	QCZ9079-102	C CAP.	1000pFAC250V M
⚠	C1992	QCZ9079-102	C CAP.	1000pFAC250V M
⚠	C1993	QCZ9079-152	C CAP.	1500pFAC250V M
	TRANSFORMER			
	T1501	CE40203-00CJ1	DRIVE TRANSF.	
⚠	T1522	QQH0108-001	F.B.TRANSF.	
⚠	T1921	QQS0161-001	SW TRANSF.	
	COIL			
	L1001	QQL244K-8R2Z	COIL	8.2μH K
	L1101	QQL244J-2R2Z	COIL	2.2μH J
	L1103	QQL244K-8R2Z	COIL	8.2μH K
	L1551	QQLZ034-140	HEATER CHOKE	
	L1701	QQL244J-5R6Z	COIL	5.6μH J
	L1941	QQL26AK-820Z	COIL	82μH K
	L1942	QQL244J-4R7Z	INDUCTOR	
	L1943	QQL244J-4R7Z	INDUCTOR	
	DIODE			
	D1001	MTZJ33A-T2	ZENER DIODE	
	D1301	MTZJ9.1B-T2	ZENER DIODE	
	D1302	MTZJ9.1B-T2	ZENER DIODE	
	D1305	AK04-T2	SB DIODE	
	D1306	QRE121J-121Y	C R	120Ω 1/2W J
	D1341	MA111-X	SI.DIODE	
	D1421	MTZJ75-T2	ZENER DIODE	
	D1423	1SR124-400A-T2	SI.DIODE	
	D1425	MA111-X	SI.DIODE	
	D1427	MTZJ27B-T2	ZENER DIODE	
	D1501	MTZJ6.8C-T2	ZENER DIODE	
	D1551	RGP10J-5025-T3	SI.DIODE	
	D1552	RGP10J-5025-T3	SI.DIODE	
	D1553	MTZJ9.1B-T2	ZENER DIODE	
	D1554	MA111-X	SI.DIODE	
	D1557	1SR124-400A-T2	SI.DIODE	
	D1571	MTZJ7.5S-T2	ZENER DIODE	
	D1581	MTZJ20B-T2	ZENER DIODE	
	D1582	RGP10J-5025-T3	SI.DIODE	
	D1651	MA111-X	SI.DIODE	
	D1652	MTZJ12C-T2	ZENER DIODE	
	D1653	MA111-X	SI.DIODE	
	D1654	MTZJ12C-T2	ZENER DIODE	
	D1655	MA111-X	SI.DIODE	
	D1656	MA111-X	SI.DIODE	
	D1657	MA111-X	SI.DIODE	
	D1703	SPR-39MVWF	LED	
	D1707	MA111-X	SI.DIODE	
	D1731	MA111-X	SI.DIODE	
⚠	D1901	G2SBA60	BRIDGE DIODE	
	D1921	RGP10J-5025-T3	SI.DIODE	
	D1925	RGP10J-5025-T3	SI.DIODE	
	D1927	MTZJ36A-T2	ZENER DIODE	
	D1928	MTZJ3.3A-T2	ZENER DIODE	
	D1929	MTZJ5.6A-T2	ZENER DIODE	
	D1930	RGP10M-5010-T3	SI.DIODE	
	D1931	MA111-X	SI.DIODE	
	D1933	MTZJ16C-T2	ZENER DIODE	
	D1941	RU3AM-LFC4	SI.DIODE	

⚠	Symbol No.	Part No.	Part Name	Description
	DIODE			
	D1942	RU3YX-LFC4	SI.DIODE	
	D1943	RGP10J-5025-T3	SI.DIODE	
	D1982	MA111-X	SI.DIODE	
	D1983	MA111-X	SI.DIODE	
	TRANSISTOR			
	Q1102	2SC5083/L-P/-T	SI.TRANSISTOR	
	Q1301	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1302	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1351	STC344-T	SI.TRANSISTOR	
	Q1352	STC344-T	SI.TRANSISTOR	
	Q1353	STC344-T	SI.TRANSISTOR	
	Q1401	DTC124ESA-T	DIGI.TRANSISTOR	
	Q1402	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1521	2SC2655/Y/-T	SI.TRANSISTOR	
⚠	Q1522	2SD2658LS-YB11	POWER TRANSISTOR	H.OUT
	Q1571	2SA1208/ST/Z1-T	SI.TRANSISTOR	
	Q1572	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1651	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1652	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1653	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1702	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1703	UN2212-X	DIGI.TRANSISTOR	
	Q1708	UN2212-X	DIGI.TRANSISTOR	
	Q1710	UN2212-X	DIGI.TRANSISTOR	
	Q1803	2SC1815/YG/-T	SI.TRANSISTOR	
	Q1804	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1974	2SA966/OY/-T	SI.TRANSISTOR	
	Q1975	UN2212-X	DIGI.TRANSISTOR	
	IC			
	IC1301	NN5198K	I C	
	IC1421	AN5522	I C	
	IC1651	AN5265	I C	
⚠	IC1701	MN1873287JJ	I C(MCU)	
	IC1702	AT24C08-21DMG3	I C	(SERVICE)
	IC1703	L78LR05E-MA	I C	
	IC1704	PIC-47143SY	IR DETECT UNIT	
⚠	IC1921	STR-W5753A/F5	I C	
	IC1971	BA17809T	I C	
	IC1972	BA17805T	I C	
	OTHERS			
		LC30349-001A-H	LED HOLDER	
⚠	CP1981	ICP-N25-Y	I.C.PROTECT	
⚠	CP1982	ICP-N75-Y	I.C.PROTECT	
⚠	F1901	QMF51E2-3R15J4	FUSE	3.15A
	FC1901	CEMG002-001Z	FUSE CLIP	
	FR1557	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	J1002	QNN0384-001	PIN JACK	
	J1003	QNN0281-003	PIN JACK	or CEMN0065-001
	J1004	QNN0281-002	PIN JACK	or CEMN0065-002
⚠	J1005	QNS0197-001	3.5 JACK	
	K1351	QQR0621-002Z	FERRITE BEADS	
	K1421	QQR1113-001Z	FERRITE BEADS	
	K1901	QQR1113-001Z	FERRITE BEADS	
	K1902	QQR1113-001Z	FERRITE BEADS	
	K1941	QQR1113-001Z	FERRITE BEADS	
	K1942	QQR1113-001Z	FERRITE BEADS	
	K1943	QQR1113-001Z	FERRITE BEADS	
⚠	LF1901	QQR0673-002	LINE FILTER	
	S1701	QSW0619-003Z	TACT SWITCH	VOL+
	S1702	QSW0619-003Z	TACT SWITCH	VOL-
	S1703	QSW0619-003Z	TACT SWITCH	CH+
	S1704	QSW0619-003Z	TACT SWITCH	CH-
	S1705	QSW0619-003Z	TACT SWITCH	MENU
⚠	S1901	QSW0750-001	PUSH SWITCH	POWER SW
	SF1102	QAX0666-002	SAW FILTER	
	SF1122	QAX0325-001	SAW FILTER	
⚠	SK1351	CE42554-001	C R T SOCKET	or QNZ0536-001
⚠	TH1901	QAD0121-9R0	THERMISTOR	or QAD0119-9R0
⚠	TU1001	QAU0246-002	TUNER	
⚠	VA1901	ERZV10V621CS	VARISTOR	or QAF0052-621
⚠	X1301	QAX0705-001Z	CRYSTAL	
	X1302	CE41651-001Z	X-TAL	
	X1701	QAX0307-001	C RESONATOR	

PRINTED WIRING BOARD PARTS LIST

[AV-14A3/AU]

MAIN P.W. BOARD ASS'Y (SCG-1427A-H2)

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1002	NRSA63J-221X	MG R	220Ω 1/16W J
	R1003	NRSA63J-221X	MG R	220Ω 1/16W J
	R1004	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1102	NRSA63J-750X	MG R	75Ω 1/16W J
	R1103	NRSA63J-100X	MG R	10Ω 1/16W J
	R1109	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1110	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1111	NRSA63J-181X	MG R	180Ω 1/16W J
	R1112	NRSA63J-100X	MG R	10Ω 1/16W J
	R1113	NRSA63J-101X	MG R	100Ω 1/16W J
	R1120	NRSA63J-391X	MG R	390Ω 1/16W J
	R1121	NRSA63J-221X	MG R	220Ω 1/16W J
	R1159	NRSA02J-184X	MG R	180kΩ 1/10W J
	R1301	NRSA63J-221X	MG R	220Ω 1/16W J
	R1302	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1303	NRSA63J-101X	MG R	100Ω 1/16W J
	R1304	NRSA63J-101X	MG R	100Ω 1/16W J
	R1305	NRSA63J-101X	MG R	100Ω 1/16W J
	R1306	NRSA63J-221X	MG R	220Ω 1/16W J
	R1307	NRSA63J-122X	MG R	1.2kΩ 1/16W J
	R1308	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1312	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1313	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1314	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1321	NRSA63J-152X	MG R	1.5kΩ 1/16W J
	R1322	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1323	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1324	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1326	NRSA63J-101X	MG R	100Ω 1/16W J
	R1327	NRSA02J-475X	MG R	4.7MΩ 1/10W J
	R1341	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1345	NRSA63J-151X	MG R	150Ω 1/16W J
	R1346	NRSA63J-151X	MG R	150Ω 1/16W J
	R1353	NRSA63J-151X	MG R	150Ω 1/16W J
	R1354	NRSA63J-331X	MG R	330Ω 1/16W J
	R1355	NRSA63J-331X	MG R	330Ω 1/16W J
	R1356	NRSA63J-331X	MG R	330Ω 1/16W J
	R1357	NRSA63J-101X	MG R	100Ω 1/16W J
	R1358	NRSA63J-101X	MG R	100Ω 1/16W J
	R1359	NRSA63J-101X	MG R	100Ω 1/16W J
	R1360	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1361	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1362	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1363	QRL029J-123	OM R	12kΩ 2W J
	R1364	QRL029J-123	OM R	12kΩ 2W J
	R1365	QRL029J-123	OM R	12kΩ 2W J
	R1366	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1367	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1368	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1372	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1374	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1401	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1421	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1423	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1424	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1425	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1426	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1429	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1430	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1431	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1432	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1433	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1436	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1440	QRE121J-471Y	C R	470Ω 1/2W J
	R1441	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1442	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1443	QRE121J-1R0Y	C R	1.0Ω 1/2W J
	R1453	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1502	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1503	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1525	QRL029J-180	OM R	18Ω 2W J
	R1526	QRE121J-271Y	C R	270Ω 1/2W J
	R1529	QRL039J-681	OM R	680Ω 3W J

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1531	NRSA63J-331X	MG R	330Ω 1/16W J
	R1532	NRSA63J-102X	MG R	1kΩ 1/16W J
⚠	R1551	QRZ9011-1R0	F R	1.0Ω 1/2W J
	R1552	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	R1554	QRE121J-681Y	C R	680Ω 1/2W J
	R1571	QRE121J-222Y	C R	2.2kΩ 1/2W J
	R1573	QRT029J-2R2	MF R	2.2Ω 2W J
	R1574	QRT029J-1R5	MF R	1.5Ω 2W J
	R1576	QRE121J-223Y	C R	22kΩ 1/2W J
	R1577	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1578	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1581	QRE121J-182Y	C R	1.8kΩ 1/2W J
	R1582	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1583	NRSA63J-393X	MG R	39kΩ 1/16W J
	R1651	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1652	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1653	NRSA63J-331X	MG R	330Ω 1/16W J
	R1654	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1655	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1656	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1657	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1658	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1659	QRE121J-4R7Y	C R	4.7Ω 1/2W J
	R1660	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1661	QRE121J-271Y	C R	270Ω 1/2W J
	R1662	QRE121J-271Y	C R	270Ω 1/2W J
	R1664	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1665	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1666	NRSA63J-101X	MG R	100Ω 1/16W J
	R1667	QRE121J-101Y	C R	100Ω 1/2W J
⚠	R1668	QRT029J-5R6	MF R	5.6Ω 2W J
	R1704	NRSA63J-221X	MG R	220Ω 1/16W J
	R1705	NRSA63J-221X	MG R	220Ω 1/16W J
	R1706	NRSA63J-561X	MG R	560Ω 1/16W J
	R1707	NRSA63J-561X	MG R	560Ω 1/16W J
	R1708	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1709	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1710	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1711	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1712	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1713	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1714	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1715	NRSA63J-221X	MG R	220Ω 1/16W J
	R1716	NRSA63J-221X	MG R	220Ω 1/16W J
	R1718	NRSA63J-561X	MG R	560Ω 1/16W J
	R1719	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1720	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1721	NRSA63J-103X	MG R	10kΩ 1/16W J
⚠	R1723	QRL039J-270	OM R	27Ω 3W J
	R1725	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1726	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1727	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1728	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1729	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1730	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1731	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1736	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1737	NRSA63J-104X	MG R	100kΩ 1/16W J
	R1738	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1739	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1740	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1741	NRSA63J-561X	MG R	560Ω 1/16W J
	R1742	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1746	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1747	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1748	NRSA63J-101X	MG R	100Ω 1/16W J
	R1749	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1772	NRSA63J-391X	MG R	390Ω 1/16W J
	R1773	NRSA63J-561X	MG R	560Ω 1/16W J
	R1791	NRSA63J-221X	MG R	220Ω 1/16W J
	R1792	NRSA63J-221X	MG R	220Ω 1/16W J
	R1793	NRSA63J-221X	MG R	220Ω 1/16W J
	R1794	NRSA63J-221X	MG R	220Ω 1/16W J

[AV-14A3/AU]

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1795	NRSA63J-221X	MG R	220Ω 1/16W J
	R1796	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1797	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1802	NRSA63J-750X	MG R	75Ω 1/16W J
	R1806	QRE121J-271Y	C R	270Ω 1/2W J
	R1807	NRSA63J-680X	MG R	68Ω 1/16W J
	R1810	QRG01GJ-560	OM R	56Ω 1W J
	R1811	NRSA63J-221X	MG R	220Ω 1/16W J
	R1815	QRE121J-181Y	C R	180Ω 1/2W J
	R1816	NRSA63J-681X	MG R	680Ω 1/16W J
	R1817	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1901	QRF074K-4R7	UNF R	4.7Ω 7W K
	R1903	QRL029J-104	OM R	100kΩ 2W J
	R1906	QRL029J-104	OM R	100kΩ 2W J
	R1921	QRE121J-2R2Y	C R	2.2Ω 1/2W J
	R1922	QRE121J-221Y	C R	220Ω 1/2W J
	R1923	QRM034J-R22	MP R	0.22Ω 3W J
	R1928	QRL039J-683	OM R	68kΩ 3W J
	R1933	QRE121J-4R7Y	C R	4.7Ω 1/2W J
	R1934	NRSA63J-683X	MG R	68kΩ 1/16W J
	R1935	QRE121J-392Y	C R	3.9kΩ 1/2W J
	R1974	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1976	QRT029J-8R2	MF R	8.2Ω 2W J
	R1977	QRE121J-122Y	C R	1.2kΩ 1/2W J
	R1978	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1979	QRL039J-220	OM R	22Ω 3W J
	R1980	QRL029J-152	OM R	1.5kΩ 2W J
⚠	R1991	QRZ9046-825Z	C R	8.2MΩ 1/2W K
	CAPACITOR			
	C1001	QETN1HM-106Z	E CAP.	10μF 50V M
	C1002	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1004	QETN1CM-477Z	E CAP.	470μF 16V M
	C1005	QFV71HJ-104Z	MF CAP.	0.1μF 50V J
	C1008	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1103	QETN1EM-476Z	E CAP.	47μF 25V M
	C1104	NCB31HK-472X	C CAP.	4700pF 50V K
	C1105	NCB31HK-472X	C CAP.	4700pF 50V K
	C1106	NCB31HK-472X	C CAP.	4700pF 50V K
	C1107	NCB31HK-472X	C CAP.	4700pF 50V K
	C1110	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	C1112	QETN1EM-476Z	E CAP.	47μF 25V M
	C1113	NCB31HK-472X	C CAP.	4700pF 50V K
	C1115	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1116	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1117	QFV71HJ-224Z	MF CAP.	0.22μF 50V J
	C1119	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1120	NDC31HJ-121X	C CAP.	120pF 50V J
	C1121	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1122	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1162	NCB31HK-152X	C CAP.	1500pF 50V K
	C1301	NCB31HK-123X	C CAP.	0.012μF 50V K
	C1302	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1303	NDC31HJ-100X	C CAP.	10pF 50V J
	C1304	QFV71HJ-474Z	MF CAP.	0.47μF 50V J
	C1305	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1306	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1307	QETN1CM-477Z	E CAP.	470μF 16V M
	C1308	QETN1CM-107Z	E CAP.	100μF 16V M
	C1309	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1310	NDC31HJ-221X	C CAP.	220pF 50V J
	C1311	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1312	QENC1HM-474Z	E CAP.	0.47μF 50V M
	C1313	QETN1HM-335Z	E CAP.	3.3μF 50V M
	C1314	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1315	QETN1CM-107Z	E CAP.	100μF 16V M
	C1316	QETN1HM-106Z	E CAP.	10μF 50V M
	C1317	NCB31EK-473X	C CAP.	0.047μF 25V K
	C1321	NDC31HJ-120X	C CAP.	12pF 50V J
	C1322	NCB31EK-273X	C CAP.	0.027μF 25V K
	C1323	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1324	QETN1HM-106Z	E CAP.	10μF 50V M
	C1325	QENC1HM-106Z	BP E CAP.	10μF 50V M
	C1326	NCS21HJ-221X	C CAP.	220pF 50V J
	C1341	QETN1HM-106Z	E CAP.	10μF 50V M
	C1352	QFZ0097-103	MM CAP.	0.01μF 125OV K
	C1354	NDC31HJ-271X	C CAP.	270pF 50V J

⚠	Symbol No.	Part No.	Part Name	Description
	CAPACITOR			
	C1355	NDC31HJ-221X	C CAP.	220pF 50V J
	C1356	NDC31HJ-331X	C CAP.	330pF 50V J
	C1357	QETN1AM-477Z	E CAP.	470μF 10V M
	C1365	QENC1HM-105Z	E CAP.	1μF 50V M
	C1366	QENC1HM-105Z	E CAP.	1μF 50V M
	C1367	QENC1HM-105Z	E CAP.	1μF 50V M
	C1401	QFV71HJ-474Z	MF CAP.	0.47μF 50V J
	C1423	QCS32HJ-180Z	C CAP.	18pF 500V J
	C1424	QFLC2AJ-103Z	M CAP.	0.01μF 100V J
	C1426	QFLC1HJ-102Z	M CAP.	1000pF 50V J
	C1427	QETN1VM-107Z	E CAP.	100μF 35V M
	C1428	QETN1VM-107Z	E CAP.	100μF 35V M
	C1429	QETN1HM-106Z	E CAP.	10μF 50V M
	C1430	QFLC2AJ-472Z	M CAP.	4700pF 100V J
	C1433	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1435	QETM1EM-228	E CAP.	2200μF 25V M
	C1436	QFV71HJ-334Z	MF CAP.	0.33μF 50V J
	C1437	NCB31HK-104X	C CAP.	0.1μF 50V K
	C1501	QETN1AM-477Z	E CAP.	470μF 10V M
	C1502	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1503	QETN1HM-106Z	E CAP.	10μF 50V M
	C1523	QETN1EM-476Z	E CAP.	47μF 25V M
⚠	C1525	QFZ0200-802	MPP CAP.	8000pF1.5kVH±3%
	C1526	QFLC1HJ-103Z	M CAP.	0.01μF 50V J
⚠	C1527	QFZ0199-684	MPP CAP	0.68μF 250V J
	C1529	QFLC2AJ-102Z	M CAP.	1000pF 100V J
	C1531	QEZ0203-107	E CAP.	100μF 160V M
	C1552	QETM1VM-108	E CAP.	1000μF 35V M
	C1554	QETN2EM-475Z	E CAP.	4.7μF 250V M
	C1555	QFLC2AJ-104Z	M CAP.	0.1μF 100V J
	C1557	QETN1HM-107Z	E CAP.	100μF 50V M
	C1571	QETN1AM-107Z	E CAP.	100μF 10V M
	C1572	QETN1EM-476Z	E CAP.	47μF 25V M
	C1581	QFV71HJ-104Z	MF CAP.	0.1μF 50V J
	C1652	NCB31HK-473X	C CAP.	0.047μF 50V K
	C1653	QETN1HM-106Z	E CAP.	10μF 50V M
	C1654	QETN1CM-477Z	E CAP.	470μF 16V M
	C1655	QETN1HM-106Z	E CAP.	10μF 50V M
	C1656	QENC1HM-105Z	E CAP.	1μF 50V M
	C1657	QETN1EM-107Z	E CAP.	100μF 25V M
	C1658	QETN1EM-227Z	E CAP.	220μF 25V M
	C1659	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1663	NCB31HK-102X	C CAP.	1000pF 50V K
	C1664	QETN1CM-107Z	E CAP.	100μF 16V M
	C1665	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1705	QETN1CM-477Z	E CAP.	470μF 16V M
	C1706	NCB31HK-104X	C CAP.	0.1μF 50V K
	C1707	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1708	QETN1AM-108Z	E CAP.	1000μF 10V M
	C1709	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1710	QETN1CM-107Z	E CAP.	100μF 16V M
	C1711	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1712	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1713	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1716	NDC31HJ-181X	C CAP.	180pF 50V J
	C1717	NDC31HJ-181X	C CAP.	180pF 50V J
	C1718	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1719	QETN1HM-105Z	E CAP.	1μF 50V M
	C1720	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1721	NCB31EK-333X	C CAP.	0.033μF 25V K
	C1722	NDC31HJ-101X	C CAP.	100pF 50V J
	C1723	NDC31HJ-560X	C CAP.	56pF 50V J
	C1724	NDC31HJ-560X	C CAP.	56pF 50V J
	C1728	NDC31HJ-181X	C CAP.	180pF 50V J
	C1729	NDC31HJ-181X	C CAP.	180pF 50V J
	C1730	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1744	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1805	QETN1CM-227Z	E CAP.	220μF 16V M
	C1806	QETN1CM-477Z	E CAP.	470μF 16V M
	C1811	QETN1HM-106Z	E CAP.	10μF 50V M
	C1841	NCB31HK-152X	C CAP.	1500pF 50V K
⚠	C1901	QFZ9078-224	MPF CAP.	0.22μFAC275V M
⚠	C1904	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1905	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1907	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1909	QEZ0552-127	E CAP. or QEZ0199-127	120μF 400V M
⚠	C1910	QFZ9078-473	MPF CAP.	0.047μFAC275V M
	C1922	QFLC1HJ-104Z	M CAP.	0.1μF 50V J

[AV-14A3/AU]

CAPACITOR

⚠	Symbol No.	Part No.	Part Name	Description
	C1924	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1925	QETN1VM-476Z	E CAP.	47μF 35V M
	C1926	QFLC1HJ-332Z	M CAP.	3300pF 50V J
⚠	C1929	QFKA2JK-103	MM CAP.	0.01μF 630V K
⚠	C1931	QCZ03E4-681	C CAP.	680pF 2kV K
	C1932	NDC31HJ-221X	C CAP.	220pF 50V J
	C1941	QCZ03E4-561	C CAP.	560pF 2kV K
	C1942	QEZ0203-107	E CAP.	100μF 160V M
	C1944	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1945	QEHR1EM-108Z	E CAP.	1000μF 25V M
	C1946	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1947	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1948	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1949	NDC31HJ-471X	C CAP.	470pF 50V J
	C1976	QETN1EM-227Z	E CAP.	220μF 25V M
	C1977	QETN1CM-227Z	E CAP.	220μF 16V M
	C1978	QETN1EM-227Z	E CAP.	220μF 25V M
	C1979	QETN1AM-227Z	E CAP.	220μF 10V M
⚠	C1991	QCZ9079-102	C CAP.	1000pF AC250V M
⚠	C1992	QCZ9079-102	C CAP.	1000pF AC250V M
⚠	C1993	QCZ9079-152	C CAP.	1500pF AC250V M

TRANSFORMER

⚠	Symbol No.	Part No.	Part Name	Description
	T1501	CE4Q203-00CJ1	DRIVE TRANSF.	
⚠	T1522	QQH0108-001	F.B.TRANSF.	
⚠	T1921	QQS0161-001	SW TRANSF.	

COIL

⚠	Symbol No.	Part No.	Part Name	Description
	L1001	QQL244K-8R2Z	COIL	8.2μH K
	L1101	QQL244J-2R2Z	COIL	2.2μH J
	L1103	QQL244K-8R2Z	COIL	8.2μH K
	L1551	QQLZ034-140	HEATER CHOKE	
	L1701	QQL244J-5R6Z	COIL	5.6μH J
	L1941	QQL26AK-820Z	COIL	82μH K
	L1942	QQL244J-4R7Z	INDUCTOR	
	L1943	QQL244J-4R7Z	INDUCTOR	

DIODE

⚠	Symbol No.	Part No.	Part Name	Description
	D1001	MTZJ33A-T2	ZENER DIODE	
	D1301	MTZJ9.1B-T2	ZENER DIODE	
	D1302	MTZJ9.1B-T2	ZENER DIODE	
	D1305	AK04-T2	SB DIODE	
	D1306	QRE121J-121Y	C R	120Ω 1/2W J
	D1341	MA111-X	SI.DIODE	
	D1421	MTZJ75-T2	ZENER DIODE	
	D1423	1SR124-400A-T2	SI.DIODE	
	D1425	MA111-X	SI.DIODE	
	D1427	MTZJ27B-T2	ZENER DIODE	
	D1501	MTZJ6.8C-T2	ZENER DIODE	
	D1551	RGP10J-5025-T3	SI.DIODE	
	D1552	RGP10J-5025-T3	SI.DIODE	
	D1553	MTZJ9.1B-T2	ZENER DIODE	
	D1554	MA111-X	SI.DIODE	
	D1557	1SR124-400A-T2	SI.DIODE	
	D1571	MTZJ7.5S-T2	ZENER DIODE	
	D1581	MTZJ20B-T2	ZENER DIODE	
	D1582	RGP10J-5025-T3	SI.DIODE	
	D1651	MA111-X	SI.DIODE	
	D1652	MTZJ12C-T2	ZENER DIODE	
	D1653	MA111-X	SI.DIODE	
	D1654	MTZJ12C-T2	ZENER DIODE	
	D1655	MA111-X	SI.DIODE	
	D1656	MA111-X	SI.DIODE	
	D1657	MA111-X	SI.DIODE	
	D1703	SPR-39MVWF	LED	
	D1707	MA111-X	SI.DIODE	
	D1731	MA111-X	SI.DIODE	
⚠	D1901	G2SBA60	BRIDGE DIODE	
	D1921	RGP10J-5025-T3	SI.DIODE	
	D1925	RGP10J-5025-T3	SI.DIODE	
	D1927	MTZJ36A-T2	ZENER DIODE	
	D1928	MTZJ3.3A-T2	ZENER DIODE	
	D1929	MTZJ5.6A-T2	ZENER DIODE	
	D1930	RGP10M-5010-T3	SI.DIODE	
	D1931	MA111-X	SI.DIODE	
	D1933	MTZJ16C-T2	ZENER DIODE	

DIODE

⚠	Symbol No.	Part No.	Part Name	Description
	D1941	RU3AM-LFC4	SI.DIODE	
	D1942	RU3YX-LFC4	SI.DIODE	
	D1943	RGP10J-5025-T3	SI.DIODE	
	D1982	MA111-X	SI.DIODE	
	D1983	MA111-X	SI.DIODE	

TRANSISTOR

⚠	Symbol No.	Part No.	Part Name	Description
	Q1102	2SC5083/L-P/-T	SI.TRANSISTOR	
	Q1301	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1302	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1351	STC344-T	SI.TRANSISTOR	
	Q1352	STC344-T	SI.TRANSISTOR	
	Q1353	STC344-T	SI.TRANSISTOR	
	Q1401	DTC124ESA-T	DIGI.TRANSISTOR	
	Q1402	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1521	2SC2655/Y/-T	SI.TRANSISTOR	
⚠	Q1522	2SD2658LS-YB11	POWER TRANSISTOR	H.OUT
	Q1571	2SA1208/ST/Z1-T	SI.TRANSISTOR	
	Q1572	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1651	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1652	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1653	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1702	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1703	UN2212-X	DIGI.TRANSISTOR	
	Q1708	UN2212-X	DIGI.TRANSISTOR	
	Q1710	UN2212-X	DIGI.TRANSISTOR	
	Q1803	2SC1815/YG/-T	SI.TRANSISTOR	
	Q1804	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1974	2SA966/OY/-T	SI.TRANSISTOR	
	Q1975	UN2212-X	DIGI.TRANSISTOR	

IC

⚠	Symbol No.	Part No.	Part Name	Description
	IC1301	NN5198K	I C	
	IC1421	AN5522	I C	
	IC1651	AN5265	I C	
⚠	IC1701	MN1873287JL1	I C	
	IC1702	AT24C08-21DMG3	I C	(SERVICE)
	IC1703	L78LR05E-MA	I C	
	IC1704	PIC-47143SY	IR DETECT UNIT	
⚠	IC1921	STR-W5753A/F5	I C	
	IC1971	BA17809T	I C	
	IC1972	BA17805T	I C	

OTHERS

⚠	Symbol No.	Part No.	Part Name	Description
		LC30349-001A-H	LED HOLDER	
⚠	CP1981	ICP-N25-Y	I.C.PROTECT	
⚠	CP1982	ICP-N75-Y	I.C.PROTECT	
⚠	F1901	QMF51E2-3R15J4	FUSE	3.15A
	FC1901	CEMG002-001Z	FUSE CLIP	
	FR1557	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	J1002	QNN0384-001	PIN JACK	
	J1003	QNN0281-003	PIN JACK	or CEMN065-001
	J1004	QNN0281-002	PIN JACK	or CEMN065-002
⚠	J1005	QNS0197-001	3.5 JACK	
	K1351	QQR0621-002Z	FERRITE BEADS	
	K1421	QQR1113-001Z	FERRITE BEADS	
	K1901	QQR1113-001Z	FERRITE BEADS	
	K1902	QQR1113-001Z	FERRITE BEADS	
	K1941	QQR1113-001Z	FERRITE BEADS	
	K1942	QQR1113-001Z	FERRITE BEADS	
	K1943	QQR1113-001Z	FERRITE BEADS	
⚠	LF1901	QQR0673-002	LINE FILTER	
	S1701	QSW0619-003Z	TACT SWITCH	VOL+
	S1702	QSW0619-003Z	TACT SWITCH	VOL-
	S1703	QSW0619-003Z	TACT SWITCH	CH+
	S1704	QSW0619-003Z	TACT SWITCH	CH-
	S1705	QSW0619-003Z	TACT SWITCH	MENU
⚠	S1901	QSW0750-001	PUSH SWITCH	POWER SW
	SF1102	QAX0666-002	SAW FILTER	
	SF1122	QAX0325-001	SAW FILTER	
⚠	SK1351	CE42554-001	C R T SOCKET	or QNZ0536-001
⚠	TH1901	QAD0121-9R0	THERMISTOR	or QAD0119-9R0
⚠	TU1001	QAU0246-002	TUNER	
⚠	VA1901	ERZV10V621CS	VARISTOR	or QAF0052-621
⚠	X1301	QAX0705-001Z	CRYSTAL	
	X1302	CE41651-001Z	X-TAL	
	X1701	QAX0307-001	C RESONATOR	

PRINTED WIRING BOARD PARTS LIST

[AV-14A3/HK]

MAIN P.W. BOARD ASS'Y (SCG-1428A-H2)

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1002	NRSA63J-221X	MG R	220Ω 1/16W J
	R1003	NRSA63J-221X	MG R	220Ω 1/16W J
	R1004	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1102	NRSA63J-750X	MG R	75Ω 1/16W J
	R1103	NRSA63J-100X	MG R	10Ω 1/16W J
	R1109	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1110	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1111	NRSA63J-181X	MG R	180Ω 1/16W J
	R1112	NRSA63J-100X	MG R	10Ω 1/16W J
	R1113	NRSA63J-101X	MG R	100Ω 1/16W J
	R1120	NRSA63J-391X	MG R	390Ω 1/16W J
	R1121	NRSA63J-221X	MG R	220Ω 1/16W J
	R1159	NRSA02J-184X	MG R	180kΩ 1/10W J
	R1301	NRSA63J-221X	MG R	220Ω 1/16W J
	R1302	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1303	NRSA63J-101X	MG R	100Ω 1/16W J
	R1304	NRSA63J-101X	MG R	100Ω 1/16W J
	R1305	NRSA63J-101X	MG R	100Ω 1/16W J
	R1306	NRSA63J-221X	MG R	220Ω 1/16W J
	R1307	NRSA63J-122X	MG R	1.2kΩ 1/16W J
	R1308	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1312	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1313	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1314	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1321	NRSA63J-152X	MG R	1.5kΩ 1/16W J
	R1322	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1323	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1324	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1326	NRSA63J-101X	MG R	100Ω 1/16W J
	R1327	NRSA02J-475X	MG R	4.7MΩ 1/10W J
	R1341	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1345	NRSA63J-151X	MG R	150Ω 1/16W J
	R1346	NRSA63J-151X	MG R	150Ω 1/16W J
	R1353	NRSA63J-151X	MG R	150Ω 1/16W J
	R1354	NRSA63J-331X	MG R	330Ω 1/16W J
	R1355	NRSA63J-331X	MG R	330Ω 1/16W J
	R1356	NRSA63J-331X	MG R	330Ω 1/16W J
	R1357	NRSA63J-101X	MG R	100Ω 1/16W J
	R1358	NRSA63J-101X	MG R	100Ω 1/16W J
	R1359	NRSA63J-101X	MG R	100Ω 1/16W J
	R1360	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1361	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1362	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1363	QRL029J-123	OM R	12kΩ 2W J
	R1364	QRL029J-123	OM R	12kΩ 2W J
	R1365	QRL029J-123	OM R	12kΩ 2W J
	R1366	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1367	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1368	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1372	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1374	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1401	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1421	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1423	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1424	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1425	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1426	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1429	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1430	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1431	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1432	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1433	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1436	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1440	QRE121J-471Y	C R	470Ω 1/2W J
	R1441	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1442	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1443	QRE121J-1R0Y	C R	1.0Ω 1/2W J
	R1453	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1502	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1503	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1525	QRL029J-180	OM R	18Ω 2W J
	R1526	QRE121J-271Y	C R	270Ω 1/2W J
	R1529	QRL039J-681	OM R	680Ω 3W J

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1531	NRSA63J-331X	MG R	330Ω 1/16W J
	R1532	NRSA63J-102X	MG R	1kΩ 1/16W J
⚠	R1551	QRZ9011-1R0	F R	1.0Ω 1/2W J
	R1552	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	R1554	QRE121J-681Y	C R	680Ω 1/2W J
	R1571	QRE121J-222Y	C R	2.2kΩ 1/2W J
	R1573	QRT029J-2R2	MF R	2.2Ω 2W J
	R1574	QRT029J-1R5	MF R	1.5Ω 2W J
	R1576	QRE121J-223Y	C R	22kΩ 1/2W J
	R1577	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1578	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1581	QRE121J-182Y	C R	1.8kΩ 1/2W J
	R1582	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1583	NRSA63J-393X	MG R	39kΩ 1/16W J
	R1651	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1652	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1653	NRSA63J-331X	MG R	330Ω 1/16W J
	R1654	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1655	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1656	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1657	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1658	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1659	QRE121J-4R7Y	C R	4.7Ω 1/2W J
	R1660	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1661	QRE121J-271Y	C R	270Ω 1/2W J
	R1662	QRE121J-271Y	C R	270Ω 1/2W J
	R1664	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1665	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1666	NRSA63J-101X	MG R	100Ω 1/16W J
	R1667	QRE121J-101Y	C R	100Ω 1/2W J
⚠	R1668	QRT029J-5R6	MF R	5.6Ω 2W J
	R1704	NRSA63J-221X	MG R	220Ω 1/16W J
	R1705	NRSA63J-221X	MG R	220Ω 1/16W J
	R1706	NRSA63J-561X	MG R	560Ω 1/16W J
	R1707	NRSA63J-561X	MG R	560Ω 1/16W J
	R1708	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1709	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1710	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1711	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1712	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1713	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1714	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1715	NRSA63J-221X	MG R	220Ω 1/16W J
	R1716	NRSA63J-221X	MG R	220Ω 1/16W J
	R1718	NRSA63J-561X	MG R	560Ω 1/16W J
	R1719	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1720	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1721	NRSA63J-103X	MG R	10kΩ 1/16W J
⚠	R1723	QRL039J-270	OM R	27Ω 3W J
	R1725	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1726	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1727	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1728	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1729	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1730	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1731	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1736	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1737	NRSA63J-104X	MG R	100kΩ 1/16W J
	R1738	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1739	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1740	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1741	NRSA63J-561X	MG R	560Ω 1/16W J
	R1742	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1746	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1747	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1748	NRSA63J-101X	MG R	100Ω 1/16W J
	R1749	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1772	NRSA63J-391X	MG R	390Ω 1/16W J
	R1773	NRSA63J-561X	MG R	560Ω 1/16W J
	R1791	NRSA63J-221X	MG R	220Ω 1/16W J
	R1792	NRSA63J-221X	MG R	220Ω 1/16W J
	R1793	NRSA63J-221X	MG R	220Ω 1/16W J
	R1794	NRSA63J-221X	MG R	220Ω 1/16W J

[AV-14A3/HK]

RESISTOR

⚠	Symbol No.	Part No.	Part Name	Description	
	R1795	NRSA63J-221X	MG R	220Ω 1/16W	J
	R1796	NRSA63J-103X	MG R	10kΩ 1/16W	J
	R1797	NRSA63J-153X	MG R	15kΩ 1/16W	J
	R1802	NRSA63J-750X	MG R	75Ω 1/16W	J
	R1806	QRE121J-271Y	C R	270Ω 1/2W	J
	R1807	NRSA63J-680X	MG R	68Ω 1/16W	J
	R1810	QRG01GJ-560	OM R	56Ω 1W	J
	R1811	NRSA63J-221X	MG R	220Ω 1/16W	J
	R1815	QRE121J-181Y	C R	180Ω 1/2W	J
	R1816	NRSA63J-681X	MG R	680Ω 1/16W	J
	R1817	NRSA63J-472X	MG R	4.7kΩ 1/16W	J
	R1901	QRF074K-4R7	UNF R	4.7Ω 7W	K
	R1903	QRL029J-104	OM R	100kΩ 2W	J
	R1906	QRL029J-104	OM R	100kΩ 2W	J
	R1921	QRE121J-2R2Y	C R	2.2Ω 1/2W	J
	R1922	QRE121J-221Y	C R	220Ω 1/2W	J
	R1923	QRM034J-R22	MP R	0.22Ω 3W	J
	R1928	QRL039J-683	OM R	68kΩ 3W	J
	R1933	QRE121J-4R7Y	C R	4.7Ω 1/2W	J
	R1934	NRSA63J-683X	MG R	68kΩ 1/16W	J
	R1935	QRE121J-392Y	C R	3.9kΩ 1/2W	J
	R1974	NRSA63J-222X	MG R	2.2kΩ 1/16W	J
	R1976	QRT029J-8R2	MF R	8.2Ω 2W	J
	R1977	QRE121J-122Y	C R	1.2kΩ 1/2W	J
	R1978	NRSA63J-473X	MG R	47kΩ 1/16W	J
	R1979	QRL039J-220	OM R	22Ω 3W	J
	R1980	QRL029J-152	OM R	1.5kΩ 2W	J
⚠	R1991	QRZ9046-825Z	C R	8.2MΩ 1/2W	K

CAPACITOR

	Symbol No.	Part No.	Part Name	Description	
	C1001	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1002	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1004	QETN1CM-477Z	E CAP.	470µF 16V	M
	C1005	QFV71HJ-104Z	MF CAP.	0.1µF 50V	J
	C1008	QETN1HM-475Z	E CAP.	4.7µF 50V	M
	C1103	QETN1EM-476Z	E CAP.	47µF 25V	M
	C1104	NCB31HK-472X	C CAP.	4700pF 50V	K
	C1105	NCB31HK-472X	C CAP.	4700pF 50V	K
	C1106	NCB31HK-472X	C CAP.	4700pF 50V	K
	C1107	NCB31HK-472X	C CAP.	4700pF 50V	K
	C1110	NRSA63J-0R0X	MG R	0.0Ω 1/16W	J
	C1112	QETN1EM-476Z	E CAP.	47µF 25V	M
	C1113	NCB31HK-472X	C CAP.	4700pF 50V	K
	C1115	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1116	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1117	QFV71HJ-224Z	MF CAP.	0.22µF 50V	J
	C1119	QETN1HM-474Z	E CAP.	0.47µF 50V	M
	C1120	NDC31HJ-121X	C CAP.	120pF 50V	J
	C1121	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1122	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1162	NCB31HK-152X	C CAP.	1500pF 50V	K
	C1301	NCB31HK-123X	C CAP.	0.012µF 50V	K
	C1302	QETN1HM-475Z	E CAP.	4.7µF 50V	M
	C1303	NDC31HJ-100X	C CAP.	10pF 50V	J
	C1304	QFV71HJ-474Z	MF CAP.	0.47µF 50V	J
	C1305	QETN1HM-474Z	E CAP.	0.47µF 50V	M
	C1306	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1307	QETN1CM-477Z	E CAP.	470µF 16V	M
	C1308	QETN1CM-107Z	E CAP.	100µF 16V	M
	C1309	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1310	NDC31HJ-221X	C CAP.	220pF 50V	J
	C1311	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1312	QENC1HM-474Z	E CAP.	0.47µF 50V	M
	C1313	QETN1HM-335Z	E CAP.	3.3µF 50V	M
	C1314	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1315	QETN1CM-107Z	E CAP.	100µF 16V	M
	C1316	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1317	NCB31EK-473X	C CAP.	0.047µF 25V	K
	C1321	NDC31HJ-120X	C CAP.	12pF 50V	J
	C1322	NCB31EK-273X	C CAP.	0.027µF 25V	K
	C1323	QETN1HM-474Z	E CAP.	0.47µF 50V	M
	C1324	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1325	QENC1HM-106Z	BP E CAP.	10µF 50V	M
	C1326	NCS21HJ-221X	C CAP.	220pF 50V	J
	C1341	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1352	QFZC0097-103	MM CAP.	0.01µF 125V	K
	C1354	NDC31HJ-271X	C CAP.	270pF 50V	J

⚠	Symbol No.	Part No.	Part Name	Description	
	C1355	NDC31HJ-221X	C CAP.	220pF 50V	J
	C1356	NDC31HJ-331X	C CAP.	330pF 50V	J
	C1357	QETN1AM-477Z	E CAP.	470µF 10V	M
	C1365	QENC1HM-105Z	E CAP.	1µF 50V	M
	C1366	QENC1HM-105Z	E CAP.	1µF 50V	M
	C1367	QENC1HM-105Z	E CAP.	1µF 50V	M
	C1401	QFV71HJ-474Z	MF CAP.	0.47µF 50V	J
	C1423	QCS32HJ-180Z	C CAP.	18pF 500V	J
	C1424	QFLC2AJ-103Z	M CAP.	0.01µF 100V	J
	C1426	QFLC1HJ-102Z	M CAP.	1000pF 50V	J
	C1427	QETN1VM-107Z	E CAP.	100µF 35V	M
	C1428	QETN1VM-107Z	E CAP.	100µF 35V	M
	C1429	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1430	QFLC2AJ-472Z	M CAP.	4700pF 100V	J
	C1433	QETN1HM-475Z	E CAP.	4.7µF 50V	M
	C1435	QETM1EM-228	E CAP.	2200µF 25V	M
	C1436	QFV71HJ-334Z	MF CAP.	0.33µF 50V	J
	C1437	NCB31HK-104X	C CAP.	0.1µF 50V	K
	C1501	QETN1AM-477Z	E CAP.	470µF 10V	M
	C1502	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1503	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1523	QETN1EM-476Z	E CAP.	47µF 25V	M
⚠	C1525	QFZ0200-802	MPP CAP.	8000pF 1.5kVH±3%	
	C1526	QFLC1HJ-103Z	M CAP.	0.01µF 50V	J
⚠	C1527	QFZ0199-684	MPP CAP	0.68µF 250V	J
	C1529	QFLC2AJ-102Z	M CAP.	1000pF 100V	J
	C1531	QEZ0203-107	E CAP.	100µF 160V	M
	C1552	QETM1VM-108	E CAP.	1000µF 35V	M
	C1554	QETN2EM-475Z	E CAP.	4.7µF 250V	M
	C1555	QFLC2AJ-104Z	M CAP.	0.1µF 100V	J
	C1557	QETN1HM-107Z	E CAP.	100µF 50V	M
	C1571	QETN1AM-107Z	E CAP.	100µF 10V	M
	C1572	QETN1EM-476Z	E CAP.	47µF 25V	M
	C1581	QFV71HJ-104Z	MF CAP.	0.1µF 50V	J
	C1652	NCB31HK-473X	C CAP.	0.047µF 50V	K
	C1653	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1654	QETN1CM-477Z	E CAP.	470µF 16V	M
	C1655	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1656	QENC1HM-105Z	E CAP.	1µF 50V	M
	C1657	QETN1EM-107Z	E CAP.	100µF 25V	M
	C1658	QETN1EM-227Z	E CAP.	220µF 25V	M
	C1659	QETN1HM-475Z	E CAP.	4.7µF 50V	M
	C1663	NCB31HK-102X	C CAP.	1000pF 50V	K
	C1664	QETN1CM-107Z	E CAP.	100µF 16V	M
	C1665	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1705	QETN1CM-477Z	E CAP.	470µF 16V	M
	C1706	NCB31HK-104X	C CAP.	0.1µF 50V	K
	C1707	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1708	QETN1AM-108Z	E CAP.	1000µF 10V	M
	C1709	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1710	QETN1CM-107Z	E CAP.	100µF 16V	M
	C1711	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1712	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1713	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1716	NDC31HJ-181X	C CAP.	180pF 50V	J
	C1717	NDC31HJ-181X	C CAP.	180pF 50V	J
	C1718	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1719	QETN1HM-105Z	E CAP.	1µF 50V	M
	C1720	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1721	NCB31EK-333X	C CAP.	0.033µF 25V	K
	C1722	NDC31HJ-101X	C CAP.	100pF 50V	J
	C1723	NDC31HJ-560X	C CAP.	56pF 50V	J
	C1724	NDC31HJ-560X	C CAP.	56pF 50V	J
	C1728	NDC31HJ-181X	C CAP.	180pF 50V	J
	C1729	NDC31HJ-181X	C CAP.	180pF 50V	J
	C1730	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1744	NCB31HK-103X	C CAP.	0.01µF 50V	K
	C1805	QETN1CM-227Z	E CAP.	220µF 16V	M
	C1806	QETN1CM-477Z	E CAP.	470µF 16V	M
	C1811	QETN1HM-106Z	E CAP.	10µF 50V	M
	C1841	NCB31HK-152X	C CAP.	1500pF 50V	K
⚠	C1901	QFZ9078-224	MPF CAP.	0.22µFAC275V	M
⚠	C1904	QCZ9015-102	C CAP.	1000pFAC250V	Z
⚠	C1905	QCZ9015-102	C CAP.	1000pFAC250V	Z
⚠	C1907	QCZ9015-102	C CAP.	1000pFAC250V	Z
⚠	C1909	QEZ0552-127	E CAP. or QEZ0199-127	120µF 400V	M
⚠	C1910	QFZ9078-473	MPF CAP.	0.047µFAC275V	M
	C1922	QFLC1HJ-104Z	M CAP.	0.1µF 50V	J

[AV-14A3/HK]

⚠	Symbol No.	Part No.	Part Name	Description
		CAPACITOR		
	C1924	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1925	QETN1VM-476Z	E CAP.	47μF 35V M
	C1926	QFLC1HJ-332Z	M CAP.	3300pF 50V J
⚠	C1929	QFKA2JK-103	MM CAP.	0.01μF 630V K
⚠	C1931	QCZ0364-681	C CAP.	680pF 2kV K
	C1932	NDC31HJ-221X	C CAP.	220pF 50V J
	C1941	QCZ0364-561	C CAP.	560pF 2kV K
	C1942	QEZ0203-107	E CAP.	100μF 160V M
	C1944	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1945	QEHR1EM-108Z	E CAP.	1000μF 25V M
	C1946	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1947	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1948	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1949	NDC31HJ-471X	C CAP.	470pF 50V J
	C1976	QETN1EM-227Z	E CAP.	220μF 25V M
	C1977	QETN1CM-227Z	E CAP.	220μF 16V M
	C1978	QETN1EM-227Z	E CAP.	220μF 25V M
	C1979	QETN1AM-227Z	E CAP.	220μF 10V M
⚠	C1991	QCZ9079-102	C CAP.	1000pFAC250V M
⚠	C1992	QCZ9079-102	C CAP.	1000pFAC250V M
⚠	C1993	QCZ9079-152	C CAP.	1500pFAC250V M
		TRANSFORMER		
	T1501	CE40203-00CJ1	DRIVE TRANSF.	
⚠	T1522	QQH0108-001	F.B.TRANSF.	
⚠	T1921	QQS0161-001	SW TRANSF.	
		COIL		
	L1001	QQL244K-8R2Z	COIL	8.2μH K
	L1101	QQL244J-2R2Z	COIL	2.2μH J
	L1103	QQL244K-8R2Z	COIL	8.2μH K
	L1551	QQLZ034-140	HEATER CHOKE	
	L1701	QQL244J-5R6Z	COIL	5.6μH J
	L1941	QQL26AK-820Z	COIL	82μH K
	L1942	QQL244J-4R7Z	INDUCTOR	
	L1943	QQL244J-4R7Z	INDUCTOR	
		DIODE		
	D1001	MTZJ33A-T2	ZENER DIODE	
	D1301	MTZJ9.1B-T2	ZENER DIODE	
	D1302	MTZJ9.1B-T2	ZENER DIODE	
	D1305	AK04-T2	SB DIODE	
	D1306	QRE121J-121Y	C R	120Ω 1/2W J
	D1341	MA111-X	SI.DIODE	
	D1421	MTZJ75-T2	ZENER DIODE	
	D1423	1SR124-400A-T2	SI.DIODE	
	D1425	MA111-X	SI.DIODE	
	D1427	MTZJ27B-T2	ZENER DIODE	
	D1501	MTZJ6.8C-T2	ZENER DIODE	
	D1551	RGP10J-5025-T3	SI.DIODE	
	D1552	RGP10J-5025-T3	SI.DIODE	
	D1553	MTZJ9.1B-T2	ZENER DIODE	
	D1554	MA111-X	SI.DIODE	
	D1557	1SR124-400A-T2	SI.DIODE	
	D1571	MTZJ7.5S-T2	ZENER DIODE	
	D1581	MTZJ20B-T2	ZENER DIODE	
	D1582	RGP10J-5025-T3	SI.DIODE	
	D1651	MA111-X	SI.DIODE	
	D1652	MTZJ12C-T2	ZENER DIODE	
	D1653	MA111-X	SI.DIODE	
	D1654	MTZJ12C-T2	ZENER DIODE	
	D1655	MA111-X	SI.DIODE	
	D1656	MA111-X	SI.DIODE	
	D1657	MA111-X	SI.DIODE	
	D1703	SPR-39MVWF	LED	
	D1707	MA111-X	SI.DIODE	
	D1731	MA111-X	SI.DIODE	
⚠	D1901	G2SBA60	BRIDGE DIODE	
	D1921	RGP10J-5025-T3	SI.DIODE	
	D1925	RGP10J-5025-T3	SI.DIODE	
	D1927	MTZJ36A-T2	ZENER DIODE	
	D1928	MTZJ3.3A-T2	ZENER DIODE	
	D1929	MTZJ5.6A-T2	ZENER DIODE	
	D1930	RGP10M-5010-T3	SI.DIODE	
	D1931	MA111-X	SI.DIODE	
	D1933	MTZJ16C-T2	ZENER DIODE	
	D1941	RU3AM-LFC4	SI.DIODE	

⚠	Symbol No.	Part No.	Part Name	Description
		DIODE		
	D1942	RU3YX-LFC4	SI.DIODE	
	D1943	RGP10J-5025-T3	SI.DIODE	
	D1982	MA111-X	SI.DIODE	
	D1983	MA111-X	SI.DIODE	
		TRANSISTOR		
	Q1102	2SC5083/L-P/-T	SI.TRANSISTOR	
	Q1301	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1302	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1351	STC344-T	SI.TRANSISTOR	
	Q1352	STC344-T	SI.TRANSISTOR	
	Q1353	STC344-T	SI.TRANSISTOR	
	Q1401	DTC124ESA-T	DIGI.TRANSISTOR	
	Q1402	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1521	2SC2655/Y/-T	SI.TRANSISTOR	
⚠	Q1522	2SD2658LS-YB11	POWER TRANSISTOR	H.OUT
	Q1571	2SA1208/ST/Z1-T	SI.TRANSISTOR	
	Q1572	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1651	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1652	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1653	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1702	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1703	UN2212-X	DIGI.TRANSISTOR	
	Q1708	UN2212-X	DIGI.TRANSISTOR	
	Q1710	UN2212-X	DIGI.TRANSISTOR	
	Q1803	2SC1815/YG/-T	SI.TRANSISTOR	
	Q1804	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1974	2SA966/OY/-T	SI.TRANSISTOR	
	Q1975	UN2212-X	DIGI.TRANSISTOR	
		IC		
	IC1301	NN5198K	IC	
	IC1421	AN5522	IC	
	IC1651	AN5265	IC	
⚠	IC1701	MN1873287JL1	I C	
	IC1702	AT24C08-21DMG3	IC	(SERVICE)
	IC1703	L78LR05E-MA	IC	
	IC1704	PIC-47143SY	IR DETECT UNIT	
⚠	IC1921	STR-W5753A/F5	I C	
	IC1971	BA17809T	IC	
	IC1972	BA17805T	IC	
		OTHERS		
		LC30349-001A-H	LED HOLDER	
⚠	CP1981	ICP-N25-Y	I.C.PROTECT	
⚠	CP1982	ICP-N75-Y	I.C.PROTECT	
⚠	F1901	QMF51E2-3R15J4	FUSE	3.15A
	FC1901	CEMG002-001Z	FUSE CLIP	
	FR1557	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	J1002	QNN0384-001	PIN JACK	
	J1003	QNN0281-003	PIN JACK	or CEMN0065-001
	J1004	QNN0281-002	PIN JACK	or CEMN0065-002
⚠	J1005	QNS0197-001	3.5 JACK	
	K1351	QQR0621-002Z	FERRITE BEADS	
	K1421	QQR1113-001Z	FERRITE BEADS	
	K1941	QQR1113-001Z	FERRITE BEADS	
	K1942	QQR1113-001Z	FERRITE BEADS	
	K1943	QQR1113-001Z	FERRITE BEADS	
⚠	LF1901	QQR0673-002	LINE FILTER	
	S1701	QSW0619-003Z	TACT SWITCH	VOL+
	S1702	QSW0619-003Z	TACT SWITCH	VOL-
	S1703	QSW0619-003Z	TACT SWITCH	CH+
	S1704	QSW0619-003Z	TACT SWITCH	CH-
	S1705	QSW0619-003Z	TACT SWITCH	MENU
⚠	S1901	QSW0750-001	PUSH SWITCH	POWER SW
	SF1102	QAX0666-002	SAW FILTER	
	SF1122	QAX0325-001	SAW FILTER	
⚠	SK1351	CE42554-001	C R T SOCKET	or QNZ0536-001
⚠	TH1901	QAD0121-9R0	THERMISTOR	or QAD0119-9R0
⚠	TU1001	QAU0246-002	TUNER	
⚠	VA1901	ERZV10V621CS	VARISTOR	or QAF0052-621
⚠	X1301	QAX0705-001Z	CRYSTAL	
	X1302	CE41651-001Z	X-TAL	
	X1701	QAX0307-001	C RESONATOR	

PRINTED WIRING BOARD PARTS LIST

[AV-1415EE]

MAIN P.W. BOARD ASS'Y (SCG-1426A-H2)

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1002	NRSA63J-221X	MG R	220Ω 1/16W J
	R1003	NRSA63J-221X	MG R	220Ω 1/16W J
	R1004	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1102	NRSA63J-750X	MG R	75Ω 1/16W J
	R1103	NRSA63J-100X	MG R	10Ω 1/16W J
	R1109	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1110	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1111	NRSA63J-181X	MG R	180Ω 1/16W J
	R1112	NRSA63J-100X	MG R	10Ω 1/16W J
	R1113	NRSA63J-101X	MG R	100Ω 1/16W J
	R1120	NRSA63J-391X	MG R	390Ω 1/16W J
	R1121	NRSA63J-221X	MG R	220Ω 1/16W J
	R1159	NRSA02J-184X	MG R	180kΩ 1/10W J
	R1301	NRSA63J-221X	MG R	220Ω 1/16W J
	R1302	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1303	NRSA63J-101X	MG R	100Ω 1/16W J
	R1304	NRSA63J-101X	MG R	100Ω 1/16W J
	R1305	NRSA63J-101X	MG R	100Ω 1/16W J
	R1306	NRSA63J-221X	MG R	220Ω 1/16W J
	R1307	NRSA63J-122X	MG R	1.2kΩ 1/16W J
	R1308	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1312	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1313	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1314	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1321	NRSA63J-152X	MG R	1.5kΩ 1/16W J
	R1322	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1323	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1324	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1326	NRSA63J-101X	MG R	100Ω 1/16W J
	R1327	NRSA02J-475X	MG R	4.7MΩ 1/10W J
	R1341	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1345	NRSA63J-151X	MG R	150Ω 1/16W J
	R1346	NRSA63J-151X	MG R	150Ω 1/16W J
	R1353	NRSA63J-151X	MG R	150Ω 1/16W J
	R1354	NRSA63J-331X	MG R	330Ω 1/16W J
	R1355	NRSA63J-331X	MG R	330Ω 1/16W J
	R1356	NRSA63J-331X	MG R	330Ω 1/16W J
	R1357	NRSA63J-101X	MG R	100Ω 1/16W J
	R1358	NRSA63J-101X	MG R	100Ω 1/16W J
	R1359	NRSA63J-101X	MG R	100Ω 1/16W J
	R1360	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1361	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1362	QRZ0107-152Z	C R	1.5kΩ 1/2W K
	R1363	QRL029J-123	OM R	12kΩ 2W J
	R1364	QRL029J-123	OM R	12kΩ 2W J
	R1365	QRL029J-123	OM R	12kΩ 2W J
	R1366	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1367	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1368	NRSA63J-182X	MG R	1.8kΩ 1/16W J
	R1372	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1374	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1401	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1421	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1423	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1424	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1425	NRSA63J-332X	MG R	3.3kΩ 1/16W J
	R1426	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1429	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1430	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1431	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1432	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1433	QRE121J-3R9Y	C R	3.9Ω 1/2W J
	R1436	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1440	QRE121J-471Y	C R	470Ω 1/2W J
	R1441	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1442	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1443	QRE121J-1R0Y	C R	1.0Ω 1/2W J
	R1453	NRSA63J-272X	MG R	2.7kΩ 1/16W J
	R1502	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1503	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1525	QRL029J-180	OM R	18Ω 2W J
	R1526	QRE121J-271Y	C R	270Ω 1/2W J
	R1529	QRL039J-681	OM R	680Ω 3W J

⚠	Symbol No.	Part No.	Part Name	Description
	RESISTOR			
	R1531	NRSA63J-331X	MG R	330Ω 1/16W J
	R1532	NRSA63J-102X	MG R	1kΩ 1/16W J
⚠	R1551	QRZ9011-1R0	F R	1.0Ω 1/2W J
	R1552	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	R1554	QRE121J-681Y	C R	680Ω 1/2W J
	R1571	QRE121J-222Y	C R	2.2kΩ 1/2W J
	R1573	QRT029J-2R2	MF R	2.2Ω 2W J
	R1574	QRT029J-1R5	MF R	1.5Ω 2W J
	R1576	QRE121J-223Y	C R	22kΩ 1/2W J
	R1577	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1578	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1581	QRE121J-182Y	C R	1.8kΩ 1/2W J
	R1582	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1583	NRSA63J-393X	MG R	39kΩ 1/16W J
	R1651	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1652	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1653	NRSA63J-331X	MG R	330Ω 1/16W J
	R1654	NRSA63J-223X	MG R	22kΩ 1/16W J
	R1655	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1656	NRSA63J-822X	MG R	8.2kΩ 1/16W J
	R1657	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1658	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1659	QRE121J-4R7Y	C R	4.7Ω 1/2W J
	R1660	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1661	QRE121J-271Y	C R	270Ω 1/2W J
	R1662	QRE121J-271Y	C R	270Ω 1/2W J
	R1664	NRSA63J-682X	MG R	6.8kΩ 1/16W J
	R1665	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1666	NRSA63J-101X	MG R	100Ω 1/16W J
	R1667	QRE121J-101Y	C R	100Ω 1/2W J
⚠	R1668	QRT029J-5R6	MF R	5.6Ω 2W J
	R1704	NRSA63J-221X	MG R	220Ω 1/16W J
	R1705	NRSA63J-221X	MG R	220Ω 1/16W J
	R1706	NRSA63J-561X	MG R	560Ω 1/16W J
	R1707	NRSA63J-561X	MG R	560Ω 1/16W J
	R1708	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1709	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1710	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1711	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1712	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1713	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1714	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1715	NRSA63J-221X	MG R	220Ω 1/16W J
	R1716	NRSA63J-221X	MG R	220Ω 1/16W J
	R1718	NRSA63J-561X	MG R	560Ω 1/16W J
	R1719	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1720	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1721	NRSA63J-103X	MG R	10kΩ 1/16W J
⚠	R1723	QRL039J-270	OM R	27Ω 3W J
	R1725	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1726	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1727	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1728	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1729	NRSA63J-102X	MG R	1kΩ 1/16W J
	R1730	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1731	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1736	NRSA63J-823X	MG R	82kΩ 1/16W J
	R1737	NRSA63J-104X	MG R	100kΩ 1/16W J
	R1738	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1739	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1740	NRSA63J-392X	MG R	3.9kΩ 1/16W J
	R1741	NRSA63J-561X	MG R	560Ω 1/16W J
	R1742	NRSA63J-563X	MG R	56kΩ 1/16W J
	R1746	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1747	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	R1748	NRSA63J-101X	MG R	100Ω 1/16W J
	R1749	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1772	NRSA63J-391X	MG R	390Ω 1/16W J
	R1773	NRSA63J-561X	MG R	560Ω 1/16W J
	R1791	NRSA63J-221X	MG R	220Ω 1/16W J
	R1792	NRSA63J-221X	MG R	220Ω 1/16W J
	R1793	NRSA63J-221X	MG R	220Ω 1/16W J
	R1794	NRSA63J-221X	MG R	220Ω 1/16W J

[AV-1415EE]

RESISTOR

⚠	Symbol No.	Part No.	Part Name	Description
	R1795	NRSA63J-221X	MG R	220Ω 1/16W J
	R1796	NRSA63J-103X	MG R	10kΩ 1/16W J
	R1797	NRSA63J-153X	MG R	15kΩ 1/16W J
	R1802	NRSA63J-750X	MG R	75Ω 1/16W J
	R1806	QRE121J-271Y	C R	270Ω 1/2W J
	R1807	NRSA63J-680X	MG R	68Ω 1/16W J
	R1810	QRG01GJ-560	OM R	56Ω 1W J
	R1811	NRSA63J-221X	MG R	220Ω 1/16W J
	R1815	QRE121J-181Y	C R	180Ω 1/2W J
	R1816	NRSA63J-681X	MG R	680Ω 1/16W J
	R1817	NRSA63J-472X	MG R	4.7kΩ 1/16W J
	R1901	QRF074K-4R7	UNF R	4.7Ω 7W K
	R1903	QRL029J-104	OM R	100kΩ 2W J
	R1904	QRL039J-151	OM R	150Ω 3W J
	R1906	QRL029J-104	OM R	100kΩ 2W J
	R1921	QRE121J-2R2Y	C R	2.2Ω 1/2W J
	R1922	QRE121J-221Y	C R	220Ω 1/2W J
	R1923	QRM034J-R22	MP R	0.22Ω 3W J
	R1928	QRL039J-683	OM R	68kΩ 3W J
	R1933	QRE121J-4R7Y	C R	4.7Ω 1/2W J
	R1934	NRSA63J-683X	MG R	68kΩ 1/16W J
	R1935	QRE121J-392Y	C R	3.9kΩ 1/2W J
	R1974	NRSA63J-222X	MG R	2.2kΩ 1/16W J
	R1976	QRT029J-8R2	MF R	8.2Ω 2W J
	R1977	QRE121J-122Y	C R	1.2kΩ 1/2W J
	R1978	NRSA63J-473X	MG R	47kΩ 1/16W J
	R1979	QRL039J-220	OM R	22Ω 3W J
	R1980	QRL029J-152	OM R	1.5kΩ 2W J
⚠	R1991	QRZ9046-825Z	C R	8.2MΩ 1/2W K

CAPACITOR

	C1001	QETN1HM-106Z	E CAP.	10μF 50V M
	C1002	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1004	QETN1CM-477Z	E CAP.	470μF 16V M
	C1005	QFV71HJ-104Z	MF CAP.	0.1μF 50V J
	C1008	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1103	QETN1EM-476Z	E CAP.	47μF 25V M
	C1104	NCB31HK-472X	C CAP.	4700pF 50V K
	C1105	NCB31HK-472X	C CAP.	4700pF 50V K
	C1106	NCB31HK-472X	C CAP.	4700pF 50V K
	C1107	NCB31HK-472X	C CAP.	4700pF 50V K
	C1110	NRSA63J-0R0X	MG R	0.0Ω 1/16W J
	C1112	QETN1EM-476Z	E CAP.	47μF 25V M
	C1113	NCB31HK-472X	C CAP.	4700pF 50V K
	C1115	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1116	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1117	QFV71HJ-224Z	MF CAP.	0.22μF 50V J
	C1119	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1120	NDC31HJ-121X	C CAP.	120pF 50V J
	C1121	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1122	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1162	NCB31HK-152X	C CAP.	1500pF 50V K
	C1301	NCB31HK-123X	C CAP.	0.012μF 50V K
	C1302	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1303	NDC31HJ-100X	C CAP.	10pF 50V J
	C1304	QFV71HJ-474Z	MF CAP.	0.47μF 50V J
	C1305	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1306	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1307	QETN1CM-477Z	E CAP.	470μF 16V M
	C1308	QETN1CM-107Z	E CAP.	100μF 16V M
	C1309	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1310	NDC31HJ-221X	C CAP.	220pF 50V J
	C1311	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1312	QENC1HM-474Z	E CAP.	0.47μF 50V M
	C1313	QETN1HM-335Z	E CAP.	3.3μF 50V M
	C1314	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1315	QETN1CM-107Z	E CAP.	100μF 16V M
	C1316	QETN1HM-106Z	E CAP.	10μF 50V M
	C1317	NCB31EK-473X	C CAP.	0.047μF 25V K
	C1321	NDC31HJ-120X	C CAP.	12pF 50V J
	C1322	NCB31EK-273X	C CAP.	0.027μF 25V K
	C1323	QETN1HM-474Z	E CAP.	0.47μF 50V M
	C1324	QETN1HM-106Z	E CAP.	10μF 50V M
	C1325	QENC1HM-106Z	BP E CAP.	10μF 50V M
	C1326	NCS21HJ-221X	C CAP.	220pF 50V J
	C1341	QETN1HM-106Z	E CAP.	10μF 50V M
	C1352	QFZ0097-103	MM CAP.	0.01μF 125OV K

CAPACITOR

⚠	Symbol No.	Part No.	Part Name	Description
	C1354	NDC31HJ-271X	C CAP.	270pF 50V J
	C1355	NDC31HJ-221X	C CAP.	220pF 50V J
	C1356	NDC31HJ-331X	C CAP.	330pF 50V J
	C1357	QETN1AM-477Z	E CAP.	470μF 10V M
	C1365	QENC1HM-105Z	E CAP.	1μF 50V M
	C1366	QENC1HM-105Z	E CAP.	1μF 50V M
	C1367	QENC1HM-105Z	E CAP.	1μF 50V M
	C1401	QFV71HJ-474Z	MF CAP.	0.47μF 50V J
	C1423	QCS32HJ-180Z	C CAP.	18pF 500V J
	C1424	QFLC2AJ-103Z	M CAP.	0.01μF 100V J
	C1426	QFLC1HJ-102Z	M CAP.	1000pF 50V J
	C1427	QETN1VM-107Z	E CAP.	100μF 35V M
	C1428	QETN1VM-107Z	E CAP.	100μF 35V M
	C1429	QETN1HM-106Z	E CAP.	10μF 50V M
	C1430	QFLC2AJ-472Z	M CAP.	4700pF 100V J
	C1433	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1435	QETM1EM-228	E CAP.	2200μF 25V M
	C1436	QFV71HJ-334Z	MF CAP.	0.33μF 50V J
	C1437	NCB31HK-104X	C CAP.	0.1μF 50V K
	C1501	QETN1AM-477Z	E CAP.	470μF 10V M
	C1502	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1503	QETN1HM-106Z	E CAP.	10μF 50V M
	C1523	QETN1EM-476Z	E CAP.	47μF 25V M
⚠	C1525	QFZ0200-682	MPP CAP	9800pF1.5kVH±3%
	C1526	QFLC1HJ-103Z	M CAP.	0.01μF 50V J
⚠	C1527	QFZ0199-474	MPP CAP.	0.47μF 250V J
	C1529	QFLC2AJ-102Z	M CAP.	1000pF 100V J
	C1531	QEZ0203-107	E CAP.	100μF 160V M
	C1552	QETM1VM-108	E CAP.	1000μF 35V M
	C1554	QETN2EM-475Z	E CAP.	4.7μF 250V M
	C1555	QFLC2AJ-104Z	M CAP.	0.1μF 100V J
	C1557	QETN1HM-107Z	E CAP.	100μF 50V M
	C1571	QETN1AM-107Z	E CAP.	100μF 10V M
	C1572	QETN1EM-476Z	E CAP.	47μF 25V M
	C1581	QFV71HJ-104Z	MF CAP.	0.1μF 50V J
	C1652	NCB31HK-473X	C CAP.	0.047μF 50V K
	C1653	QETN1HM-106Z	E CAP.	10μF 50V M
	C1654	QETN1CM-477Z	E CAP.	470μF 16V M
	C1655	QETN1HM-106Z	E CAP.	10μF 50V M
	C1656	QENC1HM-105Z	E CAP.	1μF 50V M
	C1657	QETN1EM-107Z	E CAP.	100μF 25V M
	C1658	QETN1EM-227Z	E CAP.	220μF 25V M
	C1659	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1663	NCB31HK-102X	C CAP.	1000pF 50V K
	C1664	QETN1CM-107Z	E CAP.	100μF 16V M
	C1665	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1701	QETN1HM-106Z	E CAP.	10μF 50V M
	C1705	QETN1CM-477Z	E CAP.	470μF 16V M
	C1706	NCB31HK-104X	C CAP.	0.1μF 50V K
	C1707	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1708	QETN1AM-108Z	E CAP.	1000μF 10V M
	C1709	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1710	QETN1CM-107Z	E CAP.	100μF 16V M
	C1711	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1712	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1713	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1716	NDC31HJ-181X	C CAP.	180pF 50V J
	C1717	NDC31HJ-181X	C CAP.	180pF 50V J
	C1718	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1719	QETN1HM-105Z	E CAP.	1μF 50V M
	C1720	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1721	NCB31EK-333X	C CAP.	0.033μF 25V K
	C1722	NDC31HJ-101X	C CAP.	100pF 50V J
	C1723	NDC31HJ-560X	C CAP.	56pF 50V J
	C1724	NDC31HJ-560X	C CAP.	56pF 50V J
	C1728	NDC31HJ-181X	C CAP.	180pF 50V J
	C1729	NDC31HJ-181X	C CAP.	180pF 50V J
	C1730	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1744	NCB31HK-103X	C CAP.	0.01μF 50V K
	C1805	QETN1CM-227Z	E CAP.	220μF 16V M
	C1806	QETN1CM-477Z	E CAP.	470μF 16V M
	C1811	QETN1HM-106Z	E CAP.	10μF 50V M
	C1841	NCB31HK-152X	C CAP.	1500pF 50V K
⚠	C1901	QFZ9078-224	MPF CAP.	0.22μFAC275V M
⚠	C1904	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1905	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1907	QCZ9015-102	C CAP.	1000pFAC250V Z
⚠	C1909	QEZ0552-127	E CAP. or QEZ0199-127	120μF 400V M

[AV-1415EE]

⚠	Symbol No.	Part No.	Part Name	Description
	CAPACITOR			
⚠	C1910	QFZ9078-473	MPF CAP.	0.047μF AC275V M
	C1922	QFLC1HJ-104Z	M CAP.	0.1μF 50V J
	C1924	QETN1HM-475Z	E CAP.	4.7μF 50V M
	C1925	QETN1VM-476Z	E CAP.	47μF 35V M
	C1926	QFLC1HJ-332Z	M CAP.	3300pF 50V J
⚠	C1929	QFKA2JK-103	MM CAP.	0.01μF 630V K
⚠	C1931	QCZ0364-681	C CAP.	680pF 2kV K
	C1932	NDC31HJ-221X	C CAP.	220pF 50V J
	C1941	QCZ0364-561	C CAP.	560pF 2kV K
	C1942	QEZ0203-107	E CAP.	100μF 160V M
	C1944	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1945	QEHR1EM-108Z	E CAP.	1000μF 25V M
	C1946	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1947	QCB32HK-222Z	C CAP.	2200pF 500V K
	C1948	QETN1EM-108Z	E CAP.	1000μF 25V M
	C1949	NDC31HJ-471X	C CAP.	470pF 50V J
	C1976	QETN1EM-227Z	E CAP.	220μF 25V M
	C1977	QETN1CM-227Z	E CAP.	220μF 16V M
	C1978	QETN1EM-227Z	E CAP.	220μF 25V M
	C1979	QETN1AM-227Z	E CAP.	220μF 10V M
⚠	C1991	QCZ9079-102	C CAP.	1000pF AC250V M
⚠	C1992	QCZ9079-102	C CAP.	1000pF AC250V M
⚠	C1993	QCZ9079-152	C CAP.	1500pF AC250V M
	TRANSFORMER			
	T1501	CE42Q03-00CJ1	DRIVE TRANSF.	
⚠	T1522	QQH0132-001	F.B.TRANSF.	
⚠	T1921	QQS0161-001	SW TRANSF.	
	COIL			
	L1001	QQL244K-8R2Z	COIL	8.2μH K
	L1101	QQL244J-2R2Z	COIL	2.2μH J
	L1103	QQL244K-8R2Z	COIL	8.2μH K
	L1551	QQLZ026-320	INDUCTOR	
	L1701	QQL244J-5R6Z	COIL	5.6μH J
	L1941	QQL26AK-820Z	COIL	82μH K
	L1942	QQL244J-4R7Z	INDUCTOR	
	L1943	QQL244J-4R7Z	INDUCTOR	
	DIODE			
	D1001	MTZJ33A-T2	ZENER DIODE	
	D1301	MTZJ9.1B-T2	ZENER DIODE	
	D1302	MTZJ9.1B-T2	ZENER DIODE	
	D1305	AK04-T2	SB DIODE	
	D1306	QRE121J-121Y	C R	120Ω 1/2W J
	D1341	MA111-X	SI.DIODE	
	D1421	MTZJ75-T2	ZENER DIODE	
	D1423	1SR124-400A-T2	SI.DIODE	
	D1425	MA111-X	SI.DIODE	
	D1427	MTZJ27B-T2	ZENER DIODE	
	D1501	MTZJ6.8C-T2	ZENER DIODE	
	D1551	RGP10J-5025-T3	SI.DIODE	
	D1552	RGP10J-5025-T3	SI.DIODE	
	D1553	MTZJ9.1B-T2	ZENER DIODE	
	D1554	MA111-X	SI.DIODE	
	D1557	1SR124-400A-T2	SI.DIODE	
	D1571	MTZJ7.5S-T2	ZENER DIODE	
	D1581	MTZJ20B-T2	ZENER DIODE	
	D1582	RGP10J-5025-T3	SI.DIODE	
	D1651	MA111-X	SI.DIODE	
	D1652	MTZJ12C-T2	ZENER DIODE	
	D1653	MA111-X	SI.DIODE	
	D1654	MTZJ12C-T2	ZENER DIODE	
	D1655	MA111-X	SI.DIODE	
	D1656	MA111-X	SI.DIODE	
	D1657	MA111-X	SI.DIODE	
	D1703	SPR-39MVWF	LED	
	D1707	MA111-X	SI.DIODE	
	D1731	MA111-X	SI.DIODE	
⚠	D1901	G2SBA60	BRIDGE DIODE	
	D1921	RGP10J-5025-T3	SI.DIODE	
	D1925	RGP10J-5025-T3	SI.DIODE	
	D1927	MTZJ36A-T2	ZENER DIODE	
	D1928	MTZJ3.3A-T2	ZENER DIODE	
	D1929	MTZJ5.6A-T2	ZENER DIODE	
	D1930	RGP10M-5010-T3	SI.DIODE	

⚠	Symbol No.	Part No.	Part Name	Description
	DIODE			
	D1931	MA111-X	SI.DIODE	
	D1933	MTZJ16C-T2	ZENER DIODE	
	D1941	RU3AM-LFC4	SI.DIODE	
	D1942	RU3YX-LFC4	SI.DIODE	
	D1943	RGP10J-5025-T3	SI.DIODE	
	D1982	MA111-X	SI.DIODE	
	D1983	MA111-X	SI.DIODE	
	TRANSISTOR			
	Q1102	2SC5083/L-P/-T	SI.TRANSISTOR	
	Q1301	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1302	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1351	STC344-T	SI.TRANSISTOR	
	Q1352	STC344-T	SI.TRANSISTOR	
	Q1353	STC344-T	SI.TRANSISTOR	
	Q1401	DTC124ESA-T	DIGI.TRANSISTOR	
	Q1402	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1521	2SC2655/Y/-T	SI.TRANSISTOR	
⚠	Q1522	2SD2658LS-YB11	POWER TRANSISTOR	H.OUT
	Q1571	2SA1208/ST/Z1-T	SI.TRANSISTOR	
	Q1572	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1651	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1652	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1653	2SB709A/QR/-X	SI.TRANSISTOR	
	Q1702	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1703	UN2212-X	DIGI.TRANSISTOR	
	Q1708	UN2212-X	DIGI.TRANSISTOR	
	Q1710	UN2212-X	DIGI.TRANSISTOR	
	Q1803	2SC1815/YG/-T	SI.TRANSISTOR	
	Q1804	2SD601A/QR/-X	SI.TRANSISTOR	
	Q1974	2SA966/OY/-T	SI.TRANSISTOR	
	Q1975	UN2212-X	DIGI.TRANSISTOR	
	IC			
	IC1301	NN5198K	I C	
	IC1421	AN5522	I C	
	IC1651	AN5265	I C	
⚠	IC1701	MN1873287JK1	I C(MCU)	
	IC1702	AT24C08-21DMG3	I C	(SERVICE)
	IC1703	L78LR05E-MA	I C	
	IC1704	PIC-47143SY	IR DETECT UNIT	
⚠	IC1921	STR-W5753A/F5	I C	
	IC1971	BA17809T	I C	
	IC1972	BA17805T	I C	
	OTHERS			
		LC30349-001A-H	LED HOLDER	
⚠	CP1981	ICP-N25-Y	I.C.PROTECT	
⚠	CP1982	ICP-N75-Y	I.C.PROTECT	
⚠	F1901	QMF51E2-3R15J4	FUSE	3.15A
	FC1901	CEMG002-001Z	FUSE CLIP	
	FR1557	QRJ146J-2R2X	C R	2.2Ω 1/4W J
	J1002	QNN0384-001	PIN JACK	
	J1003	QNN0281-003	PIN JACK	or CEMN065-001
	J1004	QNN0281-002	PIN JACK	or CEMN065-002
⚠	J1005	QNS0197-001	3.5 JACK	
	K1351	QQR0621-002Z	FERRITE BEADS	
	K1421	QQR1113-001Z	FERRITE BEADS	
	K1901	QQR1113-001Z	FERRITE BEADS	
	K1902	QQR1113-001Z	FERRITE BEADS	
	K1941	QQR1113-001Z	FERRITE BEADS	
	K1942	QQR1113-001Z	FERRITE BEADS	
	K1943	QQR1113-001Z	FERRITE BEADS	
⚠	LF1901	QQR0673-002	LINE FILTER	
	S1701	QSW0619-003Z	TACT SWITCH	VOL+
	S1702	QSW0619-003Z	TACT SWITCH	VOL-
	S1703	QSW0619-003Z	TACT SWITCH	CH+
	S1704	QSW0619-003Z	TACT SWITCH	CH-
	S1705	QSW0619-003Z	TACT SWITCH	MENU
⚠	S1901	QSW0750-001	PUSH SWITCH	POWER SW
	SF1102	QAX0666-002	SAW FILTER	
	SF1122	QAX0325-001	SAW FILTER	
⚠	SK1351	CE42554-001	C R T SOCKET	or QNZ0536-001
⚠	TH1901	QAD0121-9R0	THERMISTOR	or QAD0119-9R0
⚠	TU1001	QAU0246-002	TUNER	
⚠	VA1901	ERZV10V621CS	VARISTOR	or QAF0052-621
⚠	X1301	QAX0705-001Z	CRYSTAL	
	X1302	CE41651-001Z	X-TAL	
	X1701	QAX0307-001	C RESONATOR	

AV-14A3
AV-1415EE
AV-14AMG3

PACKING PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description
	1	GG10056-069A-H	PACKING CASE	
	2	GG20025-001A-H	CORNER LABEL	2pcs in 1set
	3	LC10166-002A-H	CUSHION ASSY	4pcs in 1set
	4	CP30967-002-H	POLY BAG	
	5	RM-C360GY-1H	REMOCON	
	6	CP30966-001-H	POLY BAG	
	7	R6PY-2S	BATTERY	(X2)
⚠	8	LCT1188-001A-H	INST BOOK	AV-14A3
⚠	8	LCT1188-001A-H	INST BOOK	AV-14A3/AU
⚠	8	LCT1208-001A-H	INST BOOK	AV-14A3/HK
⚠	8	LCT1195-001A-H	INST BOOK	AV-1415EE
⚠	8	LCT1196-001A-H	INST BOOK	AV-14AMG3
⚠	8	LCT1196-001A-H	INST BOOK	AV-14AMG3/-A
⚠	9	LCT1189-001A-H	DIGEST MANUAL	AV-14A3
⚠	9	LCT1197-001A-H	DIGEST MANUAL	AV-14AMG3
⚠	9	LCT1197-001A-H	DIGEST MANUAL	AV-14AMG3/-A
	10	CM36447-00A-H	ROD ANTENNA	
	11	BT-56001-2	WARRANTY CARD	AV-14A3/AU
	11	BT-54012-2	WARRANTY CARD	AV-1415EE
	12	BT-56002-2	SER.NET CARD	AV-14A3/AU
	13	GG40016-002A-H	STICKER	AV-14A3/AU
	14	QAM0055-001	CONVERSION PLUG	AV-14AMG3/-A

PACKING

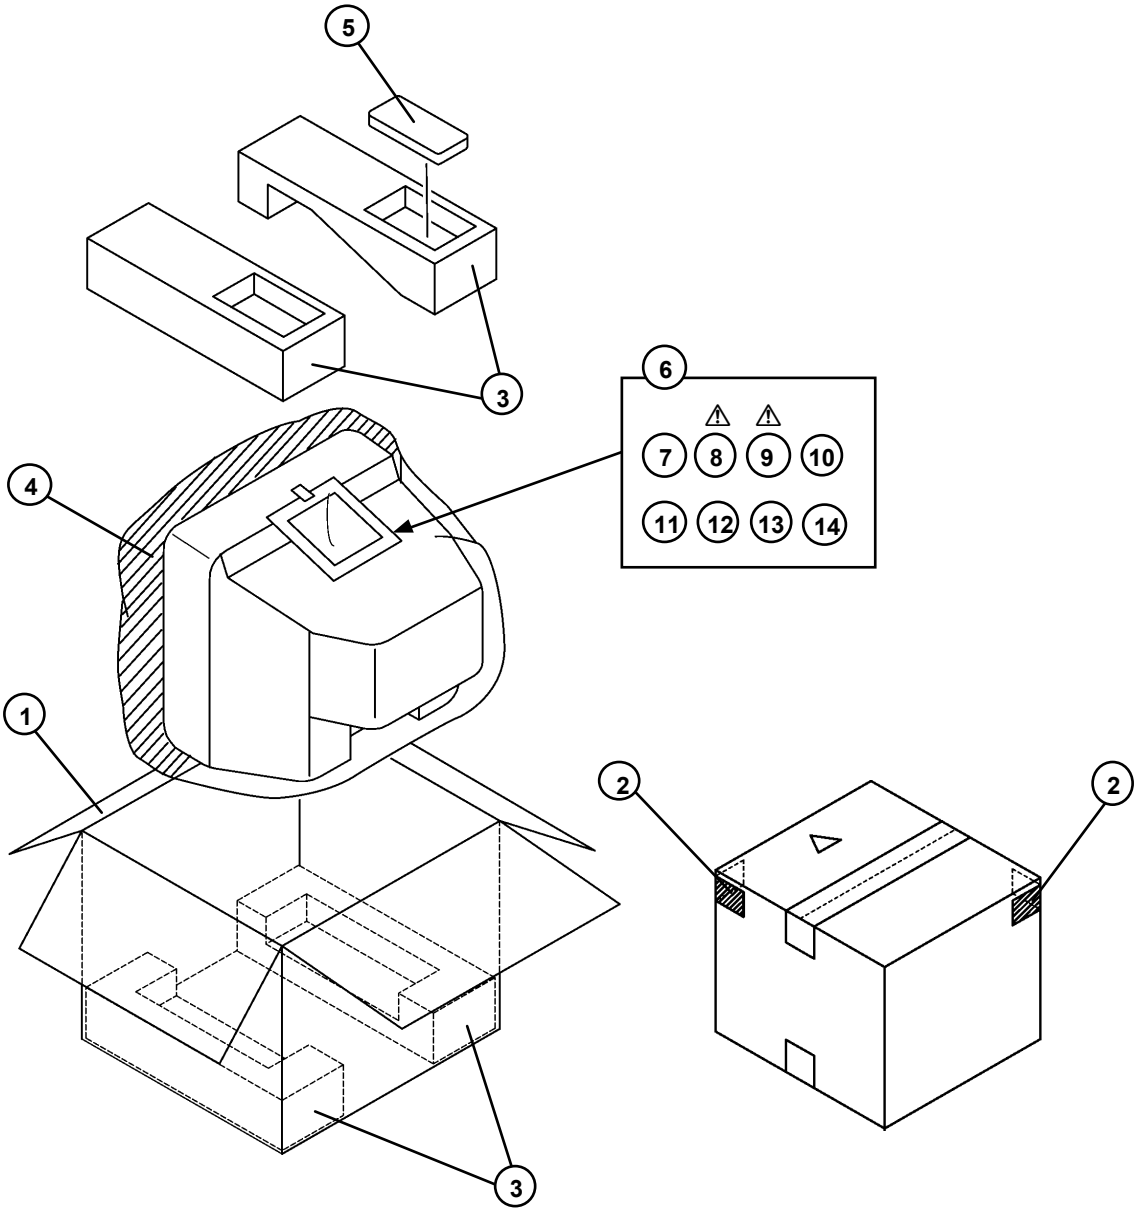

AV-14A3
AV-1415EE
AV-14AMG3

PACKING PARTS LIST

⚠	Ref.No.	Part No.	Part Name	Description
	1	GG10056-069A-H	PACKING CASE	
	2	GG20025-001A-H	CORNER LABEL	2pcs in 1set
	3	LC10166-002A-H	CUSHION ASSY	4pcs in 1set
	4	CP30967-002-H	POLY BAG	
	5	RM-C360GY-1H	REMOCON	
	6	CP30966-001-H	POLY BAG	
⚠	7	LCT1188-001A-H	INST BOOK	AV-14A3
⚠	7	LCT1188-001A-H	INST BOOK	AV-14A3/AU
⚠	7	LCT1208-001A-H	INST BOOK	AV-14A3/HK
⚠	7	LCT1195-001A-H	INST BOOK	AV-1415EE
⚠	7	LCT1196-001A-H	INST BOOK	AV-14AMG3
⚠	7	LCT1196-001A-H	INST BOOK	AV-14AMG3/-A
⚠	8	LCT1189-001A-H	DIGEST MANUAL	AV-14A3
⚠	8	LCT1197-001A-H	DIGEST MANUAL	AV-14AMG3
⚠	8	LCT1197-001A-H	DIGEST MANUAL	AV-14AMG3/-A
	9	CM36447-00A-H	ROD ANTENNA	
	10	BT-56001-2	WARRANTY CARD	AV-14A3/AU
	10	BT-54012-2	WARRANTY CARD	AV-1415EE
	11	BT-56002-2	SER.NET CARD	AV-14A3/AU
	12	GG40016-002A-H	STICKER	AV-14A3/AU
	13	QAM0055-001	CONVERSION PLUG	AV-14AMG3/-A

PACKING

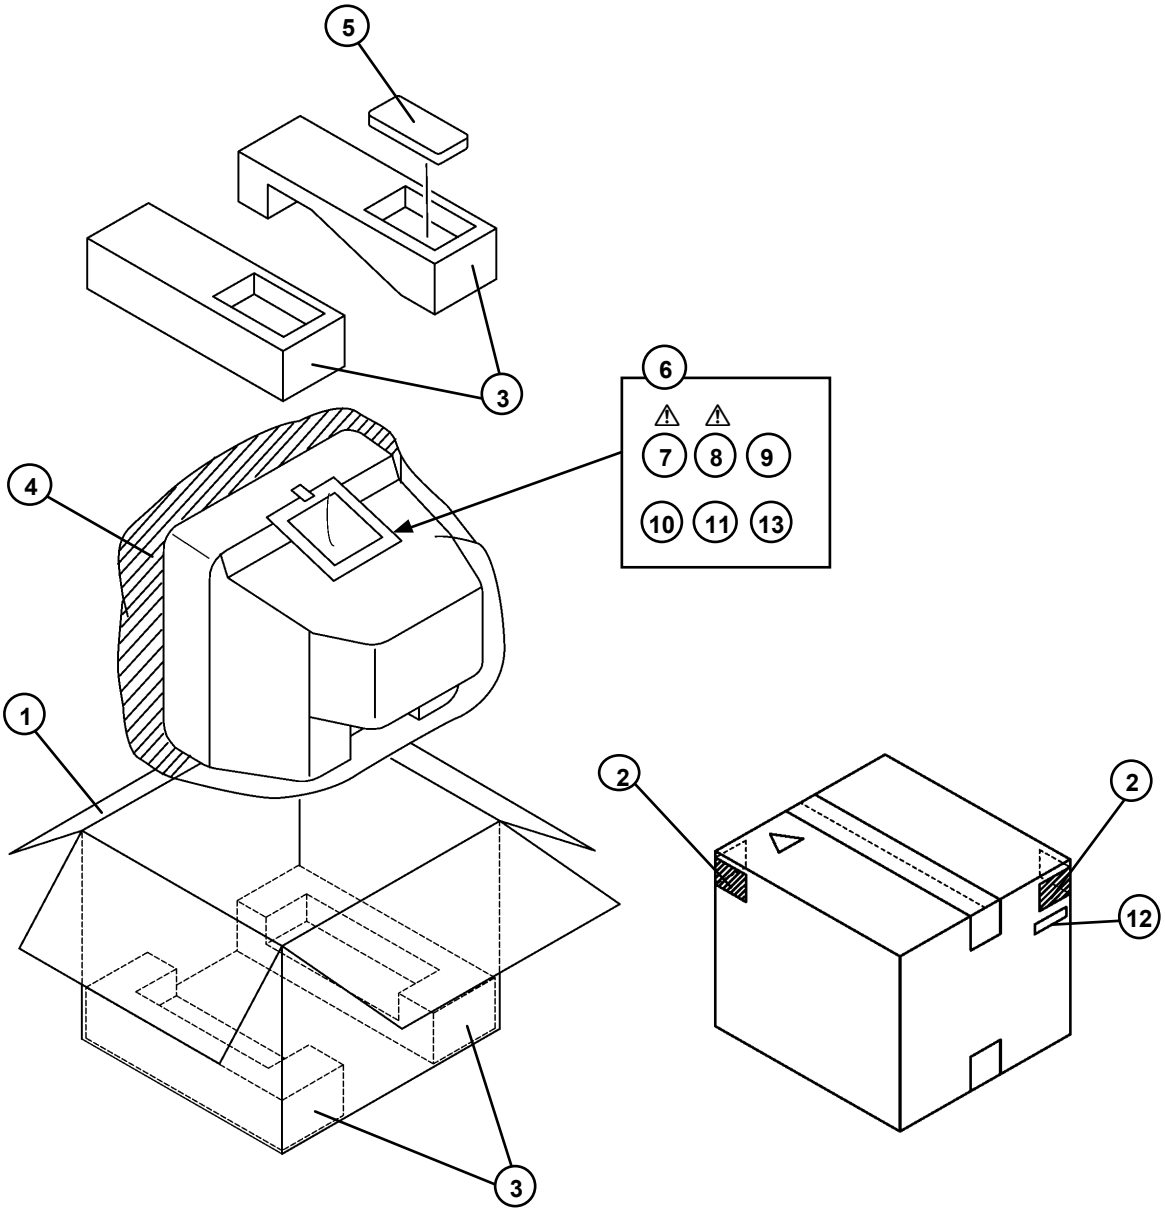

JVC

VICTOR COMPANY OF JAPAN, LIMITED
HOME AV NETWORK BUSINESS UNIT. 12, 3-chome, Moriya-cho, Kanagawa-ku, Yokohama, Kanagawa-prefecture, 221-8528, Japan

VP 0207
DP8080